



# - Installation Manual -

380 311 A32

[Stabilizer / Anti-Sway Bar](#)

|                        |                            |    |
|------------------------|----------------------------|----|
| <b>[ Part Number ]</b> | 380 311 A32                |    |
| <b>[ Application ]</b> | Honda S2000 AP1            |    |
| <b>[ Product ]</b>     | Stabilizer / Anti-Sway Bar |    |
| <b>[ Description ]</b> | Front 32mm Sway Bar        |    |
| <b>[ Contents ]</b>    | Sway Bar                   | x1 |
|                        | Bushing                    | x2 |
|                        | Installation Manual        | x1 |


**NOTE**

Always use a proper vehicle lift when installing Cusco Sway Bars. Always follow OSHA safety standards when working on or under a vehicle.


This installation manual serves as a general guideline for Cusco product install. Please refer to the factory service manual for the proper procedure for installation.

## Front Sway Bar Installation

- 1.) Remove front undercover tray.
- 2.) Remove nut that holds the sway bar endlink to sway bar.  
Save these bolts for reuse. (left and right)

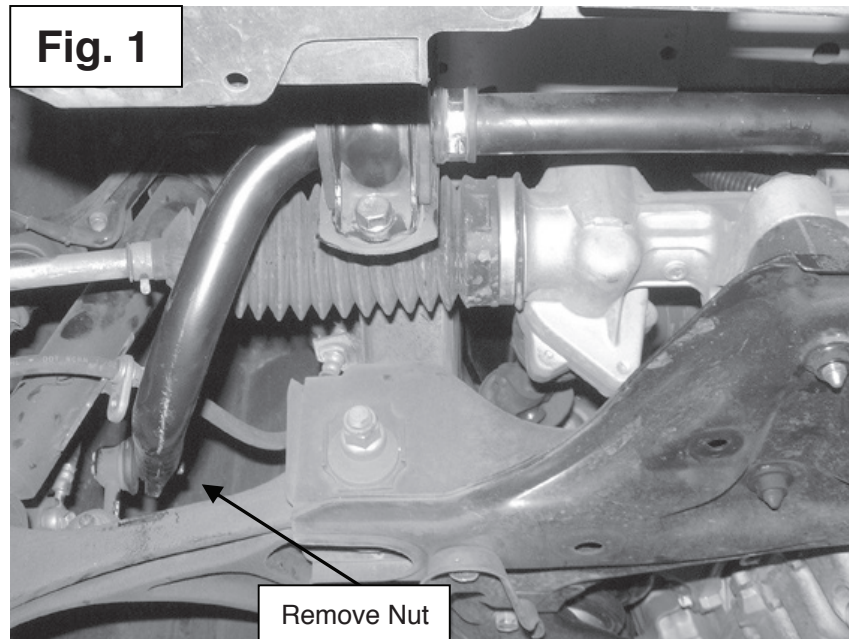

- 3.) Remove the 4 bolts holding 2 sway bar brackets. This should free the sway bar, bushings, and sway bar.

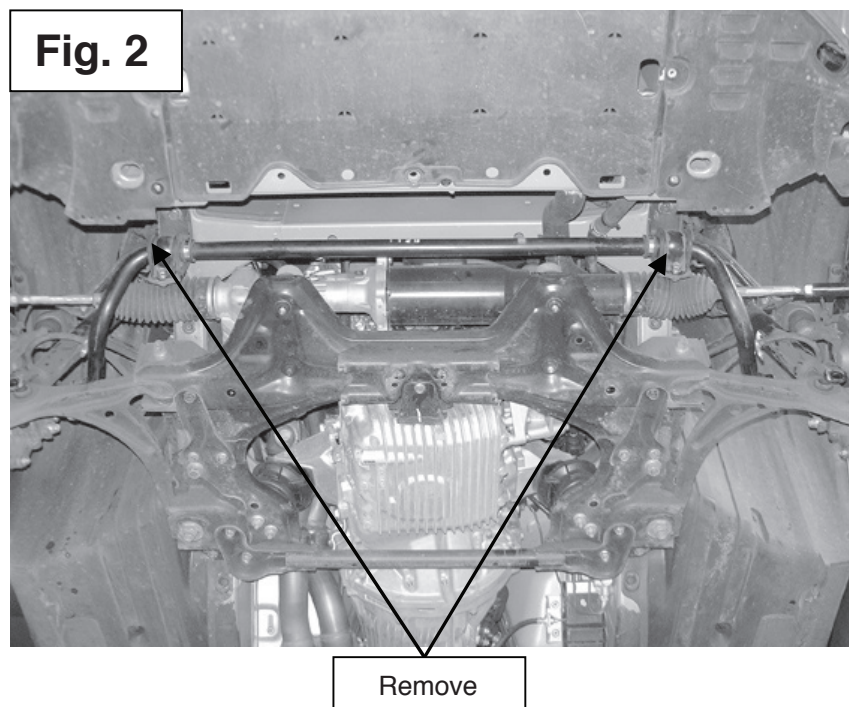

- 4.) Install the sway bar in the reverse order that it was taken off or refer to the factory service manual for step by step instructions as well as the correct torque specs.

\*Periodically inspect and retorque all nuts and bolts after vehicle operation.