



- Installation Manual -

667 311 A22

[Stabilizer / Anti-Sway Bar](#)

[Part Number]	667 311 A22
[Application]	Subaru Impreza GDA Subaru Impreza STi GDB Subaru Impreza Spec C GDB Subaru Impreza Wagon GGA
[Product]	Stabilizer / Anti-Sway Bar
[Description]	Front 22mm Sway Bar
[Contents]	Sway Bar x1 Bushing x2 Installation Manual x1

NOTE



Always use a proper vehicle lift when installing Cusco Sway Bars. Always follow OSHA safety standards when working on or under a vehicle.

This installation manual serves as a general guideline for Cusco product install. Please refer to the factory service manual for the proper procedure for installation.




[Procedure]

- 1.) Remove jack up lift plate. (Also remove support arm for Spec C models)
- 2.) Remove subframe. (None present on Spec C models)
- 3.) Remove sway bar end links.
- 4.) Remove sway bar mounts.
- 5.) Remove sway bar unit.
- 6.) Installation is performed in reverse order of removal. Do not re-use the factory bushings, please use the included Cusco bushings.

*Please refer to the manufacturer factory service manual for torque specifications.

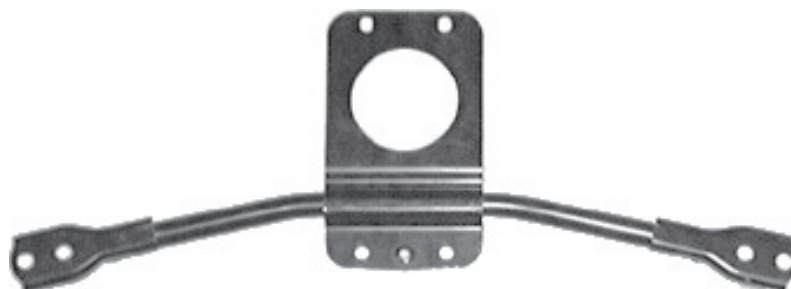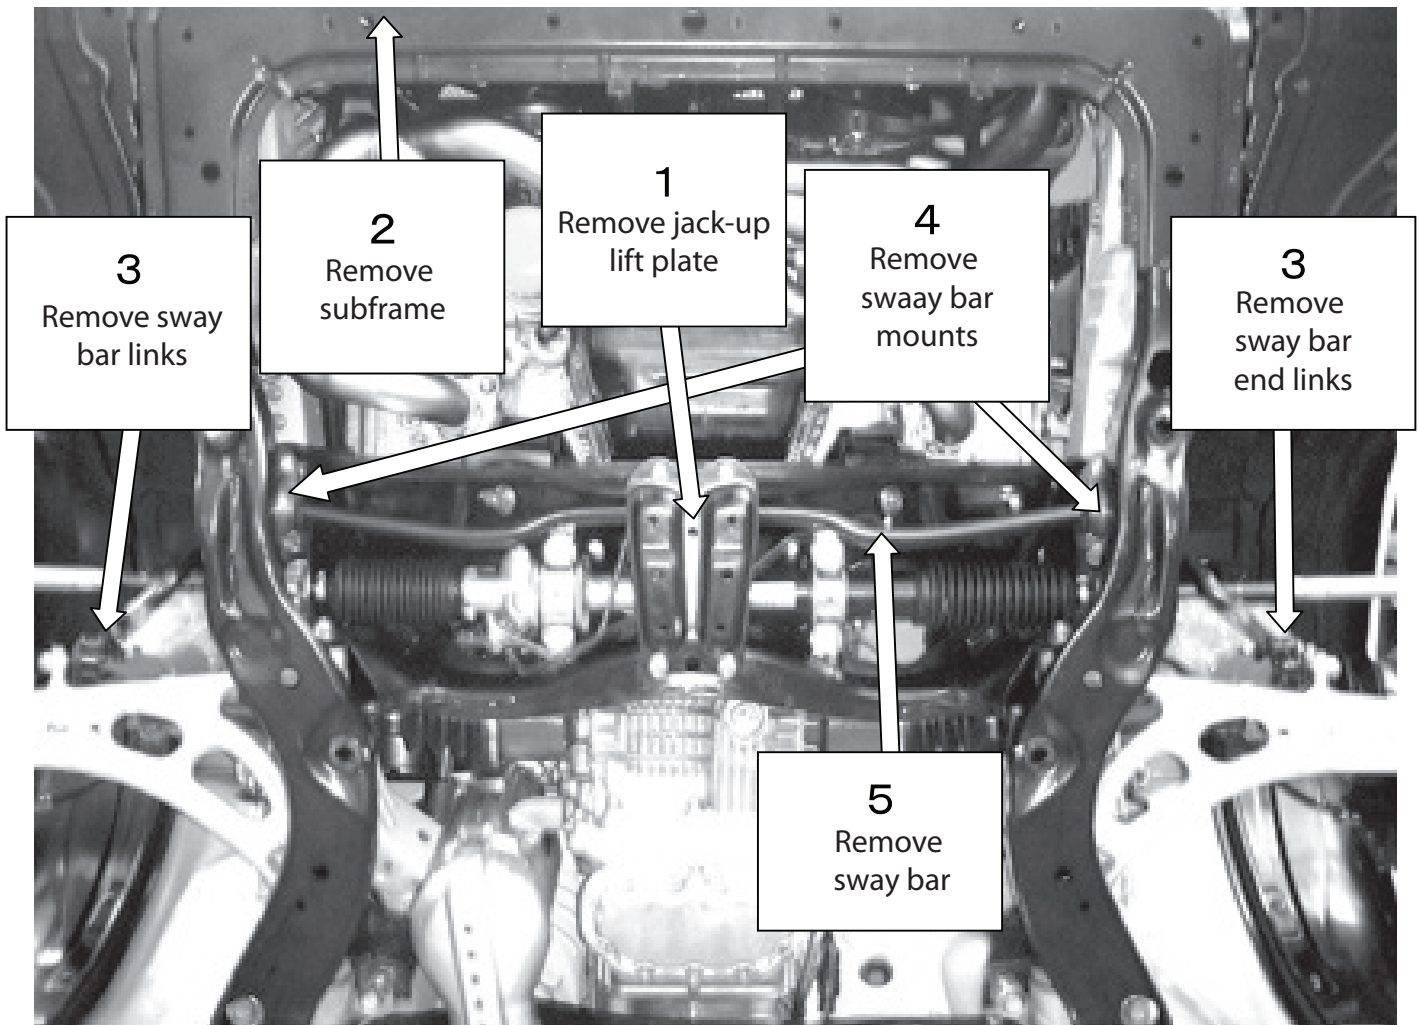

Support Arm

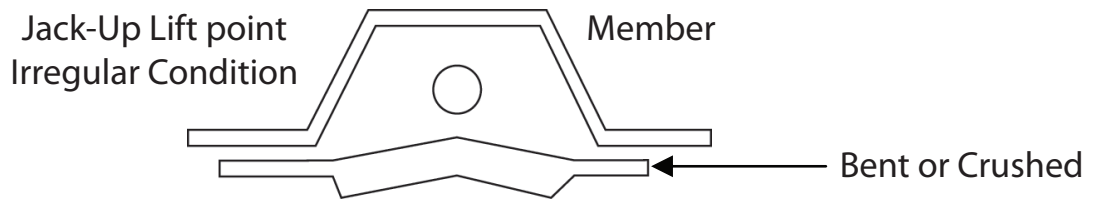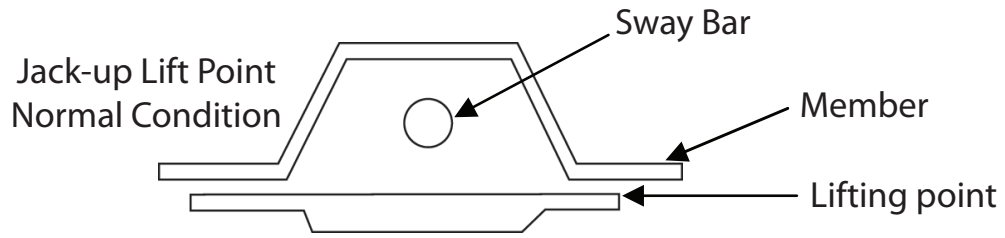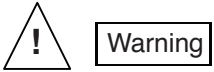

When the lifting point is bent in or crushed like pictured above, there is a possibility of the Sway Bar making contact while the vehicle is in operation. Please return the Jack-up lift point to normal conditions before proceeding.

In the case for Spec C models

A bent support bar that lies between the member and jack-up point may become bent or crushed. Please fix this area before proceeding.

**Periodically check and re-torque all nuts and bolts after operating vehicle.