

- Installation Manual -

692 540 A Strut Tower Bar

TYPE OS STRUT TOWER BAR



[Part Number] 692 540 A

[Application] SUBARU IMPREZA STI [GRB]

SUBARU IMPREZA [GH8]

SUBARU FORESTER Turbo & NA [SH5]

SUBARU EXIGA [YA4, YA5]


[Product] Type-OS Strut Tower Bar

[Description] Front Type-OS Strut Tower Bar

[Contents] Strut Tower Bar x1

[Procedure]

- 1.) Remove left and right strut brackets from the strut bar assembly.
- 2.) Place the brackets onto vehicle strut tower and hand tighten nuts. Re-use factory nuts. (Fig: 1) (passenger side photo for fig 1)

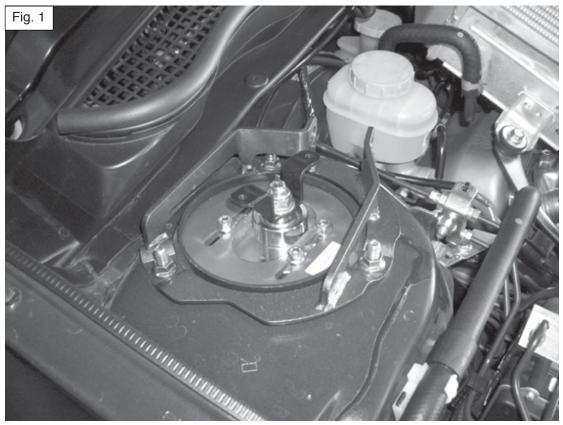

TYPE OS STRUT TOWER BAR



3.) Bolt on center bar to strut brackets from Fig.1. Make sure there is sufficient clearance. Hand tighten strut brackets to torque spec 5.6 kg-m (40.6 ft-lb). Do not overtorque or use air impact tools, this may cause damage to the bolt thread.



Note

For GH8 Impreza models, please make sure that the flap indicated in Fig.3 positions between the intercooler and strut tower bar when the hood is closed. (Fig.3)



*Periodically retorque all nuts and bolts after vehicle usage