



- Installation Manual -



965 540 AMLHD

[Strut Tower Brace w/Brake Cylinder Stopper](#)

[Part Number]	965 540 AMLHD
[Application]	Toyota 86 / Scion FR-S [ZN6] Subaru BRZ [ZC6]
[Product]	Strut Tower Brace w/Brake Cylinder Stopper
[Description]	Front Type OS Strut Tower Brace w/BCS
[Contents]	Strut Tower Bar x1 Strut Bracket (Right) x1 Strut Bracket w/BCS (Left) x1 BCS Collar x2 M8 x 50 Hex Bolt x2 M8 Flanged Nut x2 Washer x4 Locking Washer x2


[Procedure]

1. Remove eight nuts from the strut tower on both the left and right side. This consists of ix nuts from the strut tower and two from the triangle firewall brace.
- 2.) Place Cusco Strut Tower Bar onto the strut towers like pictured and hand tighten with the factory nuts. One of the bracket mounting points should rest on top of the factory triangle brace.
- 3.) Check to see if there is sufficient clearance with all surrounding components.

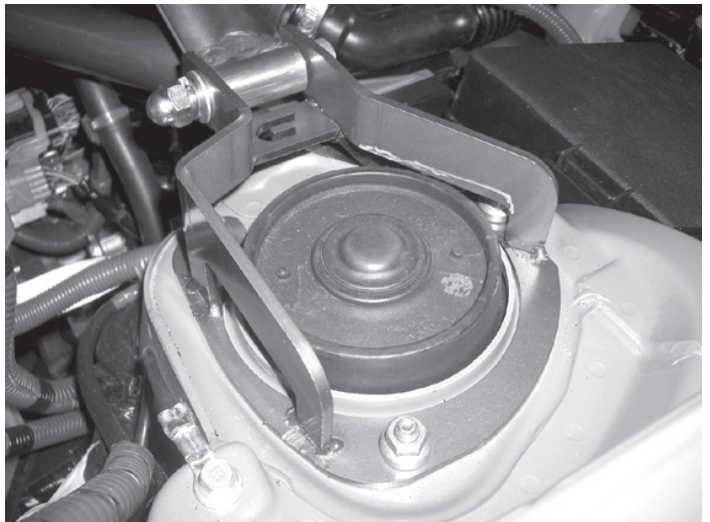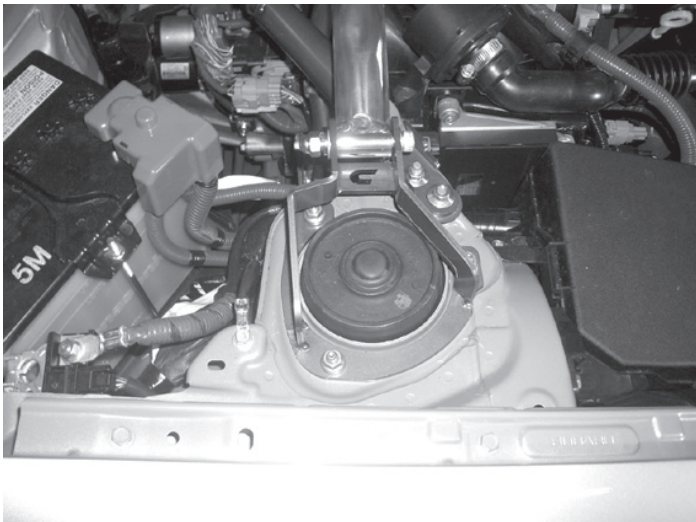


- 4.) Tighten both ends of the strut bar hex bolt and flanged nut.
- 5.) Carefully place the BCS Collar in between the end of the adjustment bolt and the brake master cylinder. (Fig. A)
Tighten the collar against the brake master cylinder by screwing the adjustment bolt and lock nut.

Note: The BCS Collar is a free floating piece. Be careful not to drop it or misplace it during installation.

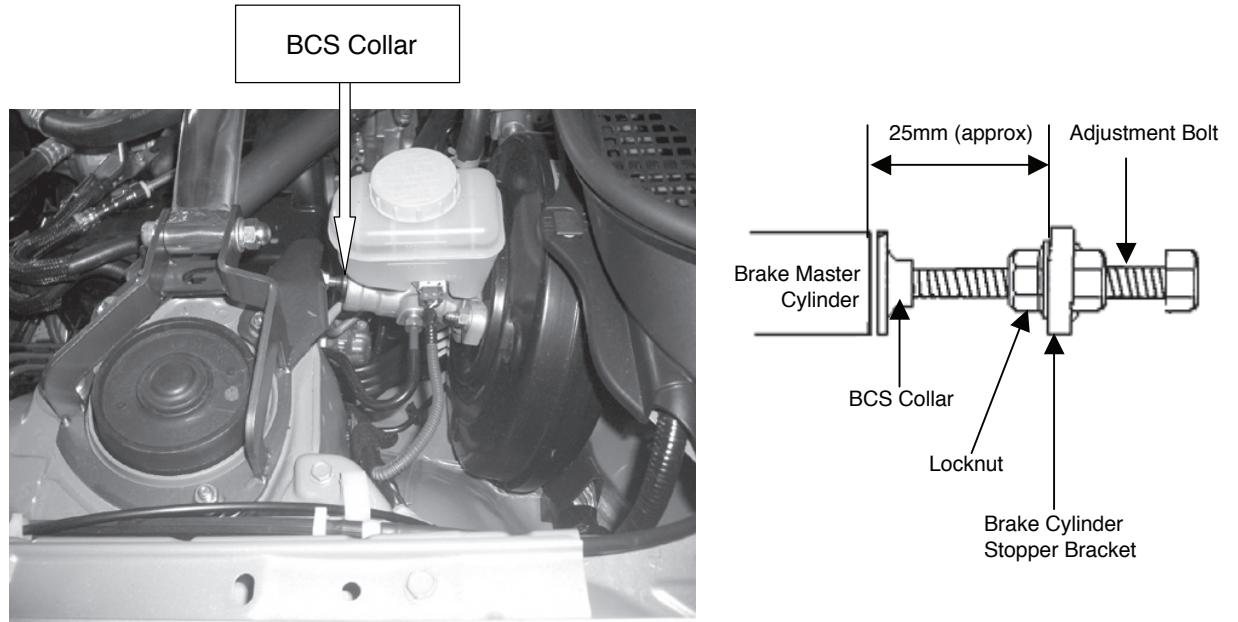

Note: Do not over tighten the Brake Cylinder Stopper Adjustment Bolt. Doing so may cause permanent damage to and components around the brake master cylinder.

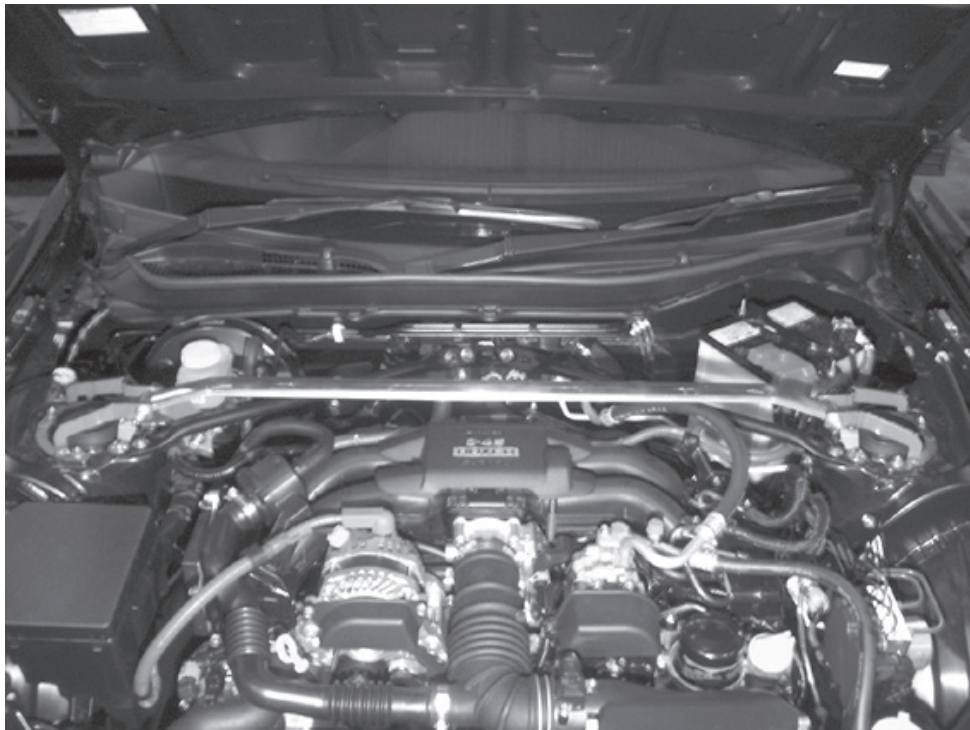

**Periodically check and re-torque all nuts and bolts after operating vehicle.