



# - Installation Manual -

965 541 A

Rear Strut Tower Brace



|                 |  |
|-----------------|--|
| [ Part Number ] | 965 541 A  |
| [ Application ] | Scion FR-S [ZN6]<br>Subaru BRZ [ZC6]             |
| [ Product ]     | Rear Strut Tower Brace                           |
| [ Description ] | Rear Type OS Strut Tower Brace                   |
| [ Contents ]    | Strut Tower Bar x1<br>M10 x P1.25 Flanged Nut x4 |

[ Procedure ]

1. Remove the trunk board and position the strut tower bar like pictured below. Tighten down the strut bar brackets with the included flanged nuts according to the torque specs listed in the factory service manual.




- 2.) Trim the areas that come in contact with the strut bar.

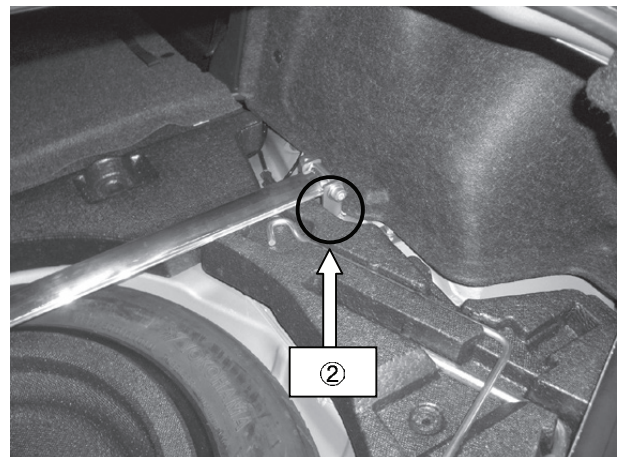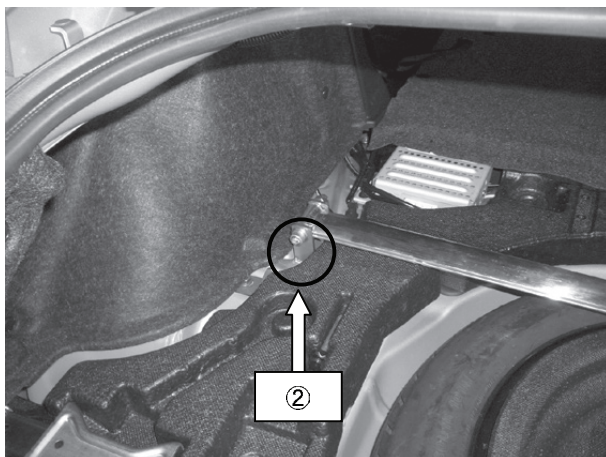


3.) Trimming the trunkboard will be necessary if it is going to be used with the strut bar. Remember to cut in small increments to avoid any overcutting.

**NOTE** The illustration template is to be used as a general reference only and may not pertain to your vehicle. Always perform this modification by using the actual vehicle as a reference.

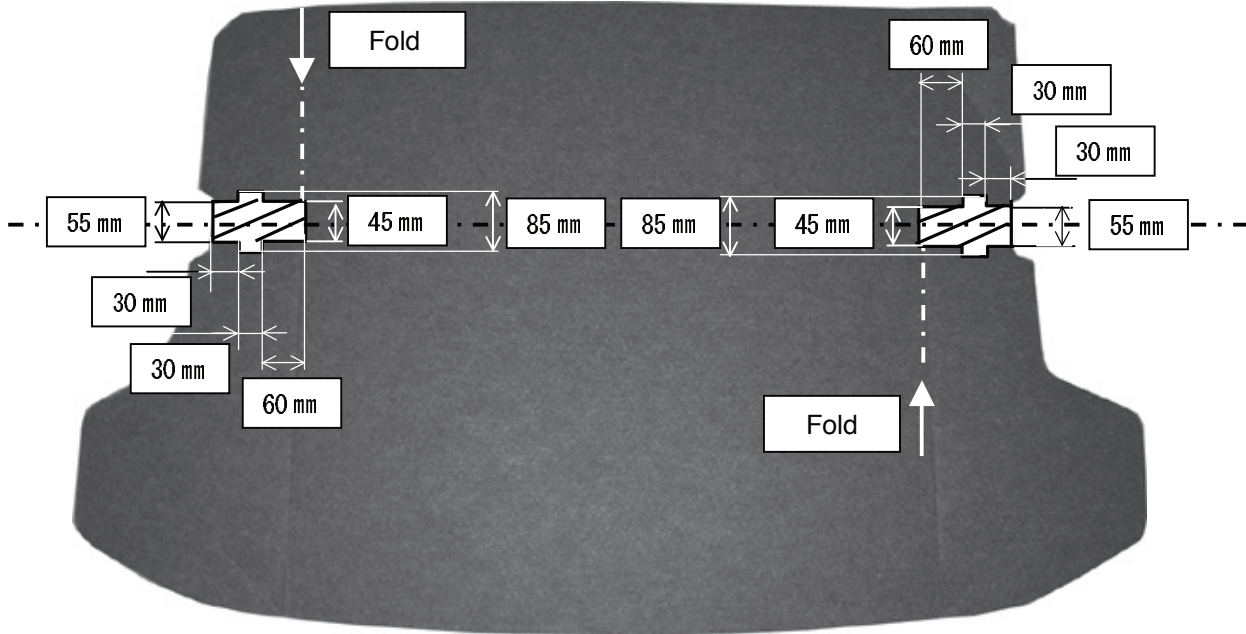

4.) Fold the winged area and slide in the the board area

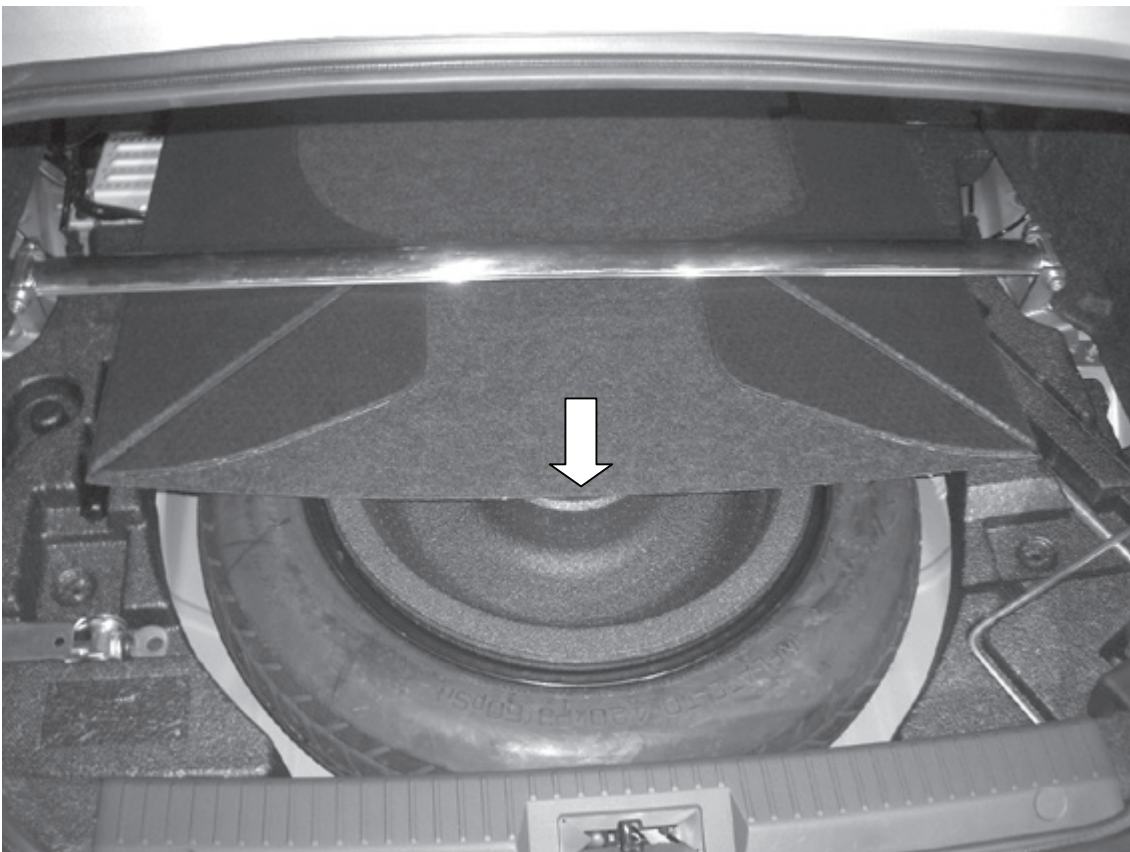

\*\*Periodically check and re-torque all nuts and bolts after operating vehicle.