


NEW!

Custom-Flow
PREMIUM TRUCK TAILGATES

CUSTOM-FLOW TAILGATE CAMERA BRACKET

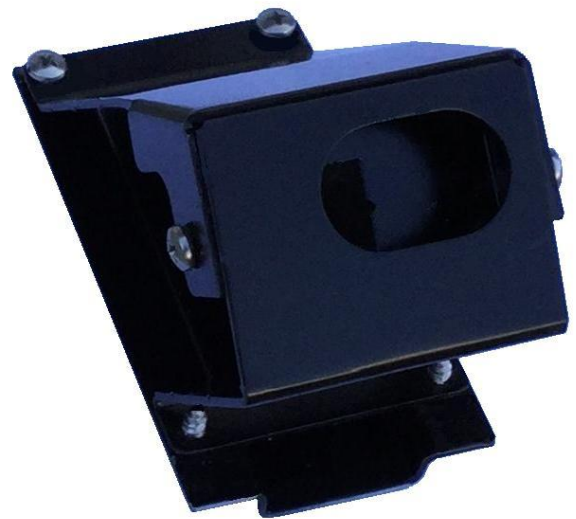

(CAMERA NOT INCLUDED)

MOUNT AN OEM REAR BACK-UP CAMERA TO YOUR CUSTOM-FLOW TAILGATE

2010-2018 CHEV/GM - PART# CF-CAM-1

2013-2018 FORD - PART# CF-CAM-2

2013-2018 DODGE - PART# CF-CAM-3

EASY INSTALLATION ! NO DRILLING !