


981 Side Vents Installation



- 1.** Clean side vent with wax grease remover or rubbing alcohol. All wax and residue must be removed before you can install.
- 3.** Then remove the red plastic from the double-sided tape and lay the side vent in place using your masking tape reference.

- 2.** Before removing Red tape Backing ,Center Side Vents on car, then place masking tape to outline correct fit. Apply 3M Adhesion Promoter (Included) to Body Edge where Double side tape will adhere to.

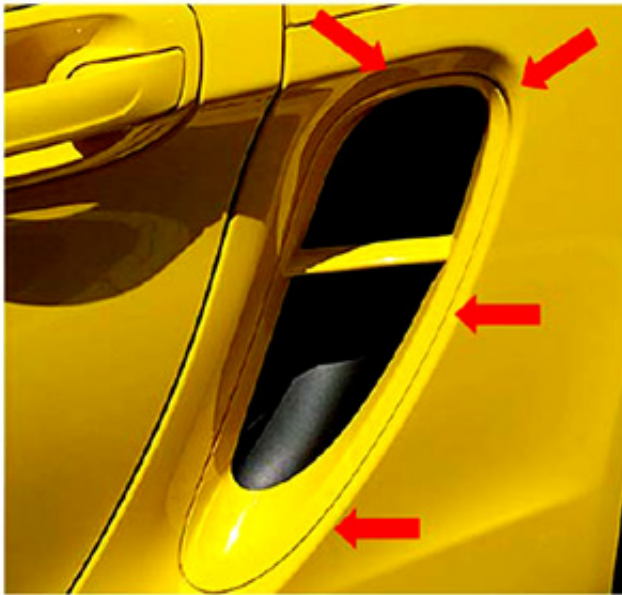

- 4.** Gently press vents into place. Once satisfied with placement, firmly press down on vents to ensure adhesion along entire surface. Continue to apply pressure until satisfied.

**DO NOT WASH CAR
FOR 24 HOURS**



Apply Clear Silicone Adhesive (Included) on inner edge for added attachment strength.
***Before Driving car, Let sit at least 4hrs in Sun or Longer inside, for adhesion to cure.**

NOTE:

Please check that Side Vents are Securely attached before Driving.
SELLER IS NOT RESPONSIBLE FOR LOSS OF VENTS