




**PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION**

- LOCATION** (See Diagram below):  
Run masking tape, **as shown using the measurements in the diagram below**, from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B. **Repeat on other side of vehicle.**
- CLEAN AND PREP:**  
Clean the surface where the molding is to be installed using the alcohol pads enclosed for proper installation of Chrome Body Side Molding. Wipe off excess residue with a clean cloth. Next, apply the **Pro Bond** promoter.  
**TEMPERATURE:** Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun to warm before proceeding with installation.  
**PROMOTER:** Supplied is a crush swab **Pro Bond** self-applicator. Squeeze the applicator until you feel the applicator "crush". When the applicator becomes wet on the end, it is ready for use. Quickly apply a thin coat of **Pro Bond** below the masking tape line, no further than 1 ¼" below the tape. Be careful not to go lower than 1 ¼" as **Pro Bond** could dull the paint surface. Wait for the coat of **Pro Bond** to dry before applying molding.

**DIAGRAM B:**  
(Starting Point)

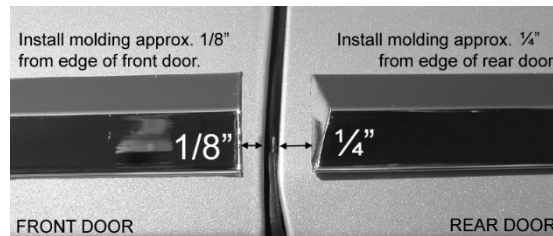


- INSTALLATION (IMPORTANT):**  
**Before starting, see Diagram B** as to where to start applying molding. Next, completely peel off all of the liner from back of molding, making sure all red liner is removed from molding. **DO NOT TOUCH** the exposed adhesive with your fingers as the installation is being done.
- AFTER THE MOLDING** has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion.

CHRYSLER 300




ACURA ILX

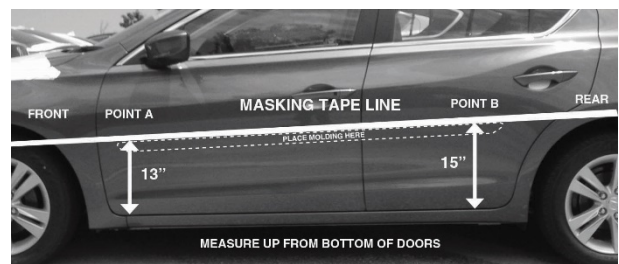

SUBARU IMPREZA



ACURA TL

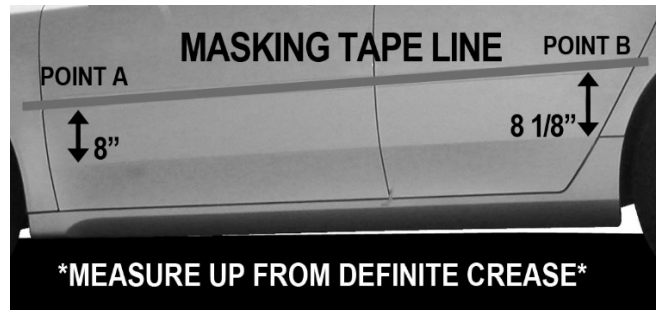

HYUNDAI ACCENT



HONDA CROSS TOUR



LINCOLN MKX




HYUNDAI AZERA



HONDA CIVIC



CADILLAC CTS

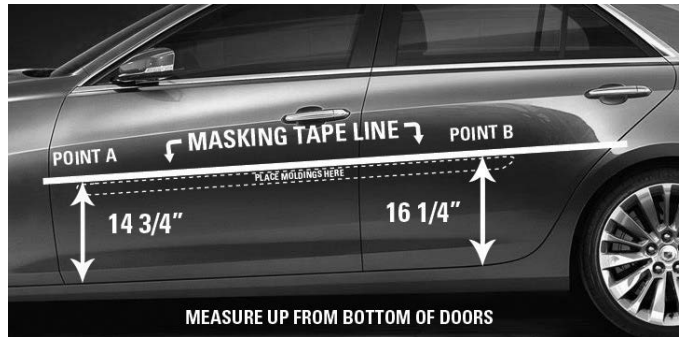

TOYOTA COROLLA



BMW 5 SERIES



KIA FORTE




INFINITI M37 / Q70



Hyundai Sonata 2011-2014



Hyundai Sonata 2015

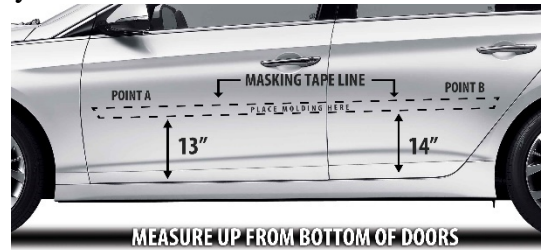

2009-2014 Hyundai Genesis



2015 Hyundai Genesis



2007 - 2010 Hyundai Elantra



2011 & Up Hyundai Elantra



Nissan Versa



Kia Optima



[View other chrome trim and accessories made by Dawn on our website.](#)