




PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **LOCATION** (See Diagram below):
Run masking tape **as shown using measurements in Diagram A below** from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B.

DIAGRAM A

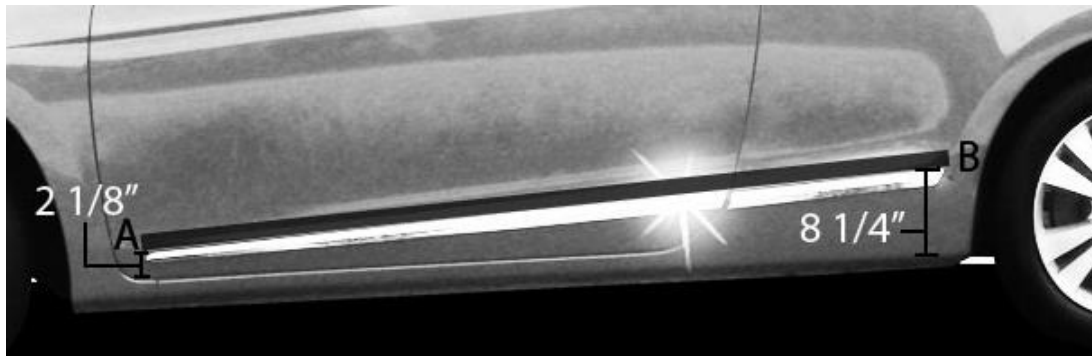


Measure up from bottom of doors.

Note: for coupe models without back doors measure from the bottom of the quarter panel.

2. **CLEAN AND PREP:**
Clean the surface where the molding is to be installed using the alcohol pads enclosed for proper installation of Lower Chrome Molding. Wipe off excess residue with a clean cloth. Next, apply **PRO-BOND ADHESIVE PROMOTOR** in the crush swab self-applicator. Squeeze the applicator until you feel the applicator “crush”. The applicator will become wet on the end and is ready for use. Apply a thin coat of **PRO-BOND** below the masking tape line, only on the shaded area, **as shown in Diagram A above**. Do not apply **PRO-BOND** in any area that the molding will not cover, as **PRO-BOND** could dull the paint surface. The light coat of **PRO-BOND** will dry quickly. Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun or hair dryer to warm before proceeding with installation.

DIAGRAM B (STARTING POINT)

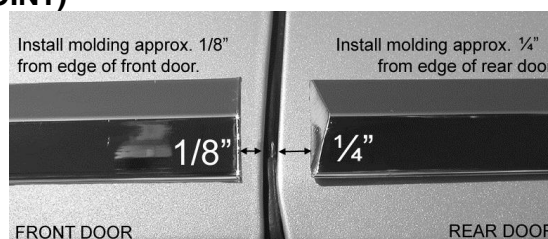

3. **INSTALLATION (IMPORTANT):**
Before starting, see Diagram B as to where to start applying molding. Next, completely peel off all of the liner from back of molding, making sure all red liner is removed from molding. **DO NOT TOUCH** the exposed adhesive with your fingers as the installation is being done.
4. **AFTER THE MOLDING** has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion.