



INSTALLATION INSTRUCTIONS

PART NUMBER: LCM-CAM07-41112

FOR: 2007 & Up Toyota Camry

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **LOCATION** (See Diagram below):

Using masking tape, run the tape **as shown using measurements in Diagram A below** from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B.

DIAGRAM A



Measure up from the bottom of the doors to the bottom edge of the masking tape.

2. **CLEAN AND PREP:**


For proper installation of Lower Chrome Molding, clean the surface where the molding is to be installed using the alcohol pads enclosed. Wipe off excess residue with a clean cloth. Next, apply **PRO-BOND ADHESIVE PROMOTOR** in the crush swab self-applicator. Squeeze the applicator until you feel the applicator “crush”. The applicator will become wet on the end and is ready for use. Apply a thin coat of **PRO-BOND** below the masking tape line, only on the shaded area, **as shown in Diagram B**. Do not apply **PRO-BOND** in any area that the molding will not cover, as **PRO-BOND** could dull the paint surface. The light coat of **PRO-BOND** will dry quickly. Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun or hair dryer to warm before proceeding with installation.

DIAGRAM B



NOTE: For center of door application, see other side.

3. **INSTALLATION (IMPORTANT):**
Before starting, see Diagram C as to where to start applying molding. Next, completely peel off all of the liner from back of molding, making sure die cut ends of red liner are also removed from molding. **DO NOT TOUCH** the exposed adhesive with your fingers as the installation is being done.
- Since these moldings have been pre-cut, start adhering moldings rear piece first with the angle or bevel cut first and the finished end directed toward the rear wheel well. Next, install front door molding following **Diagram C** measurements.

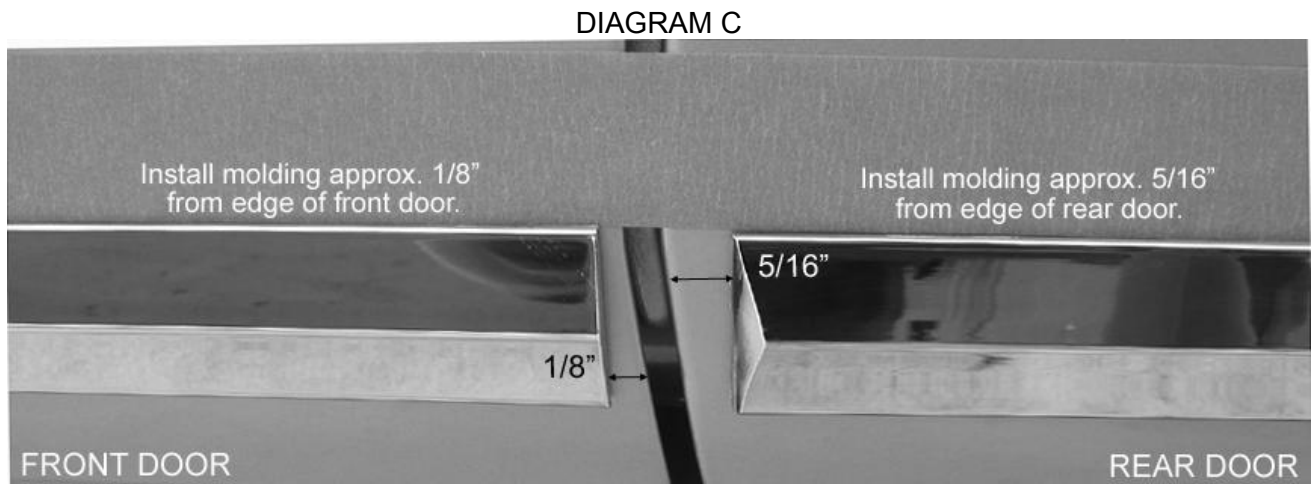

4. **AFTER THE MOLDING** has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion.

Also use LCM Molding as a Protective Bodyside Molding, just follow these easy instructions.

Location (See Diagram below):

Using masking tape, run the tape **as seen in Diagram below** from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B.

Follow instruction Steps 2, 3, and 4 for installation.



NOTE: Apply PRO-BOND below masking tape line, as instructed in Diagram B.

[View other chrome trim and accessories made by Dawn on our website.](#)