



INSTALLATION INSTRUCTIONS

PART NUMBER: 300-11-SRT8

FOR: 2011-2016 Chrysler 300 SRT8

INSTALLATION PACKAGE INCLUDES:

- A) 3 – ¼-20 Flange Nuts
- B) 2 – Templates: One for the driver's side and one for the passenger side
- C) Adhesive Pads (for an unpainted Sportwing®)
- D) Instruction Sheet
- E) 3 – Threaded Studs

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION


1. CLEAN AND PREP

For proper installation of Sportwing®, clean the surface where the Sportwing® is to be installed using car wash soap and water. Before you install the part, please examine the spoiler against the car in natural sunlight. Check to make sure the paint colors match and that there are no paint flaws. If the Sportwing® is defective in any way, contact us and do not proceed with the installation.

2. REMOVE TRUNK LINER! Close the trunk.


3. Measure down 12" from the front corner of the trunk lid where it meets the rear window glass and make a mark with a grease pencil. See diagram below.

4. On the driver's side, align the provided driver's side template with the edge of the trunk at the 12" mark. See diagram below. Use masking tape to lightly adhere the template to the deck lid, and repeat for passenger side.

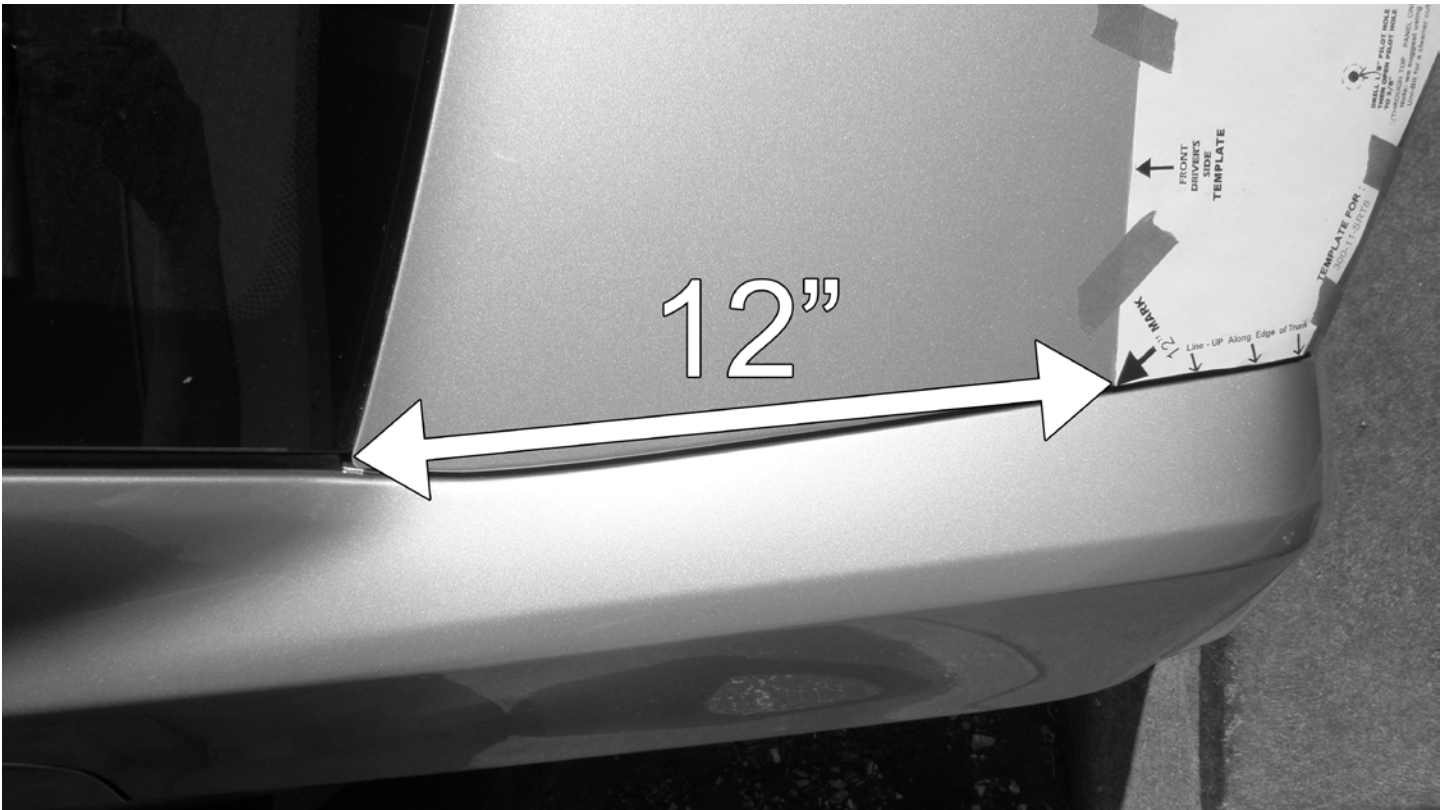

5. Drill ⅛" or similar pilot hole through the exact center of the fastening hole location on the template, through the top panel ONLY of the deck lid. Repeat procedure on passenger side using passenger side template.

6. Open the deck lid. See diagram below for center fastening hole drilling instructions. (Note: Drill center fastening hole from inside of trunk.)

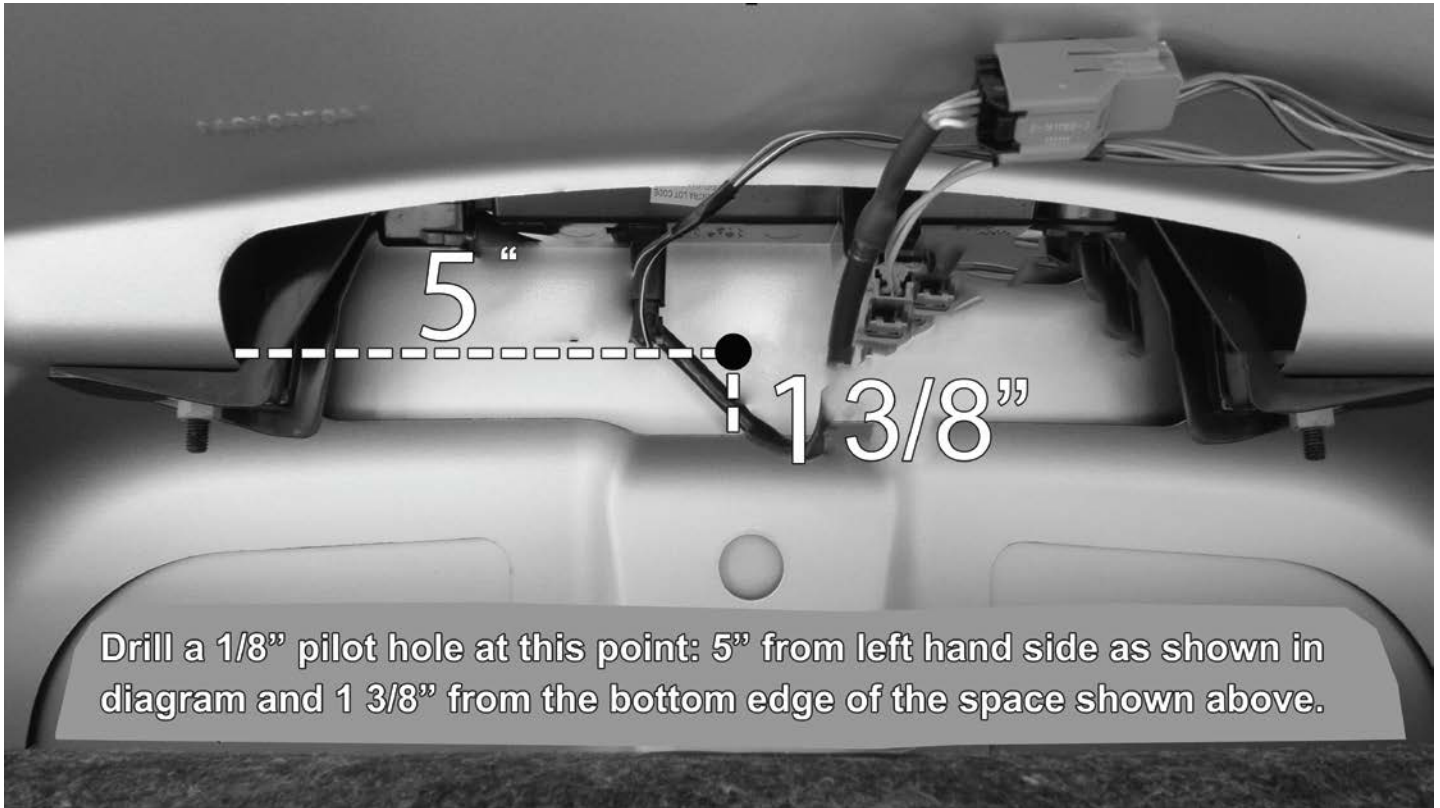

7. Close deck lid and remove the templates from the top of the deck lid. Next, using a uni-bit (we suggest using a uni-bit for a cleaner cut), open up the three (3) 1/8" pilot holes to 7/16".
8. Twist the 3 Threaded Studs provided into the Sportwing®.
9. Carefully place the Sportwing® onto the deck lid by placing the three (3) threaded bolts through the three (3) 7/16" holes that you made in the deck lid. The threaded bolts should align through the 7/16" holes without binding. You may need to file some of the 7/16" holes if the threaded bolts are hitting the edges of the 7/16" holes. Set Sportwing® aside when you are satisfied with the fit. Always be sure to set the Sportwing® on a soft cloth to avoid scratching its paint.
10. Apply zinc chromate primer or touch up paint on the edges of the three (3) 7/16" holes on the deck lid.
11. Place the Sportwing® back into the 7/16" holes. Holding onto Sportwing®, open deck lid and install the three (3) flange nuts and only finger tighten them. Once all three flange nuts are started, tighten the center flange nut until tight (but do not over tighten). Then tighten the other two flange nuts, again being careful to avoid over-tightening them.
12. Clean up any metal shavings, and you are done.