



INSTALLATION PACKAGE INCLUDES:

- A) 2 – Paper Hole Locators
- B) 2– Lock Washers
- C) 2 – Flat Washers
- D) 2 – M6- 5/8"
- E) Instruction Sheet

EXTRA TOOLS NEEDED:

- 1. 1/8" Drill Bit
- 2. Uni-Bit
- 3. Grease Pencil

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Remove Trunk Liner.
2. Place Sportwing® on vehicle's deck lid. Center Sportwing® from left to right. Each tip of the Sportwing® should measure 16 3/4" from the tip of the Sportwing® to the tip of the deck lid as shown in **Diagram A**. Then, proceed to make an outline around the Sportwing® with a grease pencil. Set Sportwing® aside on soft surface to prevent scratching.
3. Next, stick the 2 (two) hole locators onto the Sportwing® as shown in **Diagram B**. Afterwards, place Sportwing® back onto deck lid and tape the hole locators down to the deck lid. You will be drilling through these 2 (two) holes. Place Sportwing® aside on a soft surface until needed.
4. Next, drill through the hole locators using a 1/8" drill bit. Then, using a unibit, open the holes to 7/16". Afterwards, place Sportwing® back onto outline marks, making sure that the holes line up.
5. Then, remove red liner from Sportwing® to expose adhesive tape and place back onto deck lid. Press firmly to ensure adhesion. Next, while holding the Sportwing®, screw in the four 2 (two) m6-5/8" with 2 (two) washers provided. Clean up any metal shavings and wipe off grease pencil marks to complete the installation process.

***FOR CONVERTIBLE MODELS:** Fasten provided grommet into provided antenna and replace it with the factory antenna by twisting it counter-clockwise. Twist the new antenna clock-wise to complete the installation process (**Diagram C**).

DIAGRAM B

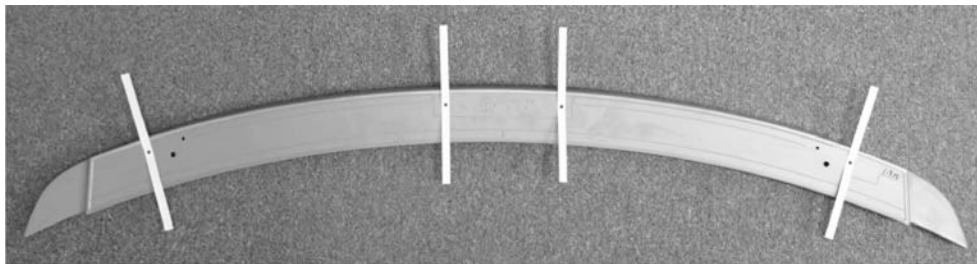


DIAGRAM A



DIAGRAM C

