



INSTALLATION PACKAGE INCLUDES:

- A) 4 – ¾" Self-Tapping Screws
- B) 4 – Lock Washers
- C) Adhesive Pads (*for an unpainted Sportwing®*)
- D) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Start by removing trunk liner by unscrewing plugs and removing plugs with removal tool. Set aside. Lay blanket in trunk to collect metal shaving after drilling. Close trunk. Center the Sportwing® on deck lid from left to right. Measure 12 ¾" from the center of the Sportwing® foot to the edge of the deck lid as shown in **DIAGRAM A**. Proceed to outline each of the four (4) feet with a grease pencil.
2. For the two (2) OUTERMOST feet, measure up 1" from the bottom outline you made in Step #1 and mark a dot with a grease pencil in the center of the outline as shown in **DIAGRAM B**. For the two (2) INNERMOST feet, measure down 2" from the top outline you made in Step #2 and mark a dot with a grease pencil in the center of the outline as shown in **DIAGRAM C**. Using a 5/32" bit, drill through the top of the deck lid at each of the four dots you made within the feet outlines. After drilling, clean up any shavings on deck lid carefully.
3. Next, remove the lining from the pads on the feet of the Sportwing® to expose the adhesive tape. Carefully center the Sportwing® onto the deck lid to match up to the outlines you made in Step #2. Press down firmly to ensure proper adhesion to the deck lid. While holding the Sportwing® onto the deck lid (you may need another person to assist you), open the trunk and use 3/16" bit with drill stop to drill from under the deck lid through the four (4) holes you drilled in Step #2 into the Sportwing®. Proceed to install sheet metal screws with washer using a ratchet with an 8mm socket into all four (4) feet until tightly fastened.
4. Clean up any metal shavings that might have fallen into the trunk and you are done. The installation should take no longer than 30 minutes. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.



DIAGRAM A

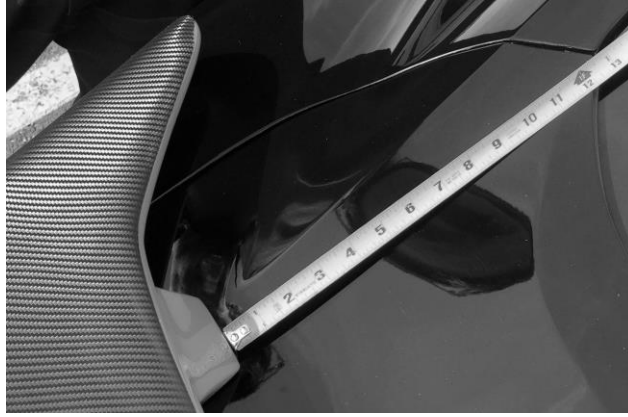


DIAGRAM B



DIAGRAM C

