

# 9-401-7015

## 2005-2019 Chevrolet, Cadillac and GMC SUV DW400 Fuel Pump Module Installation Guide



### Parts List:

- DW400 Module
- Connector Pigtail

PLEASE READ – this guide is intended to aid in the installation of our products. It is recommended that factory manuals or instructions are followed to remove the fuel pump assembly from the vehicle. Some instructions in this guide are generic. The factory manual should supersede any contradiction.


Below is a picture of suggested tools that will make the installation process easier.




**2005-2019 GMC and Chevrolet SUV Fuel Pump Module Installation Guide**

1 – Due to the differences in OEM modules over the years and between Flex-Fuel and non-Flex applications the DeatschWerks SUV module has a 3<sup>rd</sup> larger fuel tank vent port. This port is capped from the factory for the Flex-Fuel applications, this 3<sup>rd</sup> larger port is used typically only in the gasoline only SUV applications. If your car does not have this larger port leave the supplied cap and clamp in place.

*Leave cap in place if your application does not have the correct sized vent hose.*

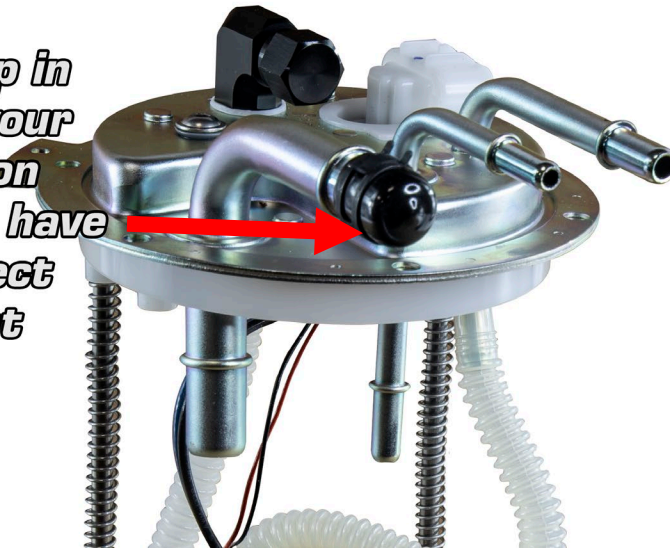

2 – Plumbing Diagram.

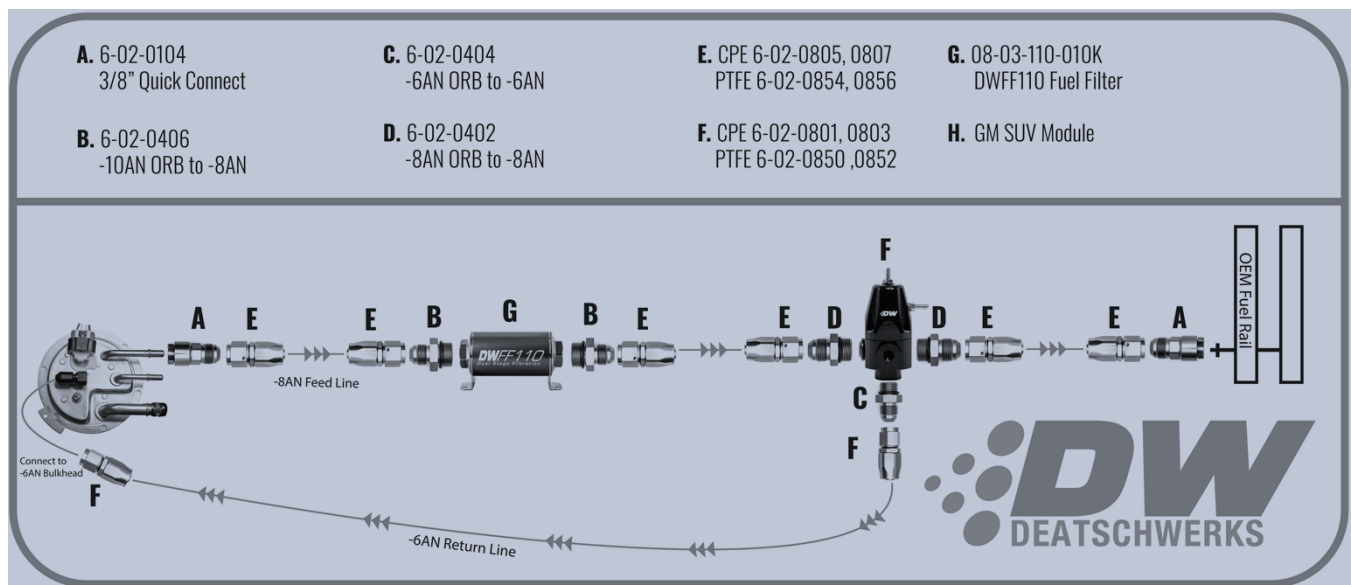

## 2005-2019 GMC and Chevrolet SUV Fuel Pump Module Installation Guide

3 – Due to the various applications the DeatschWerks GM SUV Module fits, the pump and level sensor wiring changes through the different makes and models. Refer to the chart for possible color combinations, if your colors are not represented here contact DW Tech Support for more information.

Note: To help determine which wiring layout you should use, look for the standout colors: Pink, Blue/Violet, Black/Green or two solid Black wires. Those should help you narrow down your wiring.

Wiring Combonations			
Red (Pump +) #1	White Sending Unit #2	White Sending Unit #3	Black (Pump -) #4
Grey	Blue/Violet	Black/Green	Black/Green (Large)
Grey	Purple	Black	Black (Large)
Grey	Purple	Tan/Black	Black
Pink	Purple	Tan/Black	Grey

