



**INSPECT YOUR PRODUCT FOR DAMAGE & MISSING
PARTS BEFORE PROCEEDING TO INSTALLATION**

PROCEDURE FOR RETURNS OR MISSING HARDWARE

-PLEASE CONTACT THE ORIGINAL POINT OF PURCHASE FOR:
SHIPPING DAMAGE, RETURNS, OR WARRANTY CLAIMS

Operating, servicing, and maintaining a passenger vehicle can expose you to chemicals such as lead, phthalates, engine exhaust, and carbon monoxide that are known to the State of California cause cancer and birth defects or other reproductive harm. To minimize exposure, service your vehicle and its accessories in a well-vented area and wear gloves or wash your hands frequently.



Thank you for choosing Dee Zee to add function and accessorize your vehicle. Dee Zee has been a staple brand in the truck accessory market since 1977 and we hold a reputation of quality manufacturing based in America's Heartland. Our products are born through careful engineering and backed by industry leading warranty programs. We appreciate the opportunity to serve you and your vehicle!

Review the instruction pages in their entirety to prepare the required tools

Warning: Please check for wiring or other obstructions before drilling any holes in the vehicle. If it is necessary to drill any holes, Dee Zee recommends putting a sealant or rust inhibitory around all holes drilled into the body of the vehicle.

It is the sole responsibility of the vehicle owner to check for tire clearance. It is unlawful and dangerous to ride on any external vehicle step while the vehicle is in motion.

Cleaning: To be entitled to all warranty rights offered with the product, Dee Zee steps need to be cleaned regularly with a mild detergent. Do NOT use abrasive cleaners. For stainless steel products, the application of a high grade automotive wax is recommended.

DISCLAIMER

All products are sold as appearance accessories and should not be relied upon as protection for the vehicle or its occupants in the event of an accident. Vehicles equipped with a supplemental restraints system (air bags) deployed by impact and collision avoidance systems should not be modified in any way. Always consult the vehicle manufacturer if you have any questions regarding supplemental restraint systems and sensors.

Buyer must accommodate front and rear sensors during product installation and assumes all risk should these be tampered, rerouted, severed, or disconnected. This includes disabling visual, audio, or vibration alerts into the cab. Buyer assumes all risk and responsibility for wiring any supplemental auxiliary lights.






Buyer assumes all risk, liability, and cost for the installation and use of Dee Zee products. Dee Zee, Inc. assumes no liability for injury, loss, incidental or consequential damages in the event of an accident.




Dee Zee Cares - Please Recycle

Rough Step Running Board Installation Instructions


DZ 15340 Chevy Silverado / GMC Sierra 2019-Current
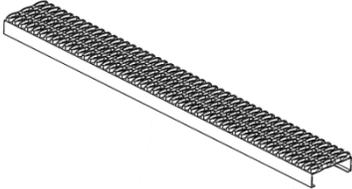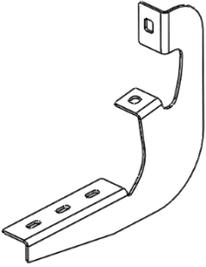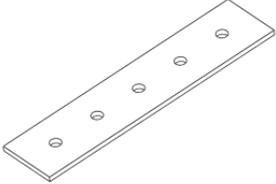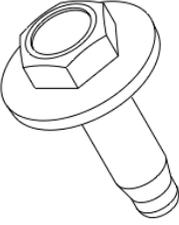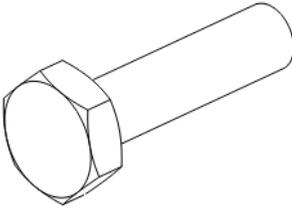
<div style="border: 1px solid black; padding: 5px;"> <p>A Running Board *BOARDS SOLD SEPARATELY*</p>  <p>Various X2</p> </div>	<div style="border: 1px solid black; padding: 5px;"> <p>B Bracket</p>  <p>B 2599P X6</p> </div>	<div style="border: 1px solid black; padding: 5px;"> <p>C Strap Brace</p>  <p>B 1791P X6</p> </div>
<div style="border: 1px solid black; padding: 5px;"> <p>D M8-1.25X29mm Hex SEMS Bolt</p>  <p>PN 907 X12</p> </div>	<div style="border: 1px solid black; padding: 5px;"> <p>E 1/4" Bolt</p>  <p>PN 78 X18</p> </div>	<div style="border: 1px solid black; padding: 5px;"> <p>F 1/4" Nut</p>  <p>PN 71B X18</p> </div>
<div style="border: 1px solid black; padding: 5px;"> <p>G 1/4" Lock Washer</p>  <p>PN 512 X18</p> </div>	<div style="border: 1px solid black; padding: 5px;"> <p>H 1/4" Washer</p>  <p>PN 72B X36</p> </div>	

Required tools



Tape Measure




Ratchet / Wrench

Sizes: 13mm 7/16"


1

Using a straight blade screw driver, pry the plastic caps out of the holes. There are different locations depending on the cab type of your vehicle. For Regular Cab, remove the first set of plugs and the fourth set of plugs. For Extended Cab, remove the first set of plugs, the third set of plugs and the fifth set of plugs. For Crew Cab, remove the first set of plugs, third set of plugs, and sixth set of plugs. Crew Cab is shown below

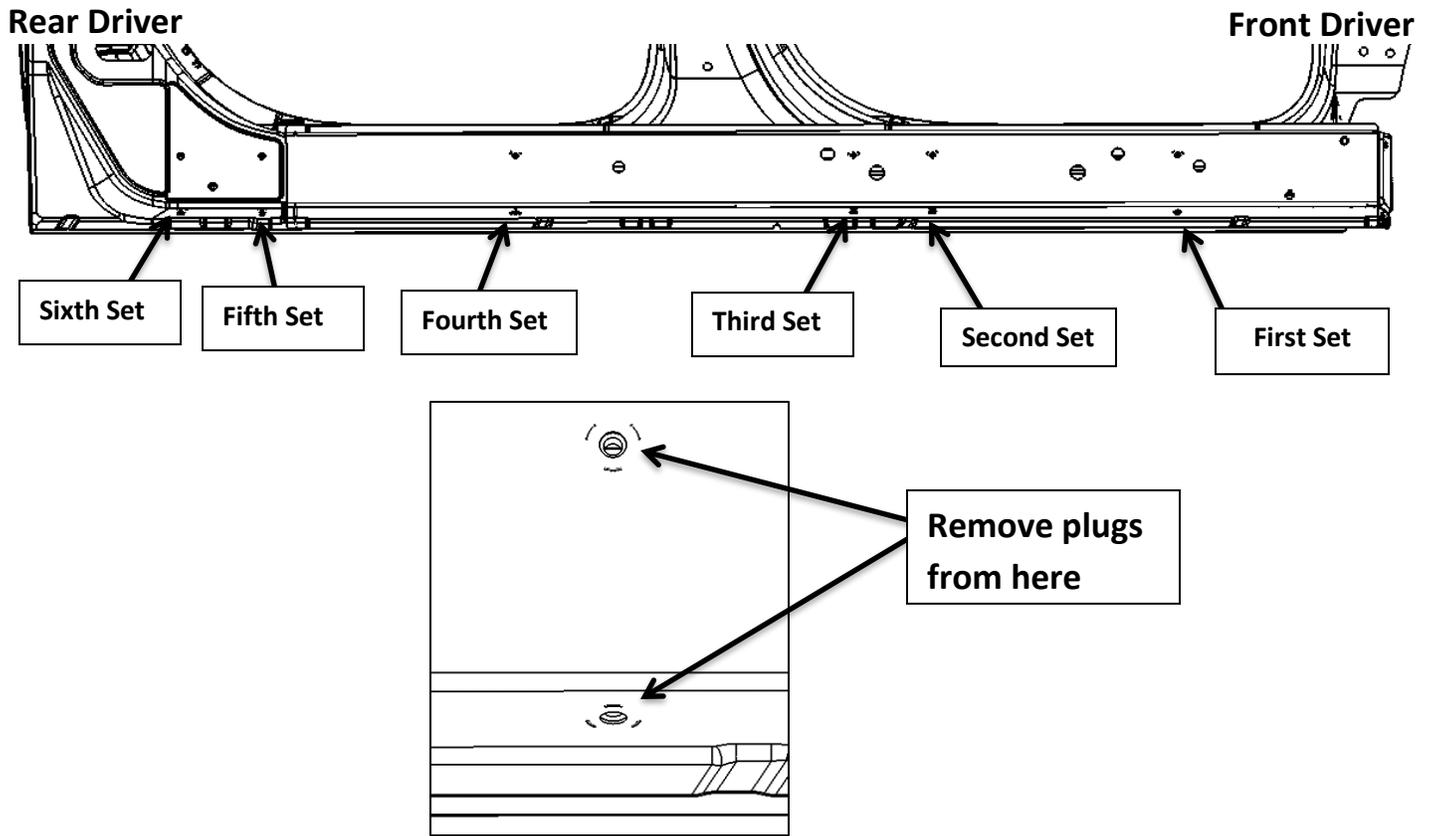


2

Attach Brackets (B) to each of the Driver's side Locations where the plugs were removed in step 1 using two 8mm Hex Head Bolts (D) at each location. Do not completely tighten at this time.

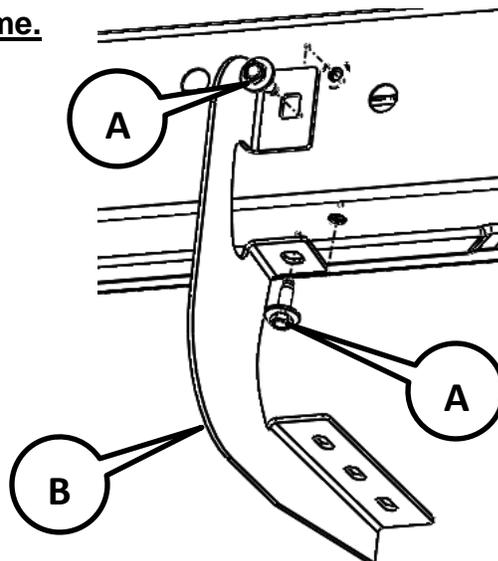


3

With the end caps off of the running board (A), slide strap brackets (C) into one of the ends on the running board. For Regular Cab use 2 strap brackets per board, and for both Extended Cab and Crew Cab use 3 strap brackets per board. After strap brackets are installed, install the end caps onto both ends of the running boards.



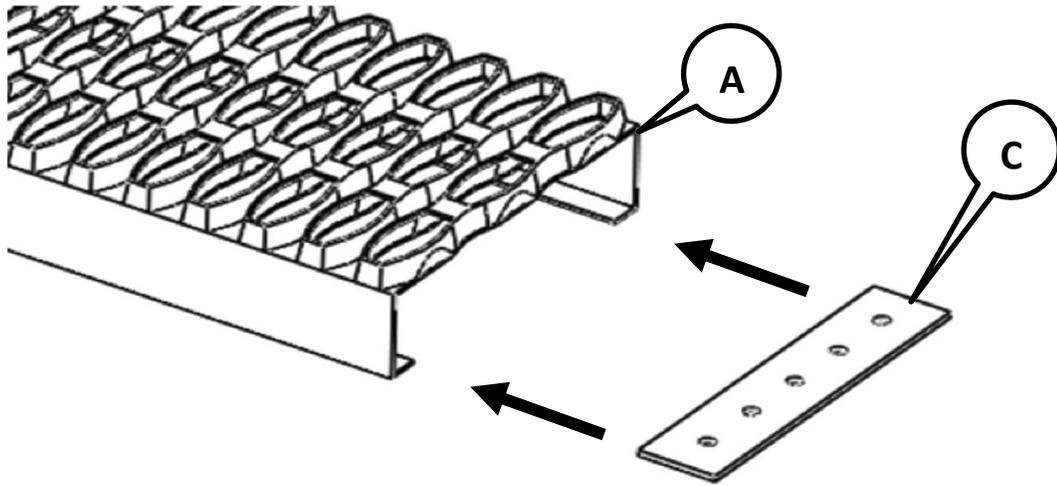
**4**

Align the strap brackets (C) that were placed inside the board on the previous step with the braces that are attached to the vehicle (Braces B). Attach the running board to the brace using three bolts (E), six washers (H), three lock washers (G) and three nuts (F) at each location and repeat for all braces. Do not completely tighten the hardware at this time.

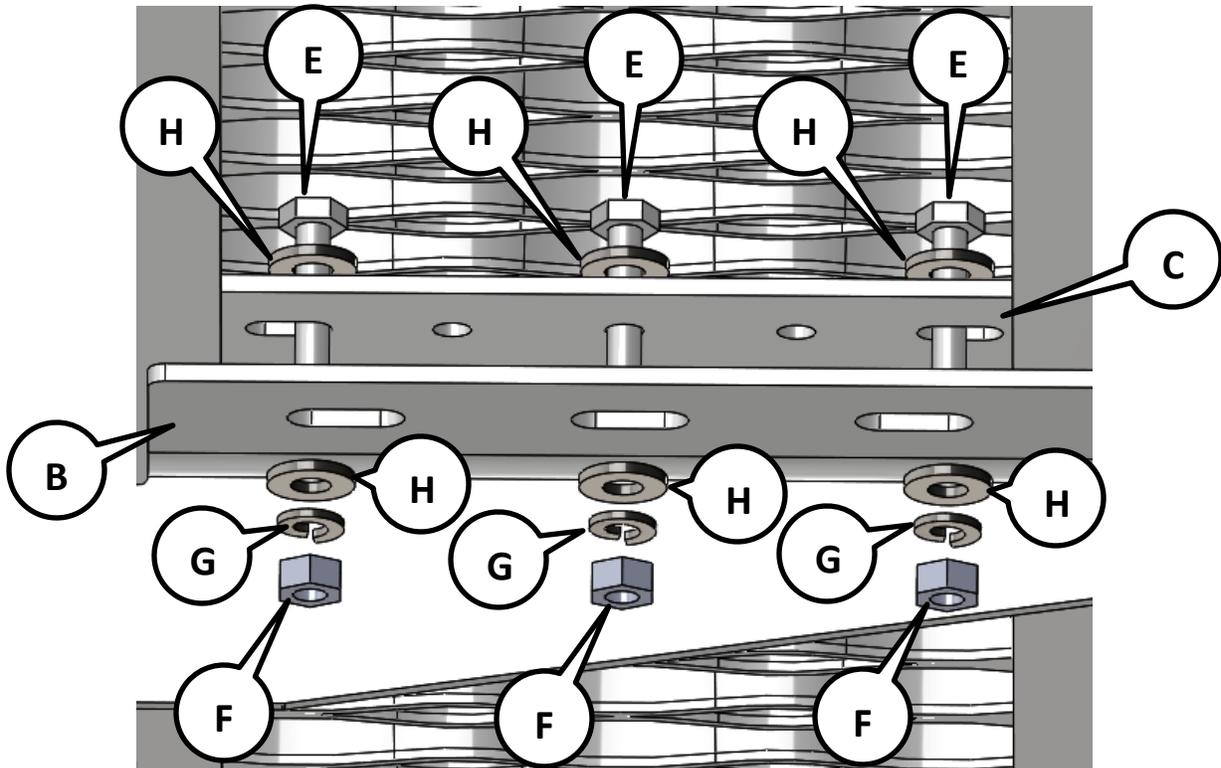

5

Align the board with the vehicle front to back, then in and out.

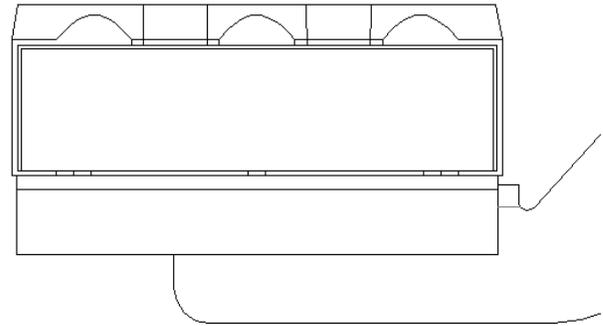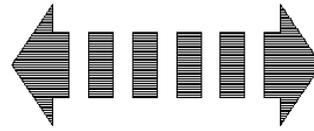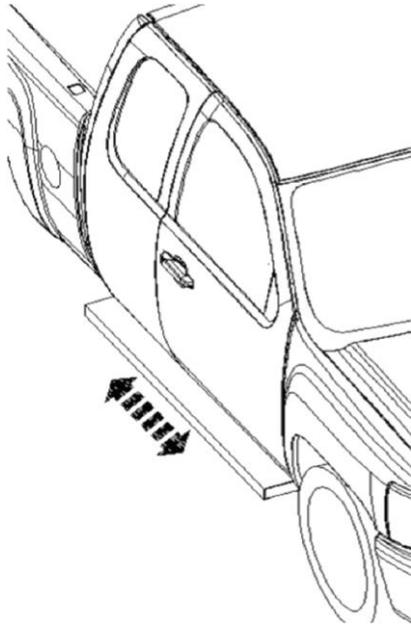

Once the board is in the desired location, tighten the bolts that attach the board to the brace using a 7/16" wrench and socket.

DZ 15340

Check out the collection of running boards and step bars we offer.