



**INSPECT YOUR PRODUCT FOR DAMAGE & MISSING  
PARTS BEFORE PROCEEDING TO INSTALLATION**

**PROCEDURE FOR RETURNS OR MISSING HARDWARE**

-PLEASE CONTACT THE ORIGINAL POINT OF PURCHASE FOR:  
SHIPPING DAMAGE, RETURNS, OR WARRANTY CLAIMS

-CONTACT DEE ZEE DIRECTLY FOR MISSING PARTS OR HARDWARE

---

Operating, servicing, and maintaining a passenger vehicle can expose you to chemicals such as lead, phthalates, engine exhaust, and carbon monoxide that are known to the State of California cause cancer and birth defects or other reproductive harm. To minimize exposure, service your vehicle and its accessories in a well-vented area and wear gloves or wash your hands frequently.



Thank you for choosing Dee Zee to add function and accessorize your vehicle. Dee Zee has been a staple brand in the truck accessory market since 1977 and we hold a reputation of quality manufacturing based in America's Heartland. Our products are born through careful engineering and backed by industry leading warranty programs. We appreciate the opportunity to serve you and your vehicle!








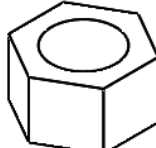
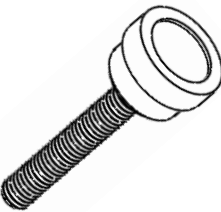
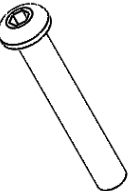
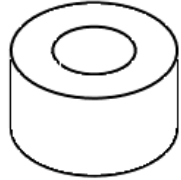
**Review the instruction pages in their entirety to prepare the required tools**

**Warning:** Please check for wiring or other obstructions before drilling any holes in the vehicle. If it is necessary to drill any holes, Dee Zee recommends putting a sealant or rust inhibitory around all holes drilled into the body of the vehicle.


It is the sole responsibility of the vehicle owner to check for tire clearance. It is unlawful and dangerous to ride on any external vehicle step while the vehicle is in motion.

**Cleaning:** To be entitled to all warranty rights offered with the product, Dee Zee steps need to be cleaned regularly with a mild detergent. Do NOT use abrasive cleaners. For stainless steel products, the application of a high grade automotive wax is recommended.

## 4 Door Wide Jeep Box Installation Instructions DZ 6534JWTB JK 2007-2018 JL 2018-Current

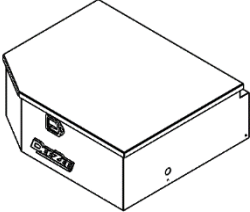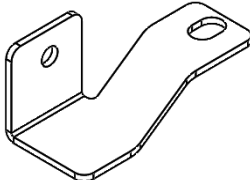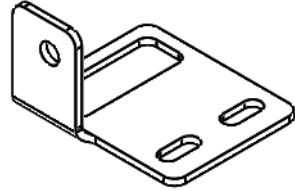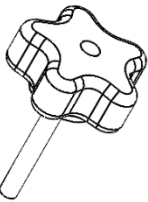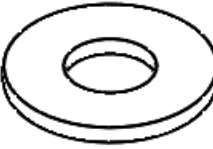
<p><b>A</b> 4 Door Wide Jeep Box</p>  <p style="text-align: center;"><b>DZ 6534JWTB</b>                      <b>X1</b></p>	<p><b>B</b> JK Driver Bracket</p>  <p style="text-align: center;"><b>B 2636P</b>                                      <b>X1</b></p>	<p><b>C</b> Bracket</p>  <p style="text-align: center;"><b>B 2637P</b>                                      <b>X2</b></p>
<p><b>D</b> M8 Knob</p>  <p style="text-align: center;"><b>BR100-KNOB</b>                      <b>X1</b></p>	<p><b>E</b> 3/8" Washer</p>  <p style="text-align: center;"><b>PN 113B</b>                                      <b>X2</b></p>	<p><b>F</b> 3/8" Button Head Bolt</p>  <p style="text-align: center;"><b>PN 124</b>                                      <b>X2</b></p>
<p><b>G</b> M6 Washer</p>  <p style="text-align: center;"><b>PN 265B</b>                                      <b>X2</b></p>	<p><b>H</b> 3/8" Lock Nut</p>  <p style="text-align: center;"><b>PN 520</b>                                      <b>X2</b></p>	<p><b>I</b> M6 Knob</p>  <p style="text-align: center;"><b>PN 895</b>                                      <b>X1</b></p>
<p><b>J</b> M6 Socket Head Bolt</p>  <p style="text-align: center;"><b>PN 1032B</b>                      <b>X1</b></p>	<p><b>K</b> Spacer</p>  <p style="text-align: center;"><b>PN 1060</b>                                      <b>X3</b></p>	

**Required tools**

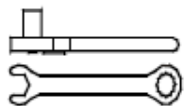

**Ratchet / Wrench**


9/16"  
Torx 40  
Torx 30

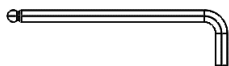

Allen Wrench  
5mm  
7/32"



Straight Blade  
Screwdriver

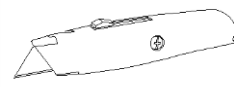

Utility Knife

- 1** First remove the tie downs shown below using a T30, and remove the driver side seat bracket nut.

**JK ONLY**



- 1** First pry up on the plastic covers of the tie downs shown below. Then remove tie downs using a T40.

**JL ONLY**




Pry up here




- 2** Install bracket (C) in the passenger front tie down location using bolt (J), washer (G), and spacer (K). Arrow depicts which way the rear hatch is. Do not fully tighten hardware at this time.

**JK ONLY**

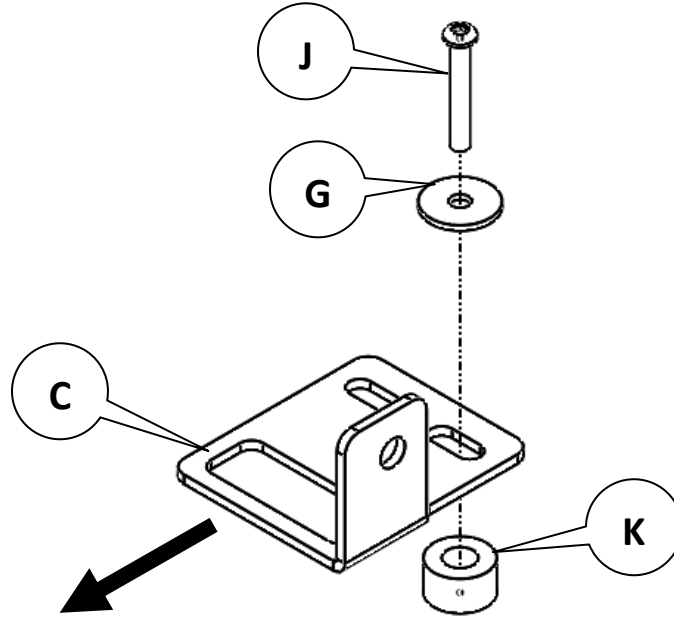


- 2** Install Brackets (C) in the two front tie down locations using the original bolt and spacer (K). Arrow depicts which way the rear hatch is. Do not fully tighten hardware at this time.

**JL ONLY**

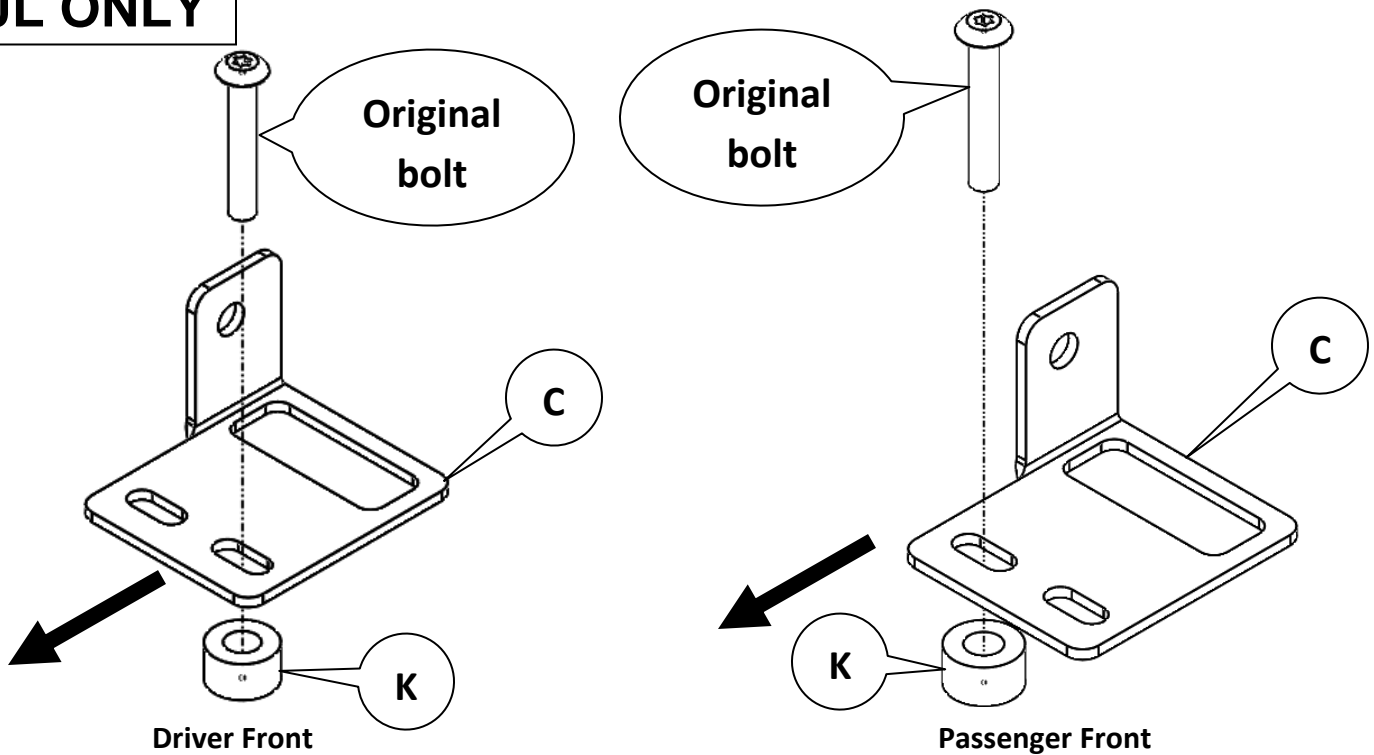




- 3** If you have the factory floor mat in the rear storage area you will need to cut it in the driver front area then Install Bracket (B) through the floor mat and onto the stud on top of the seat bracket and reinstall nut.


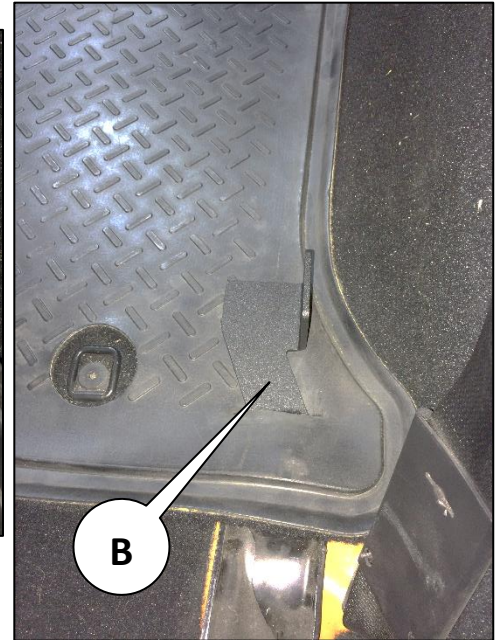


**JK ONLY**


- 4** Install box (A) using bolts (F), washers (E), and nuts (H). Place the box between the brackets then install the bolt (F) through the bracket and box then install washer (E) and nut (H) on the inside of the box. Fully tighten the bolts that attach the box to the brackets. Do not tighten the brackets to the Jeep.

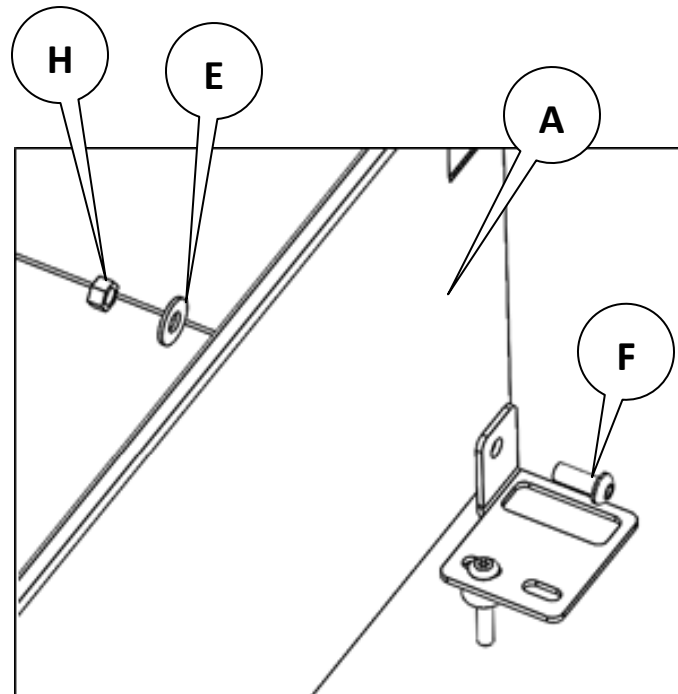


- 5** Install the Knob into the rear tie down location through the box. Refer to the picture below for which slot to use. Then install the M8 Knob (D) and spacer (K) for the JL or if you have a JK use M6 Knob (I) and spacer (K).

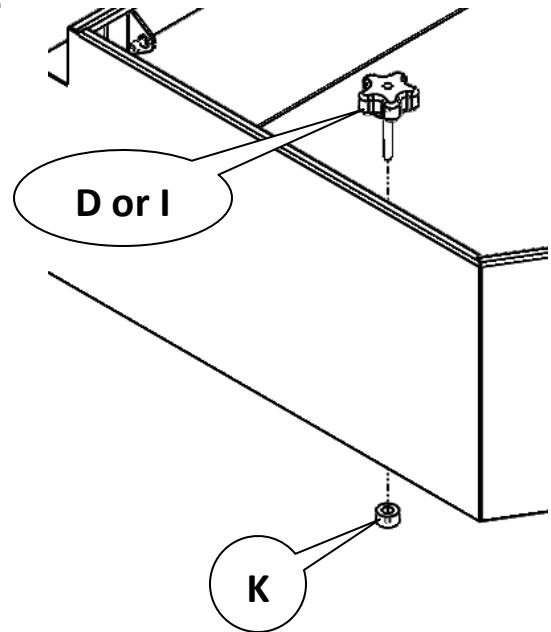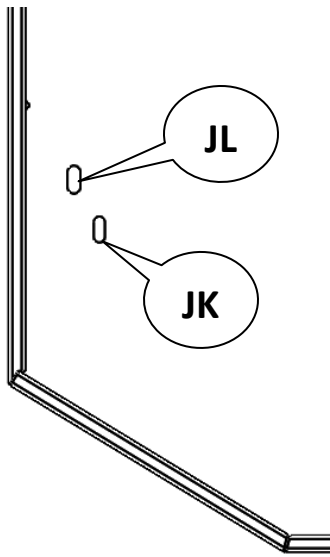


- 6** Fully tighten the brackets to the Jeep in the front tie down locations by removing the knob and lifting up the box. Any extra brackets or hardware may be discarded.

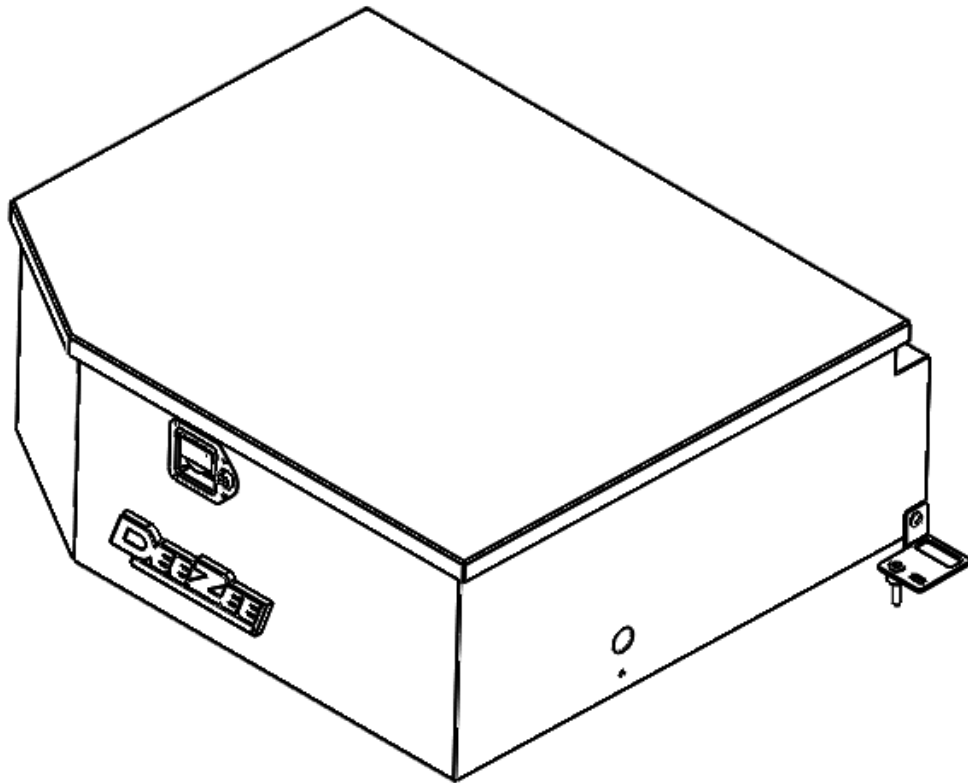

- 7** If access is needed to the under storage or additional room is needed in the cargo area, Fold down the rear seats, then remove the knob, and rotate the box vertically. Below is a side view of the box mounted and when the box is rotated vertically.

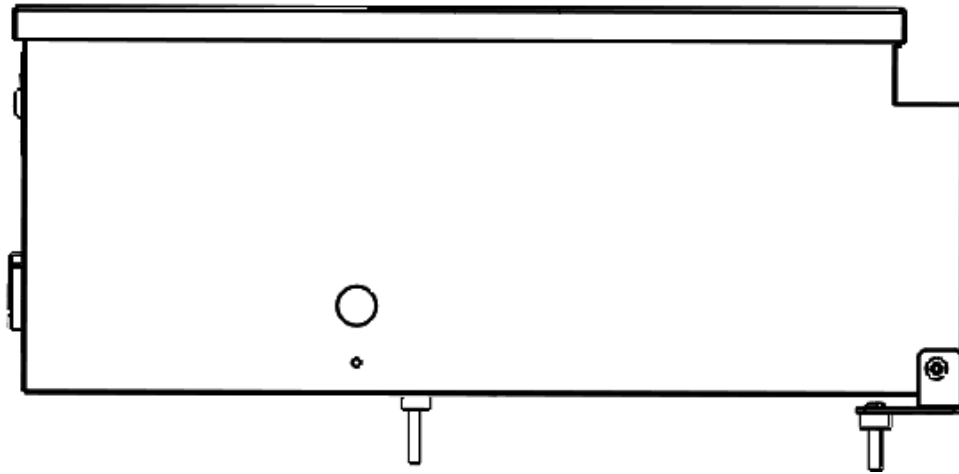

**Fully Mounted**

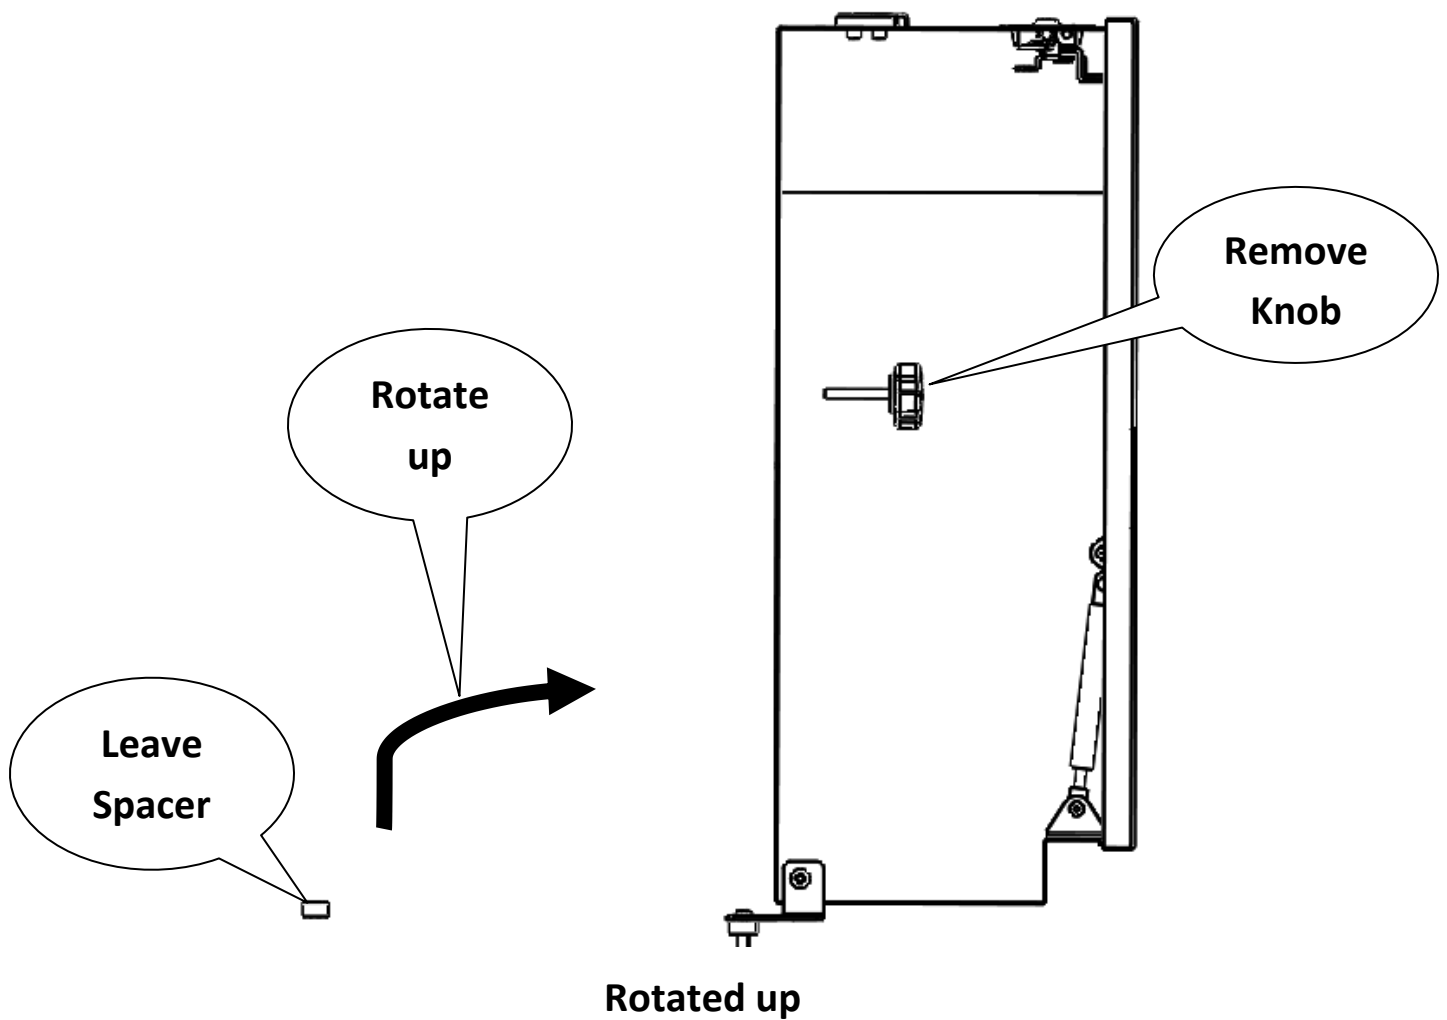

**Rotated up**

[View other car organizers made by Dee Zee on our website.](#)