

**Before returning this product
to the store of purchase**

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions



Dee Zee Running Board Installation Instructions

Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.

Note: Please take time to read all of the instructions before beginning this installation.

Warning! Please check for wiring or other obstructions before drilling any holes into the vehicle. If it is necessary to drill any holes into the vehicle, Dee Zee recommends putting a sealant or rust inhibitor around all holes drilled into the body of the vehicle.

Warning! It is the sole responsibility of the vehicle owner to check for tire clearance.




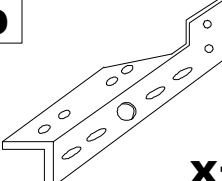
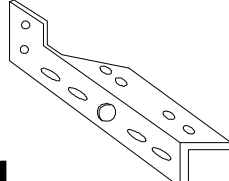







Warning! It is unlawful and dangerous to ride on running boards or side box boards while the vehicle is in motion.

Cleaning Instructions: To maintain the bright finish of your Dee Zee running boards, clean with a mild detergent. For our stainless steel products and accessories, the application of a high grade automotive type wax is recommended.






DEE ZEE Britetread Running Boards

2017 20-8017

Ford Pickups




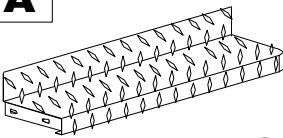
A  X2	B  X2	C  X2	D  X1	E  X1
F  11 3/4" X2	G  X2	M  1/4" x 1" X8	N  1/4" x 1" X8	P  1/4" x 3/4" X24
S  1/4" X32	T  1/4" X32			


Tools Required:

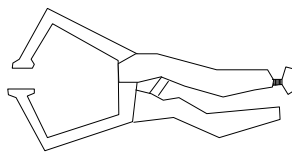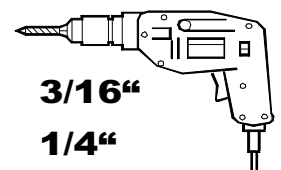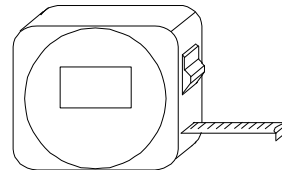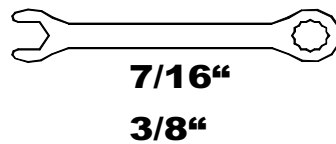



1

7/16"

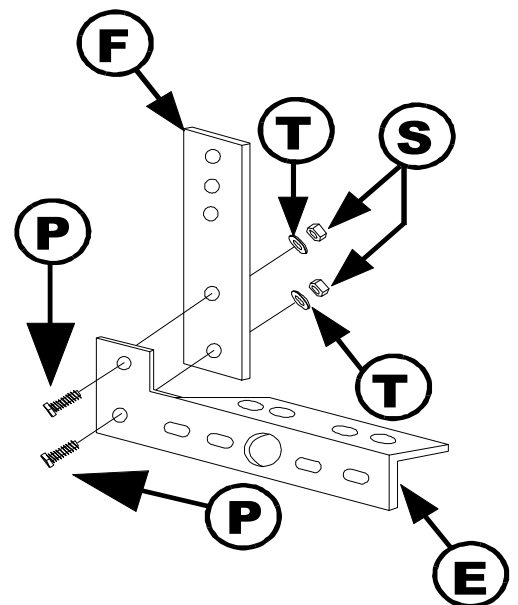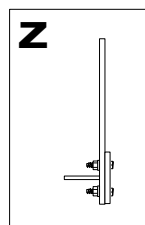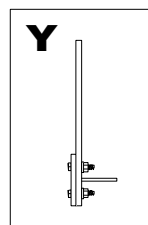
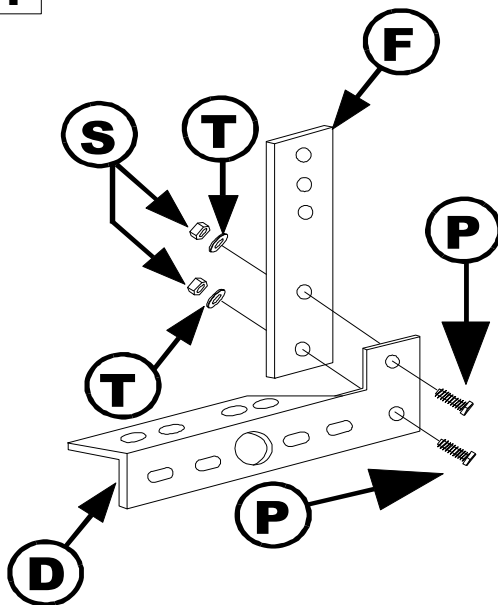


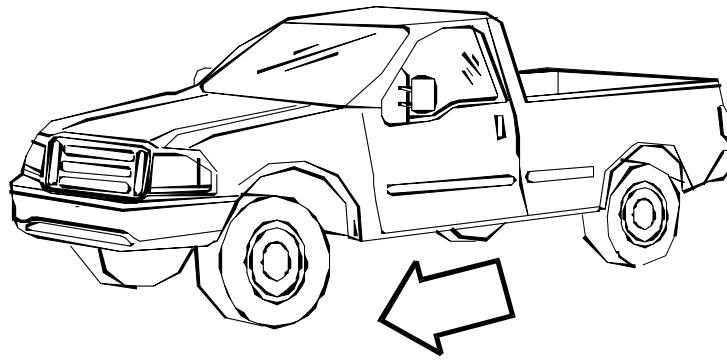



2






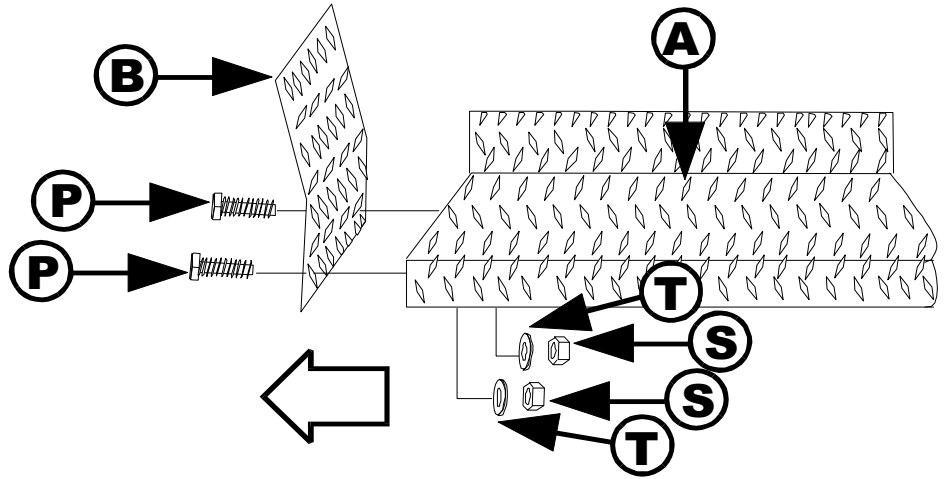
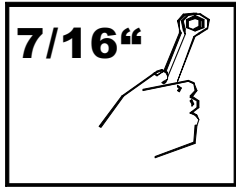


3

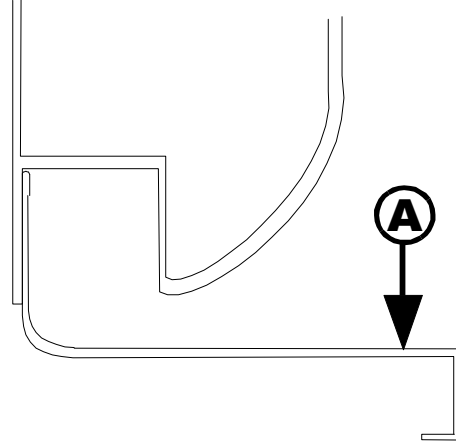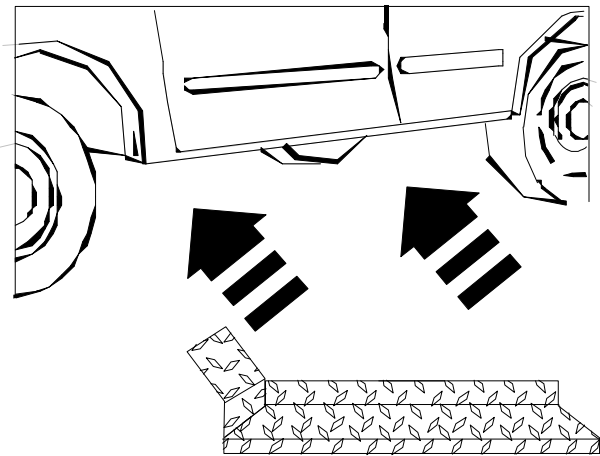


4

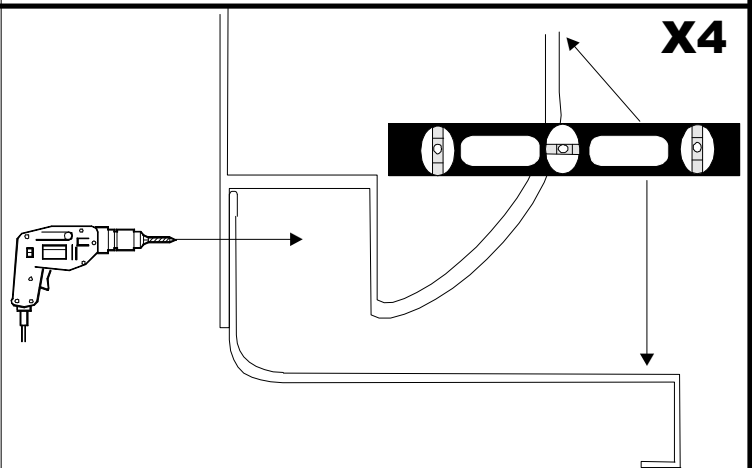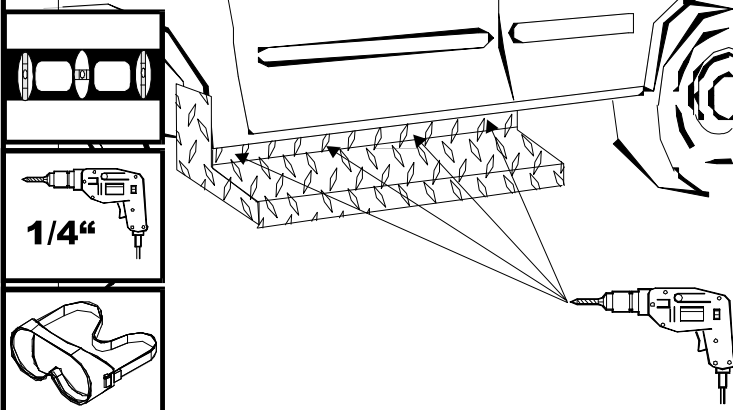

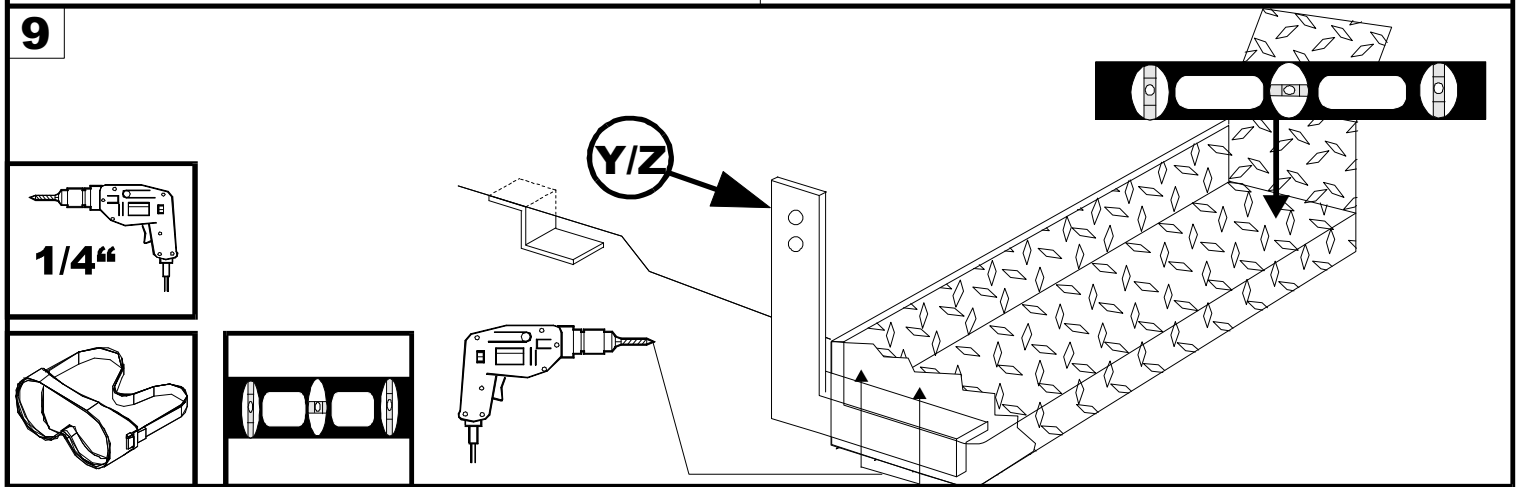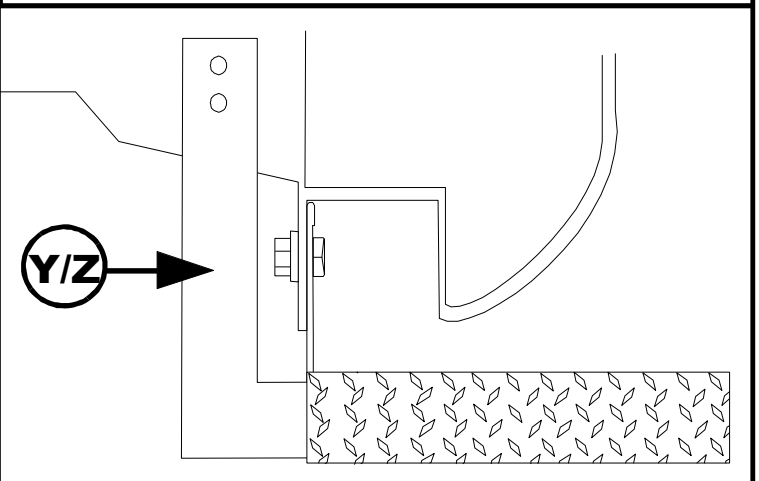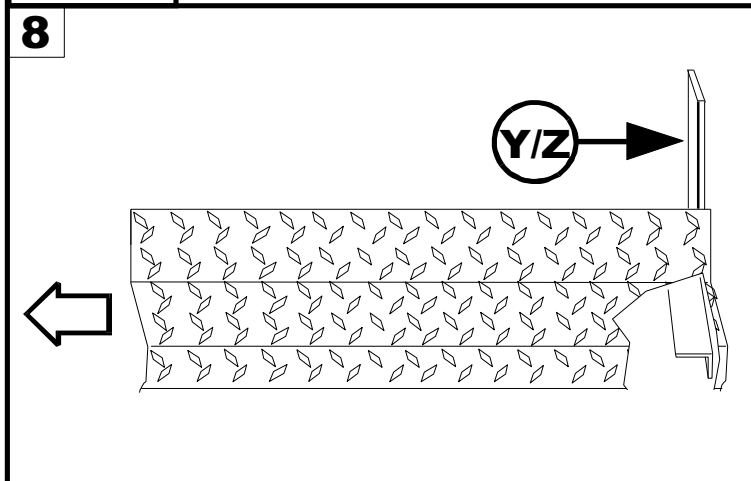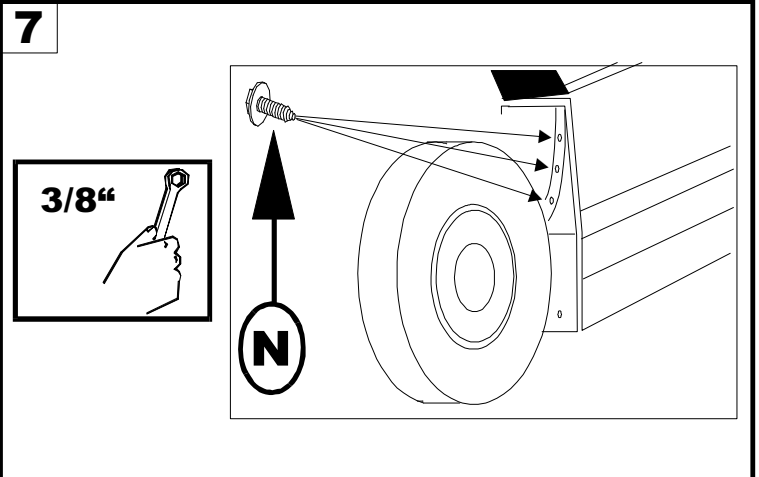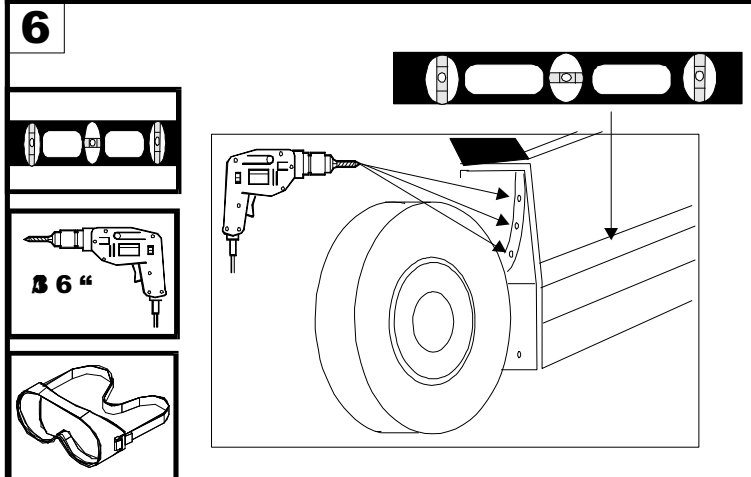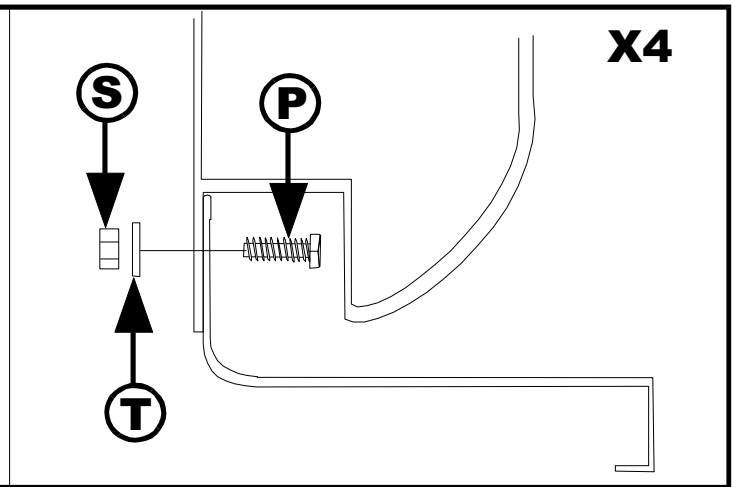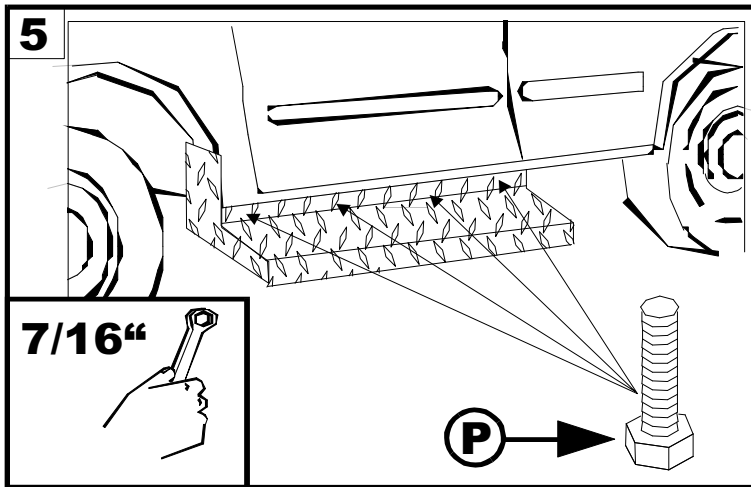


10

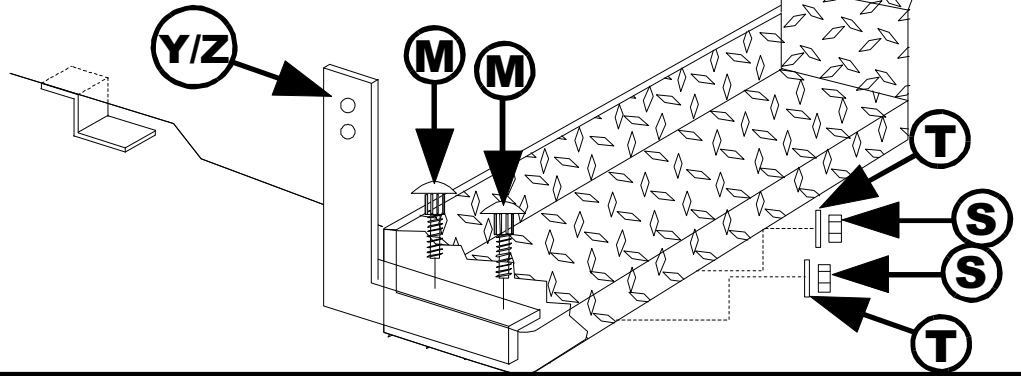




7/16"




11

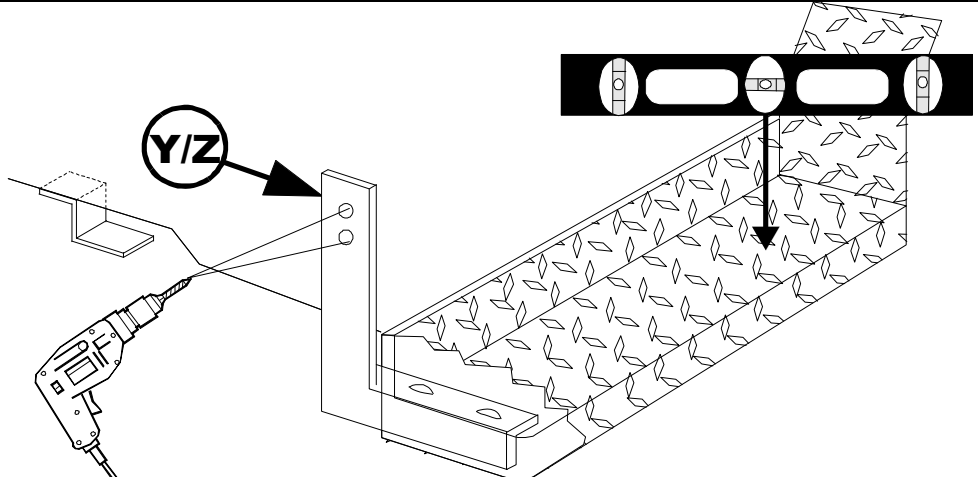

1/4"

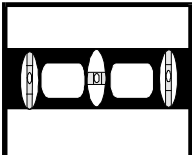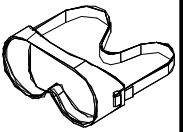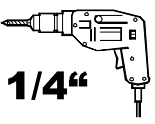


12

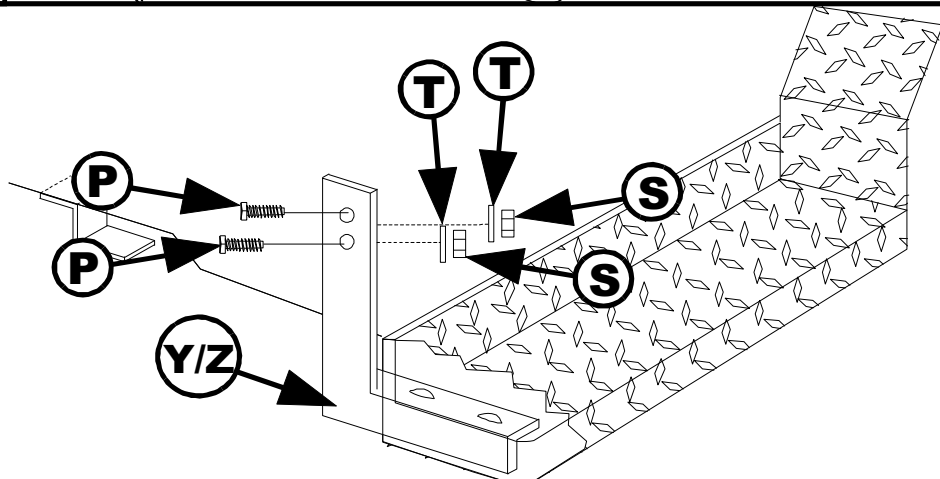



7/16"







13




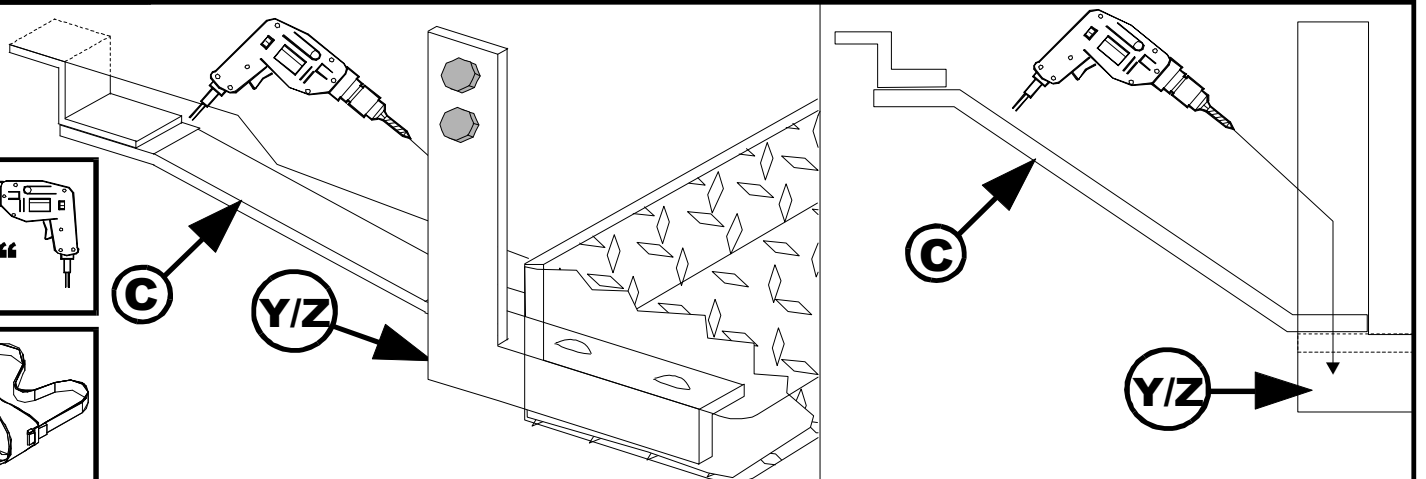


1/4"

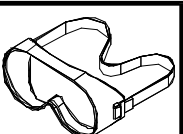
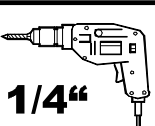


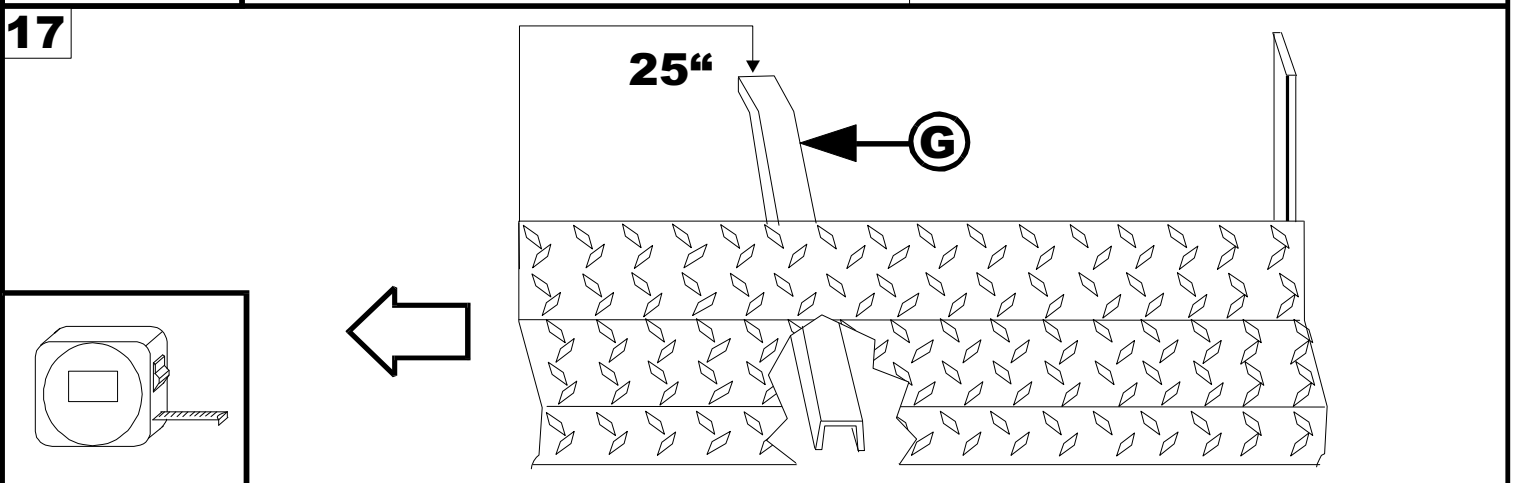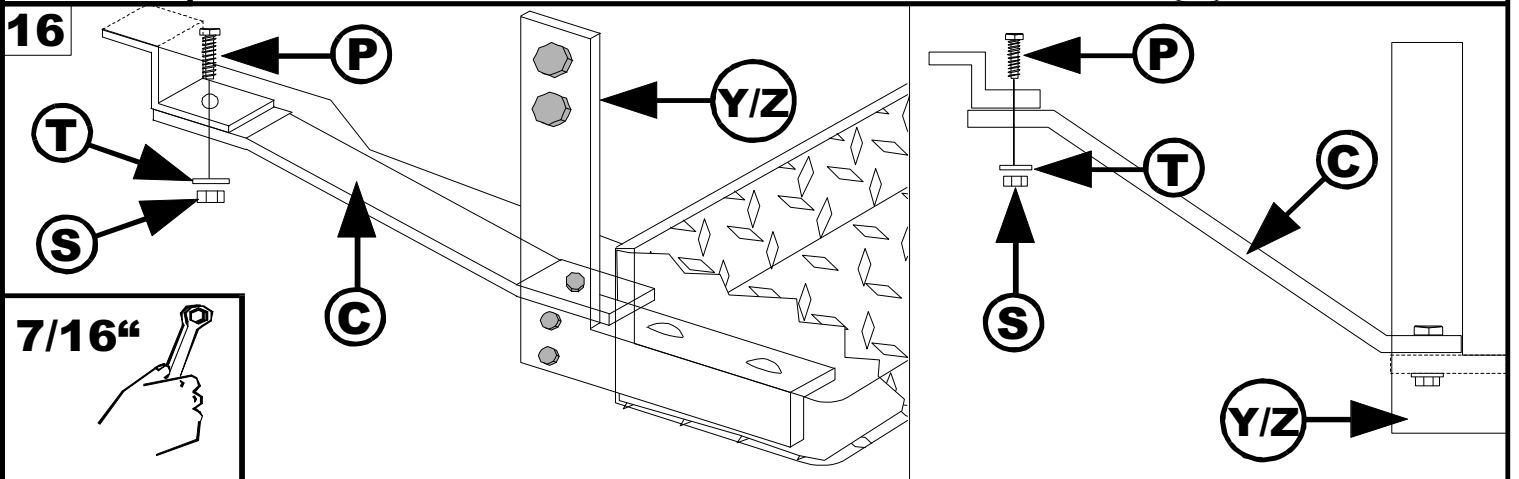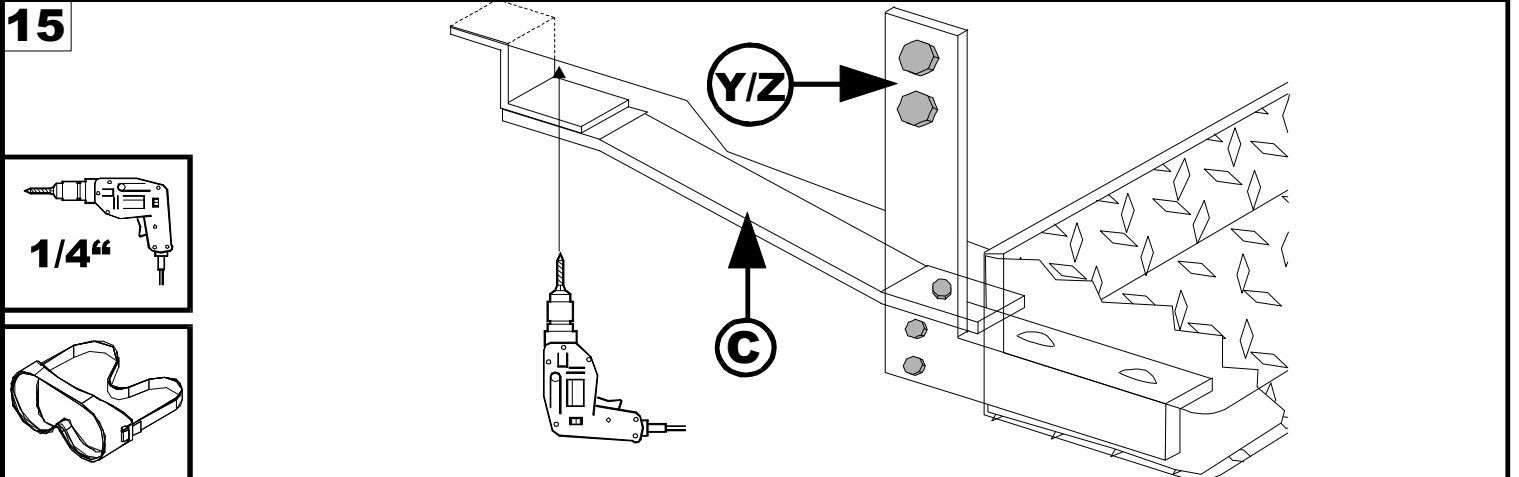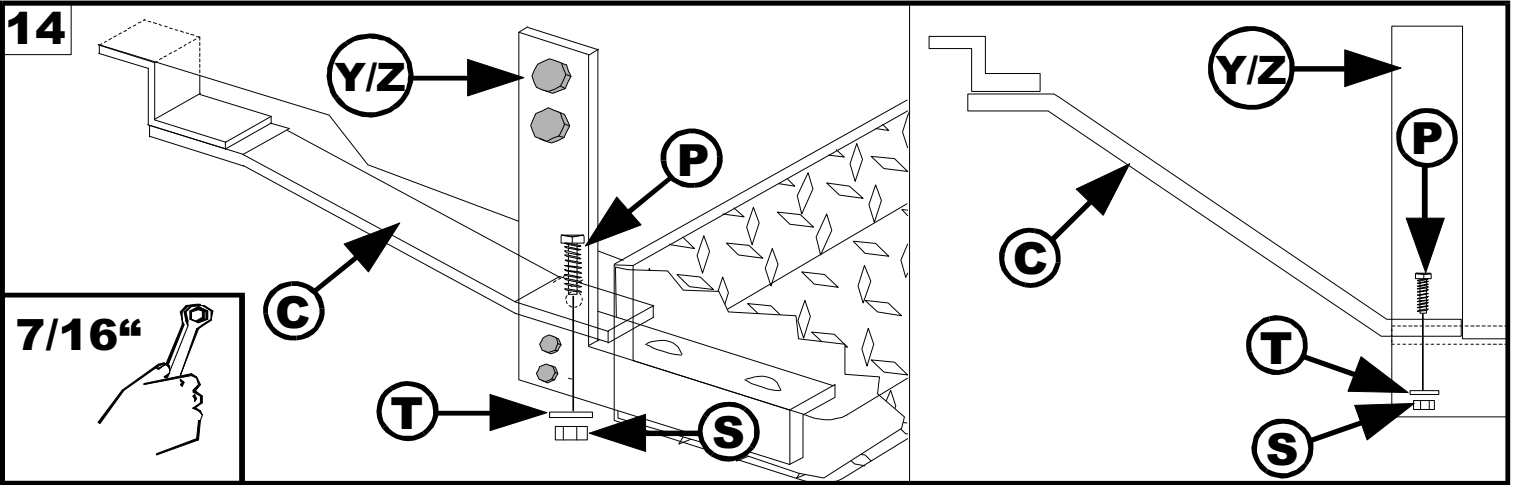





18

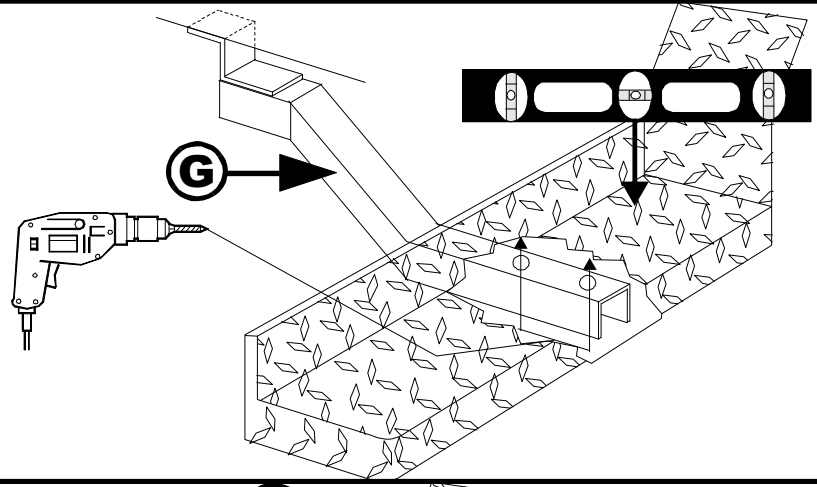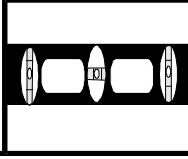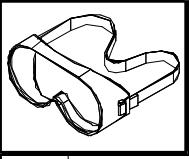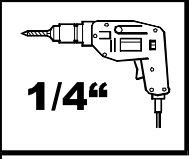

19

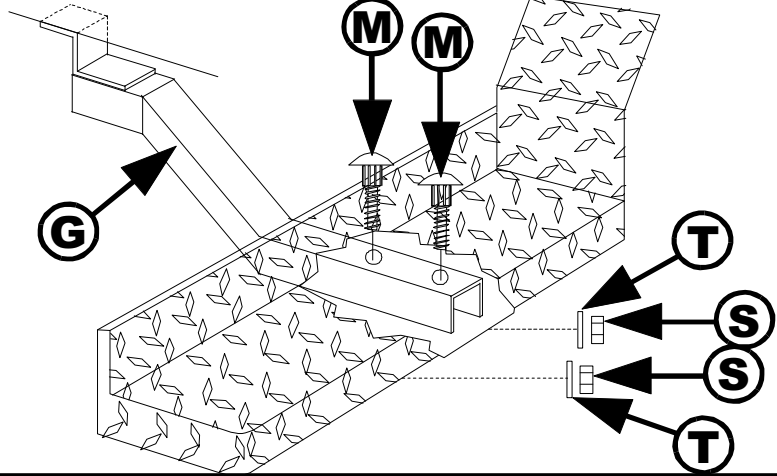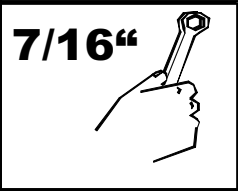

20

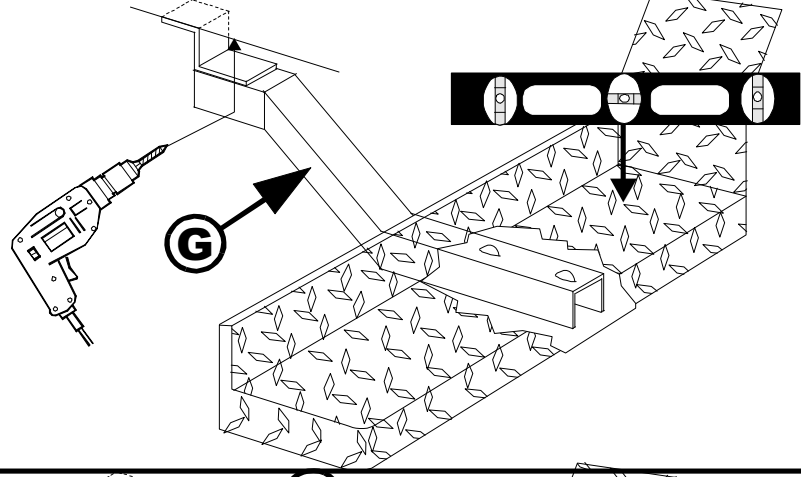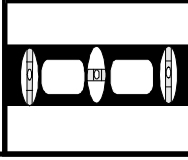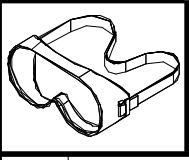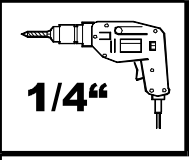

21

