



2010 - Up Camaro Side Vent Installation Instructions

P/N: CC-1008 & CB-1008

Included In Package:

- 6- Aluminum Side vents
- 1- 3M™ Adhesion Promoter Sponge Packet



Tools Needed:

No tools
required




Step 1:

Clean area with
3M™ adhesion
promoter sponge



Step 2:

Peel back one
corner of 3M™
tape.

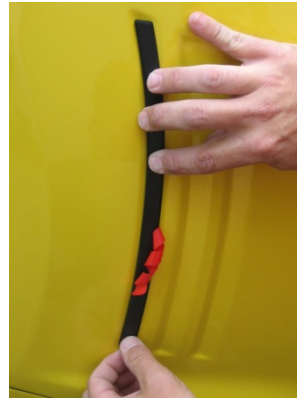

Step 3:

Place vent in desired position. Peel
back 3M™ tape. After installation,
press **FIRMLY** against vents to ensure
adhesion of tape to vehicle surface



Installation complete. **PLEASE NOTE:**
Vents will install as shown in picture to
the left.

The Defenderworx Camaro side vents
are designed to rest in the factory body
lines. The Defenderworx Camaro side
vents will **NOT** have the same contour
line as the Camaro factory body lines.