

## INSTALLATION INSTRUCTIONS

### Boom Mat Damping Material

#### KIT CONTENTS:

#050200 – (2) 12" x 12-1/2" (2.1 sq. ft.) Sheets of Damping Material  
#050202 – (4) 12" x 12-1/2" (4.2 sq. ft.) Sheets of Damping Material  
#050204 – (8) 12" x 12-1/2" (8.3 sq. ft.) Sheets of Damping Material  
#050206 – (6) 12-1/2" x 24" (12.5 sq. ft.) Sheets of Damping Material  
#050210 – (10) 12-1/2" x 24" (20.8 sq. ft.) Sheets of Damping Material  
#050212 – (20) 12-1/2" x 24" (41.7 sq. ft.) Sheets of Damping Material

#### TOOLS:

Boom Mat blade lock knife (050216), Boom Mat installation roller (050218)  
Cardboard/Poster board to use as a template

#### NOTES:

It is not required to clean the area that the Boom Mat is being installed. However, the cleaner the area the stronger the bond will be.

#### SURFACE PREP:

Vacuum installation area to remove all loose debris. Then clean with isopropyl alcohol, soapy water, or a wax/grease remover. Allow sufficient time to dry before installation of Boom Mat products.




#### INSTRUCTIONS:

1. Trim the Boom Mat Material to desired shape and size with your Boom Mat blade lock knife or scissors. A template is helpful when trying to achieve a professional look.



2. Remove the paper backing to expose the adhesive.

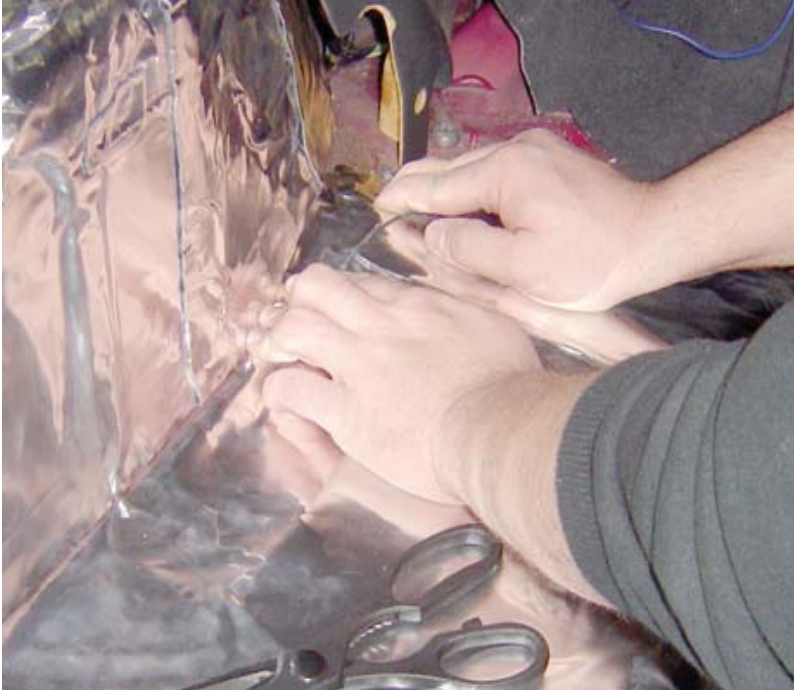

3. Carefully apply to clean and dry area.



4. Once in the proper location, use your Boom Mat installation roller (050218) and apply pressure to ensure a strong bond between Boom Mat and the installation surface.