




**DEVIANT**  
**RACE PARTS**


## 03-07 Cummins Condenser Cover Install Instructions

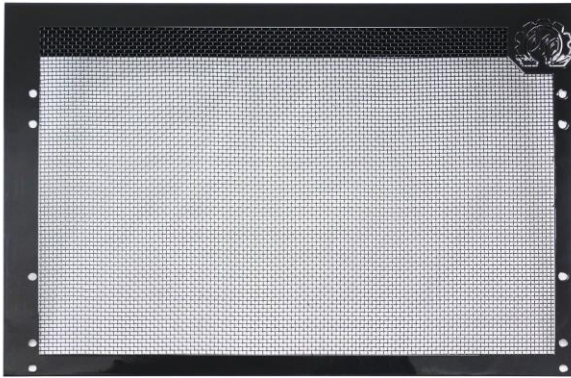

Tools you may need:

- 3/8 Impact or Ratchet
- 13MM Socket
- T 25 Torx Bit • T 20 Torx Bit

1. Start by removing the four 13MM bolts holding the condenser onto the intercooler.

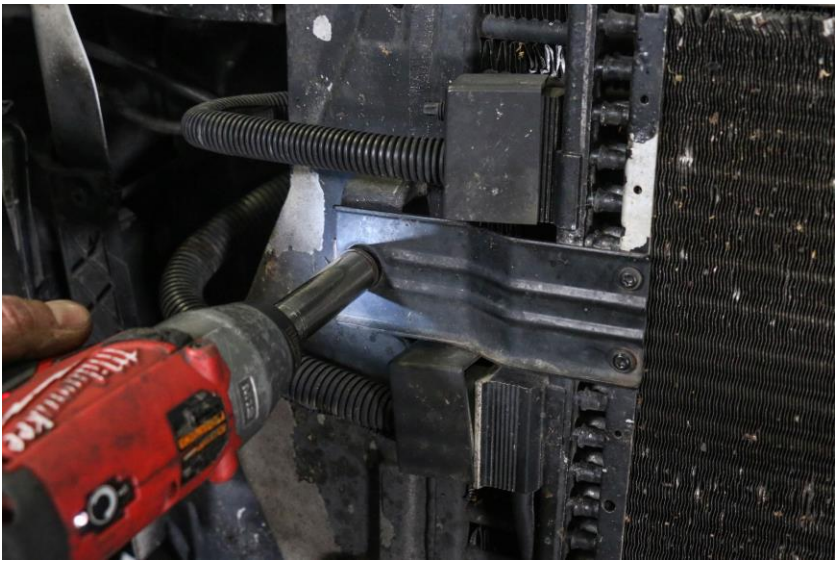


2. Once all four bolts are removed, remove all the torx headed screws holding the four brackets onto the condenser. To get to the bottom screws you will have to lift the condenser up slightly.



3. Place the condenser cover onto the condenser. Reinstall the four brackets with the factory torx screws. Make sure as you tighten the torx screws the mounting hole for the 13MM bolts line up.



4. Reinstall the four 13MM bolts. **Note:** Some condensers may not use all three screws in the bottom brackets as shown below.

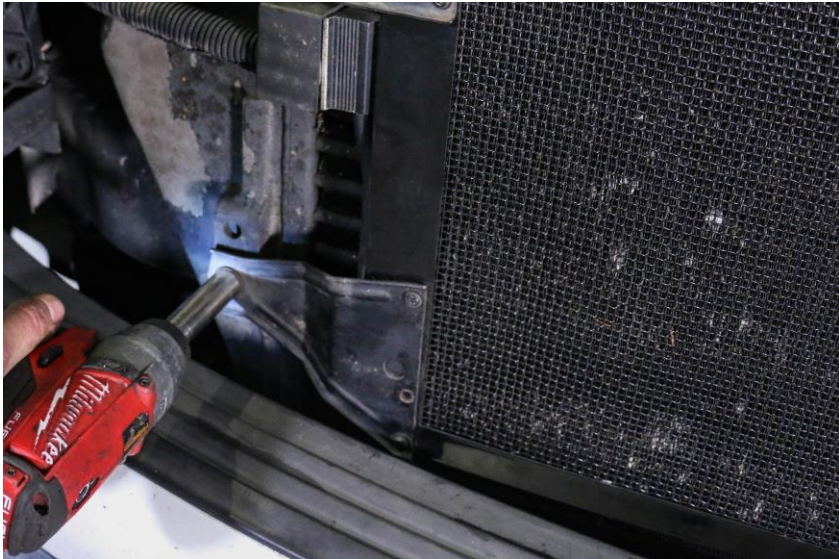

Enjoy your newly protected ac condenser.



Discover other OEM engine and components on our website.