

1. Cut out the appropriate templates, position them on the top and bottom of the housing buckets, and secure them down with tape.

2. Drill small pilot holes and test fit the LED panel assembly before drilling the final mounting hole size to 15/32", (.3281")

 Drill the **BLUE** markings



*DRIVER SIDE TOP*

*1969 CAMARO ORIGINAL TAIL LIGHT HOUSING*





*1969 CAMARO ORIGINAL TAIL LIGHT HOUSING*

*DRIVER SIDE BOTTOM*

1. Cut out the appropriate templates, position them on the top and bottom of the housing buckets, and secure them down with tape.

2. Drill small pilot holes and test fit the LED panel assembly before drilling the final mounting hole size to 15/32", (.3281")


 Drill the **BLUE** markings

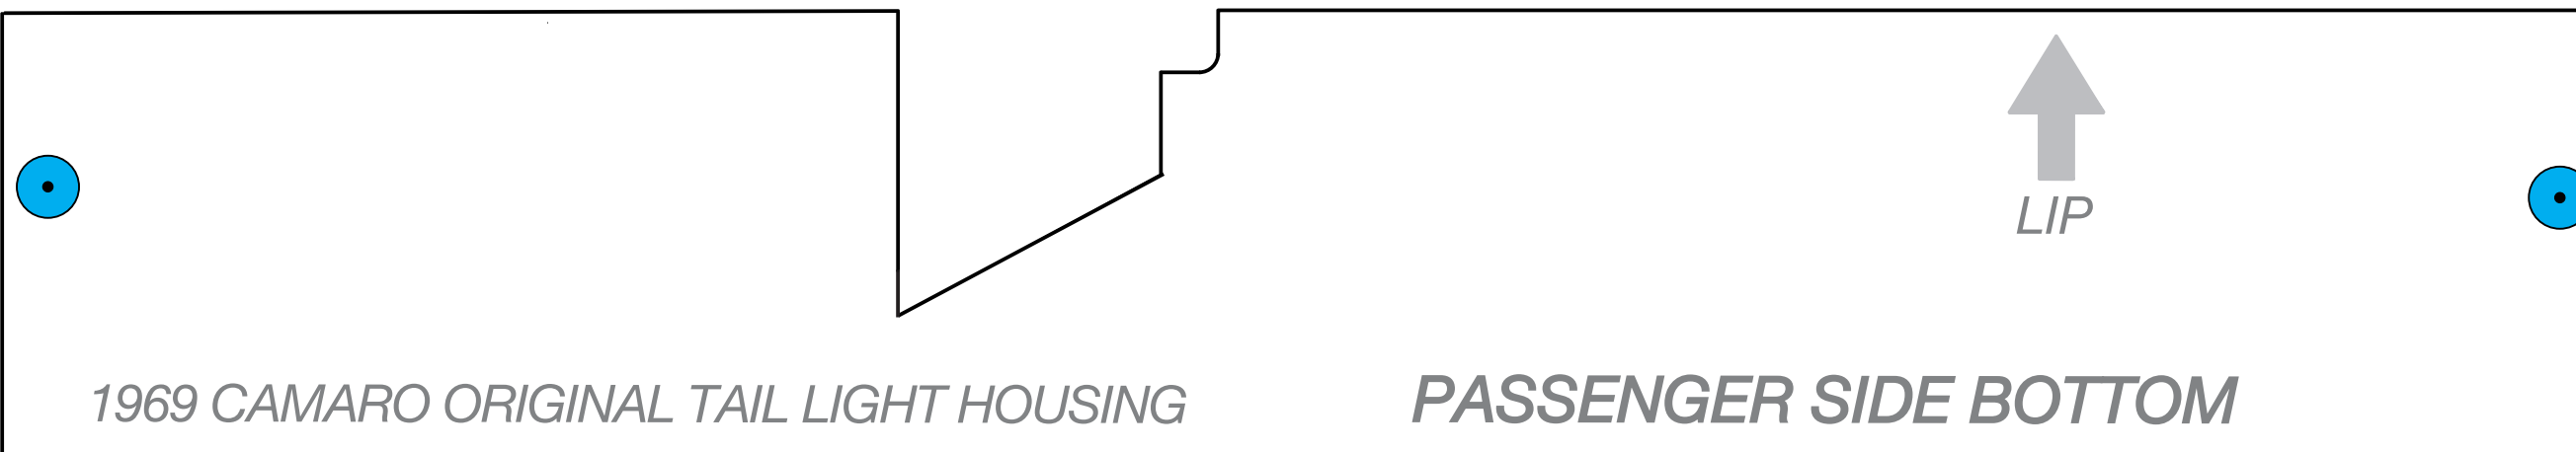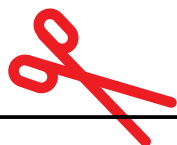

1. Cut out the appropriate templates, position them on the top and bottom of the housing buckets, and secure them down with tape.

2. Drill small pilot holes and test fit the LED panel assembly before drilling the final mounting hole size to 15/32", (.3281")

 Drill the **BLUE** markings

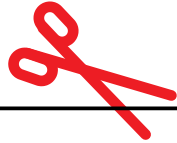

1. Cut out the appropriate templates, position them on the top and bottom of the housing buckets, and secure them down with tape.

2. Drill small pilot holes and test fit the LED panel assembly before drilling the final mounting hole size to 15/32", (.3281")

 Drill the **BLUE** markings

