
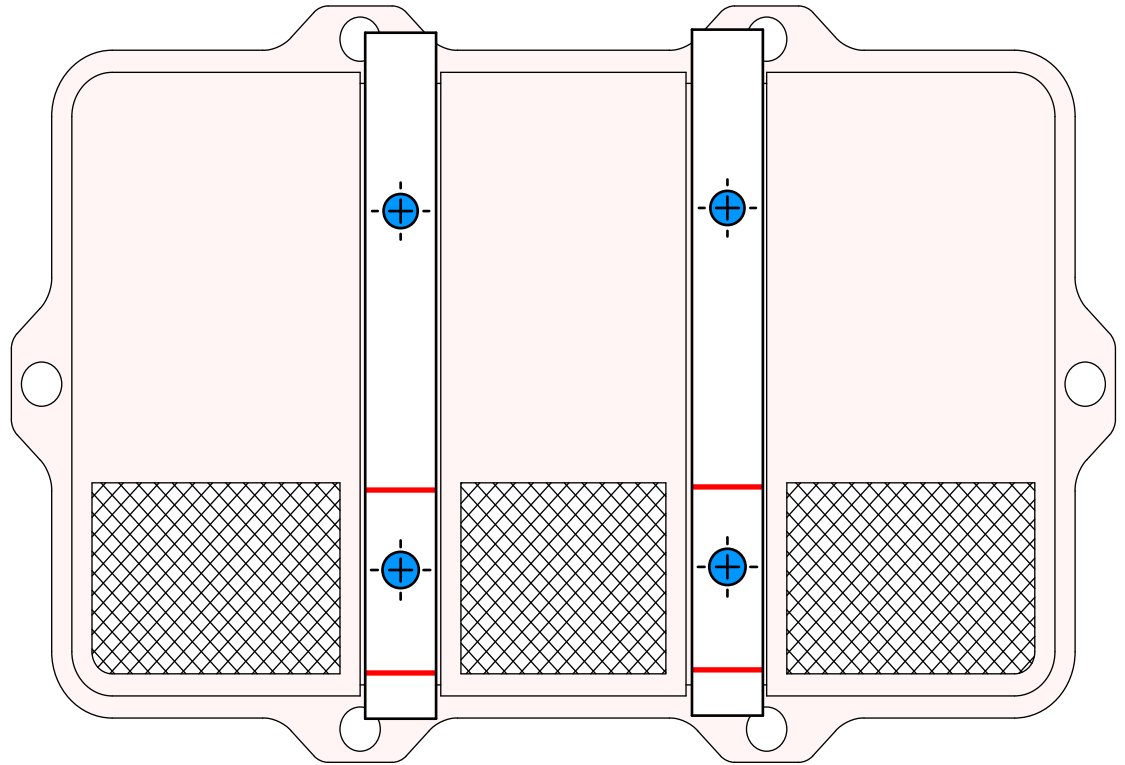



PN 1300170

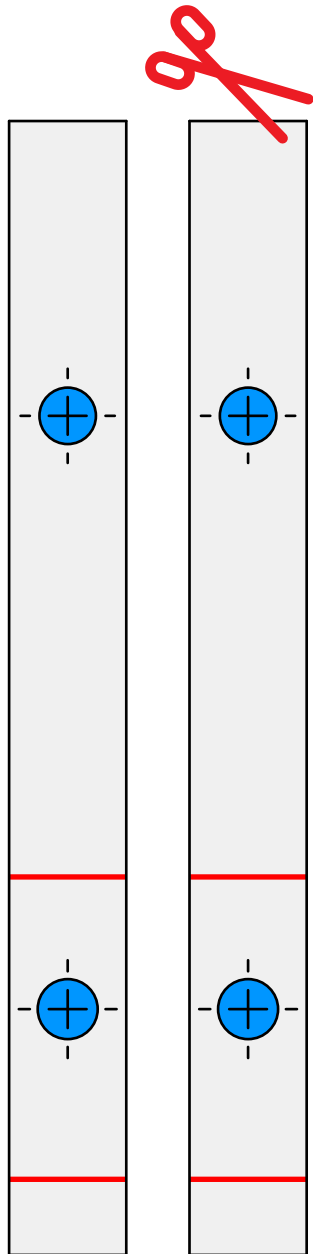

1. Cut out the templates and position them in the channel on the backside of the lens. The red lines on the template should line up with the reflectors on the lens.

2. Drill  marks 5/32" and test fit the LED panel before final mounting.

PLACE TEMPLATE SO RED LINES MATCH UP WITH THE LENS REFLECTOR.

NOTE: TEMPLATES ARE IDENTICAL