


## Wiring Instructions

8. Connect the halo connector to the Switchback driver output. Connect the Switchback driver input to the pigtail. Tap the pigtail wires to the wiring harness. See Wiring Method Diagram below. **The black wire must be grounded before any function will work.**

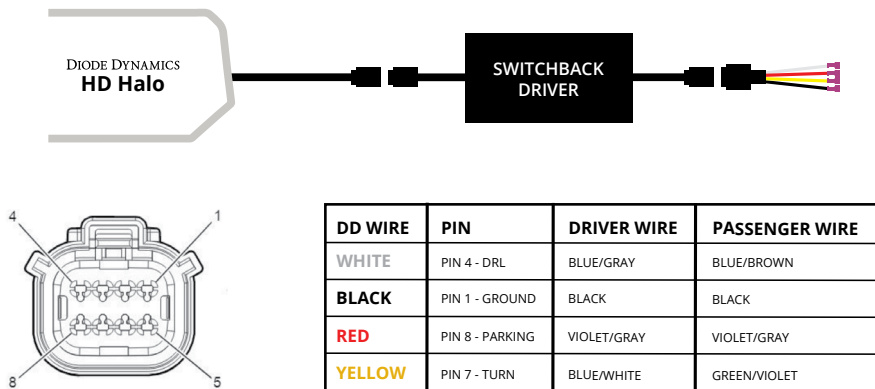

**IMPORTANT: DO NOT plug the LED panel directly into pigtail without the driver. The LEDs must be plugged into driver first to control the power.**

9. Mount driver and tuck all wires. Driver should be mounted outside of headlight for serviceability, in a location away from the engine block to avoid excessive heat buildup.

10. Test thoroughly, reseal headlight and reinstall onto vehicle.

**This installation guide is for the following SKUs:**

**DD2177** Sierra 2016 SB LED Halos

**DD2240** Sierra 2016 Amber LED Halos

# DIODE DYNAMICS

PERFORMANCE LIGHTING TECHNOLOGY

## 2016-2018 GMC Sierra HD LED Halos Installation Guide



# DIODE DYNAMICS

## 2016-2018 GMC Sierra

### HD LED Halos Installation Guide

# DIODE DYNAMICS

## 2016-2018 GMC Sierra

### HD LED Halos Installation Guide

Thank you for your purchase of this unique product for your GMC Sierra! With these computer-designed LED Halos, you will gain a much brighter, more uniform appearance compared to factory LED boards.



**Please note:** Headlights must be opened before proceeding with installation. This process can be completed by heating and prying the lens from the housing. We recommend viewing example videos online to understand the process however, professional installation is strongly recommended. Please contact Diode Dynamics if you need assistance locating an installer.

**Tools Needed:** Phillips screwdriver and double-sided adhesive or epoxy.



1. Before opening the headlight, remove the three Phillips screws holding the HID ballast in place and four Phillips screws around the edge of the headlight. Then remove the HID ballast.



2. After the headlight has been opened, remove the four Phillips screws holding the silver bezel in place. Remove the silver bezel and set it aside on a soft surface.



3. Remove the four Phillips screws holding the factory optic assembly in place. Then remove the factory optic assembly and disconnect the two factory board connectors. These connectors will not be reused, so tuck them out of the way.



4. Reinstall the factory optic assembly using the original screws.



5. Place your new LED Halo on top of the factory optic assembly. We recommend using either double-sided adhesive or epoxy to adhere the halo to the factory optic assembly. Be sure to place whatever adhesive you choose evenly around the halo to ensure secure placement.



6. Route the wire outside of the headlight, sealing any holes you may create. Reinstall the silver bezel using the original screws. Repeat the process for the other headlight.



Check out the collection of accessory lighting we offer.