

Chevrolet Colorado/GMC Canyon LED Pod Ditch Light Kit



Thank you for your purchase of our new LED Pod Ditch Light Kit. CAD-designed to use existing mounting points, this kit is compatible with the 2015+ Chevrolet Colorado and GMC Canyon. Basic installation instructions are included below. **Please contact us if you have any questions.**

COMPUTER DESIGNED
OEM FITMENT



1. Open the hood and mark the location of the hood hinges with tape and tape the edges of the hood to prevent scratching.



2. Working on one side of the vehicle at a time, loosen the two 13mm flange nuts as necessary to fit the bracket (removing the nuts completely is not required). Be sure to support the rear edge of the hood during the install.



3. Place the ditch light bracket under the hinge and align the holes with hood hinge. Adjust the bracket to leave a slight gap at the back of the hood; it should not touch the plastic cowl.

See back for further instructions.




4. Secure the bracket and hood hinge by tightening the factory nuts, ensuring the hood hinge lines up with the tape.

Repeat the steps on the other side of vehicle.



5. Verify bracket and hood fitment. Carefully close the hood ensuring no contact is made with the bracket and the plastic cowl. Confirm the hood latches properly and gaps are uniform with the fenders. Turn on windshield wiper to confirm clearance from the ditch light bracket. If fitment is not satisfactory, adjust hood and/or bracket position as desired.

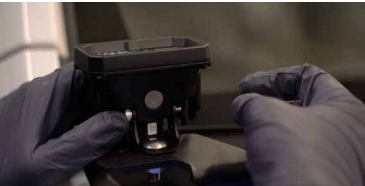

6. Once the bracket is mounted to the hood, refer to the Universal Bracket Info/Mounting Guide to mount your pod onto the bracket.

A small cutout has been designed on each bracket to aid in wire routing. Use the included zip-ties to secure the wiring away from the hood hinge.

NOTE: Do not use automatic car washes with this kit installed.

Please contact **Diode Dynamics** should you have any questions about the installation or wiring process, at **314-205-3033** (10a-5p CST) or **contact@diodedynamics.com**.

NEED MORE HELP?

Scan the QR code to link to our installation video online!

We've taken the time to test our products on your vehicle. We can guarantee compatibility and fitment the first time – no guessing game! If you need more help with installation, watch our step-by-step video to walk you through the process.

YouTube



This installation guide is for the following SKUs:

DD6645 Colorado/Canyon Ditch Light Brackets
 DD6646 Colorado/Canyon Ditch Light Kit SS3 Sport White Combo
 DD6647 Colorado/Canyon Ditch Light Kit SS3 Sport Yellow Combo
 DD6648 Colorado/Canyon Ditch Light Kit SS3 Pro White Combo
 DD6649 Colorado/Canyon Ditch Light Kit SS3 Pro Yellow Combo

DD6650 Colorado/Canyon Ditch Light Kit SSC2 Sport White Combo
 DD6651 Colorado/Canyon Ditch Light Kit SSC2 Sport Yellow Combo
 DD6652 Colorado/Canyon Ditch Light Kit SSC2 Pro White Combo
 DD6653 Colorado/Canyon Ditch Light Kit SSC2 Pro Yellow Combo

**100% SATISFACTION
 GUARANTEE**

