



Installation Instructions

Spider Rear Netting

DD-N-JK4-07RS


Jeep JK unlimited 2007-up

J4NN07RS**



-Thank you for purchasing a Dirtydog 4x4 netting system. Please read these instructions fully to familiarize yourself with the installation. You should have 3 main pieces. Right side, left side, and backside. Set aside 45 minutes for the first time you install your netting. Installation is done easiest with the hard top removed. The soft top can be opened or closed.

Step 1

Start with the back piece first. Install the short straps on the side roll bars first. For correct positioning the fifth strap from the bottom attaches at the top of the roll bar. Each additional strap installs down the roll bar. The last strap connects to the rear fender with the strap in the lower photo. This strap connect to the under side of the fender lip using the longer bolts provided. These will thread into the hardtop nut if you have them or you can use the nut and washer we have provided

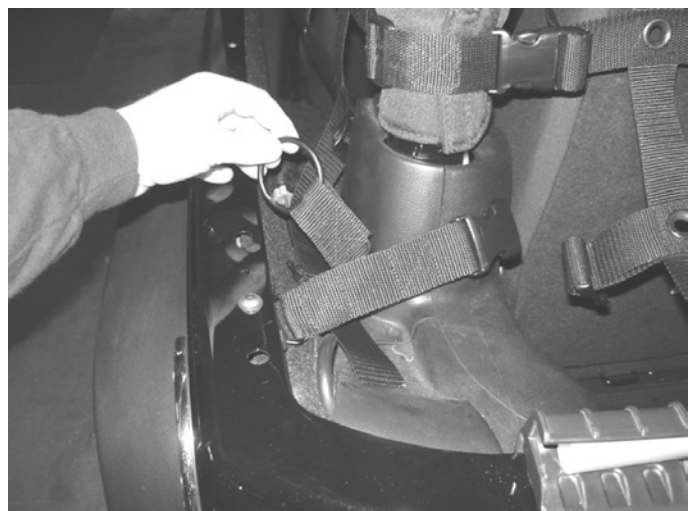

Slide each half of the tailgate bar in the last row as shown in the photo. This bar will connect at the center of the net and then the whole bar is clipped into soft-top tailgate clips. (Clips can be purchased from us or your local dealer.) This last row is optional and can be cut off if not needed.

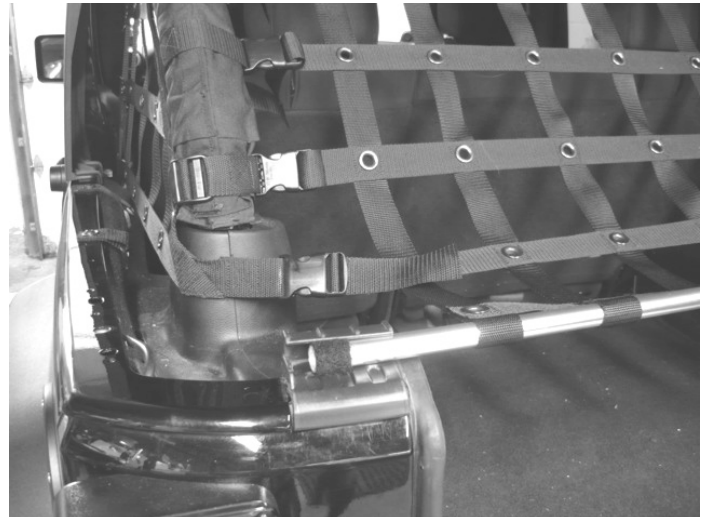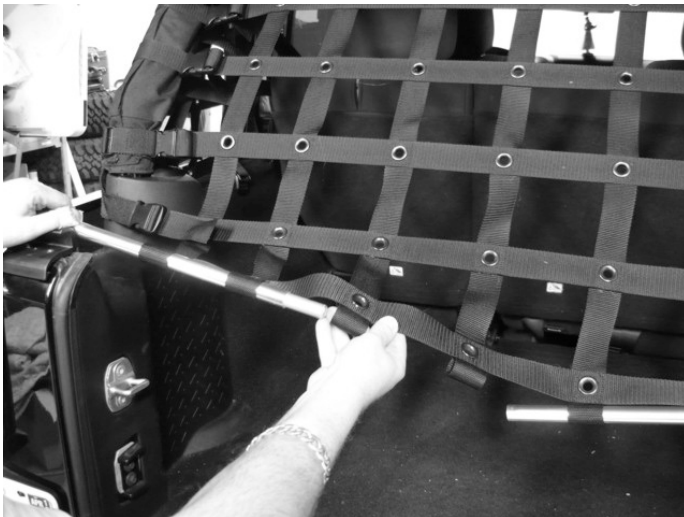

The strap at the very top of the rear piece wraps around the top of the vertical roll bar comes toward the outside wraps back around and connects into the ladderloc clip. See photo



STEP 2


Start with either side. There are 4 rings that attach with straps. 2 rings attach sharing the straps you already installed on the rear section (white arrows) and 2 rings that attach with additional straps provided (black arrows). The bottom



Next is to install is the attaching strap with the nut and washer provided. This is the strap that has a single ring on one end. This attaches to the existing bolt stud that you will find under the carpet directly behind the rear door



The side straps can now be installed on the loop in the order shown in the photo. Tighten straps 1 and 2 evenly so net is pulling equally in both directions. Followed by straps 3 and 4.

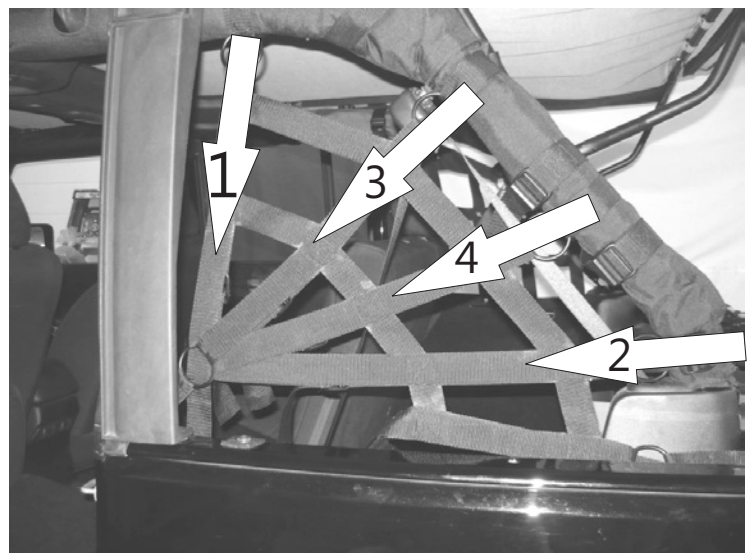

The last strap at the bottom can now be installed using the loop at the rear strap that you installed at the beginning.



Inside view



Any excess straps that hang out can be tucked in under itself. Adjust and tighten straps as needed to even out the net so it is positioned properly. Your net comes with a 3 year warranty against manufacturing defects. Cuts, abrasions, sun faded items are not covered under the warranty.

Shop for other soft tops and hard tops on our website.