


**17 SKUs covering over 24 million vehicles**



- Holds the spare tire in place under the vehicle
- **DORMAN ENGINEERED:** Coated finish to prevent rust and corrosion
- **COMPLETE KIT:** Includes mounting hardware for a complete installation (where applicable)

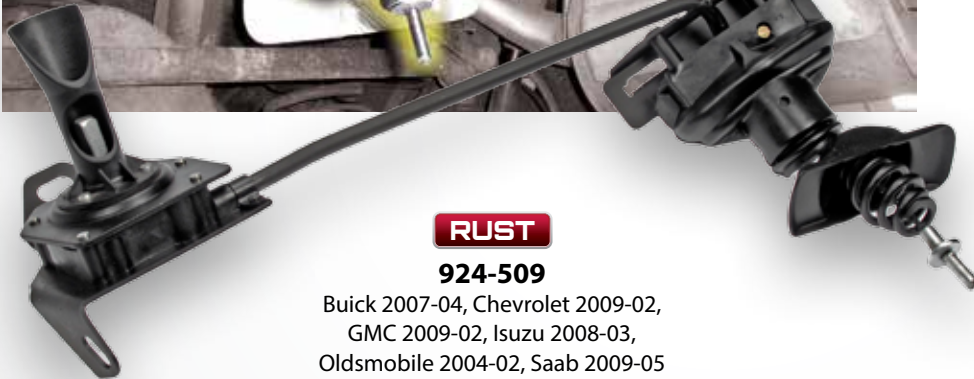


**RUST**

**924-509**

Buick 2007-04, Chevrolet 2009-02,  
 GMC 2009-02, Isuzu 2008-03,  
 Oldsmobile 2004-02, Saab 2009-05

**Failure Mode:**

- Rust and corrosion
- Failure results in hoist not releasing the spare tire

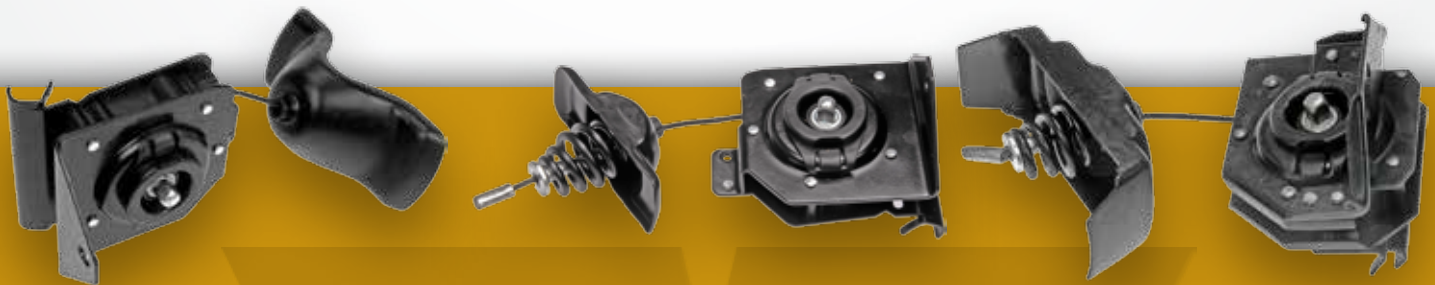

**924-502**

Chevrolet 2008-03,  
 GMC 2008-03

**RUST**

**924-510**

Chevrolet 2012-99,  
 GMC 2012-99

**924-517**

Cadillac 2003, Chevrolet 2013-03,  
 GMC 2013-03



## APPLICATIONS

SPARE TIRE HOISTS	
Applications*	Dorman #
Chevrolet S10 2004-94, GMC Sonoma 2004-94	<b>924-501</b>
Chevrolet 2008-03, GMC 2008-03	<b>924-502</b>
Buick 2007-04, Chevrolet 2009-02, GMC 2009-02, Isuzu 2008-03, Oldsmobile 2004-02, Saab 2009-05	<b>924-509</b>
Chevrolet 2012-99, GMC 2012-99	<b>924-510</b>
Ford Explorer 2010-06, Mercury Mountaineer 2010-06	<b>924-511</b>
Ford Escape 2012-05, Mercury Mariner 2011-05	<b>924-512</b>
Chrysler 2007-00, Dodge 2007-00, Plymouth 2000	<b>924-513</b>
Dodge Durango 2003-98	<b>924-515</b>
Cadillac 2003, Chevrolet 2013-03, GMC 2013-03	<b>924-517</b>
Cadillac SRX 2009-04	<b>924-518</b>
Buick Enclave 2012-08, Chevrolet Traverse 2012-09, GMC Acadia 2012-07, Saturn Outlook 2010-07	<b>924-520</b>
Cadillac 2012-07, Cadillac 2002, Chevrolet 2012-07, Chevrolet 2002-01, GMC 2012-07, GMC 2002-01	<b>924-522</b>
Chevrolet 2012-03, GMC 2012-03	<b>924-523</b>
Toyota Sienna 2003-98	<b>924-524</b>
Toyota Sienna 2013-10	<b>924-525</b>
Ford F-150 2004-00	<b>924-526</b>
Ford Econoline 2012-05	<b>924-527</b>