



It is recommended to have all repairs to the drivetrain of your vehicle conducted at a professional drivetrain repair shop.

**NOTICE:** Never clamp the driveshaft tubing with a vice. Using a vice to clamp the driveshaft tubing may cause damage to the driveshaft. Only clamp on the yoke ends.

**IMPORTANT:** In order to maintain proper balancing after installation, it is recommended to index mark the positions of the driveshaft components relative to the driveshaft tubes prior to disassembly.

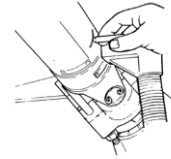

Prior to installing the driveshaft, it is recommended to confirm the universal joints can rotate freely without binding. After installation it is recommended to check the balance of the driveshaft prior to operating the vehicle.



**An improperly balanced driveshaft will lead to premature failure of the driveshaft center support bearing assembly; this will VOID the Dorman Limited Lifetime Warranty!**