

## Installation Instructions

### T-Connector



Hyundai Santa Fe

#### **⚠ WARNING**




**ALWAYS** read and follow all warnings and instructions included with purchase before beginning installation. Keep for future reference.

**DO NOT** exceed lower of towing manufacturing rating (including in your vehicle owner's manual) or specific amperage ratings stated on product.

**ALWAYS** read, understand and follow all warnings and instructions printed on tow vehicle's battery.

**ALWAYS** wear safety glasses and use all safety precautions during installation.

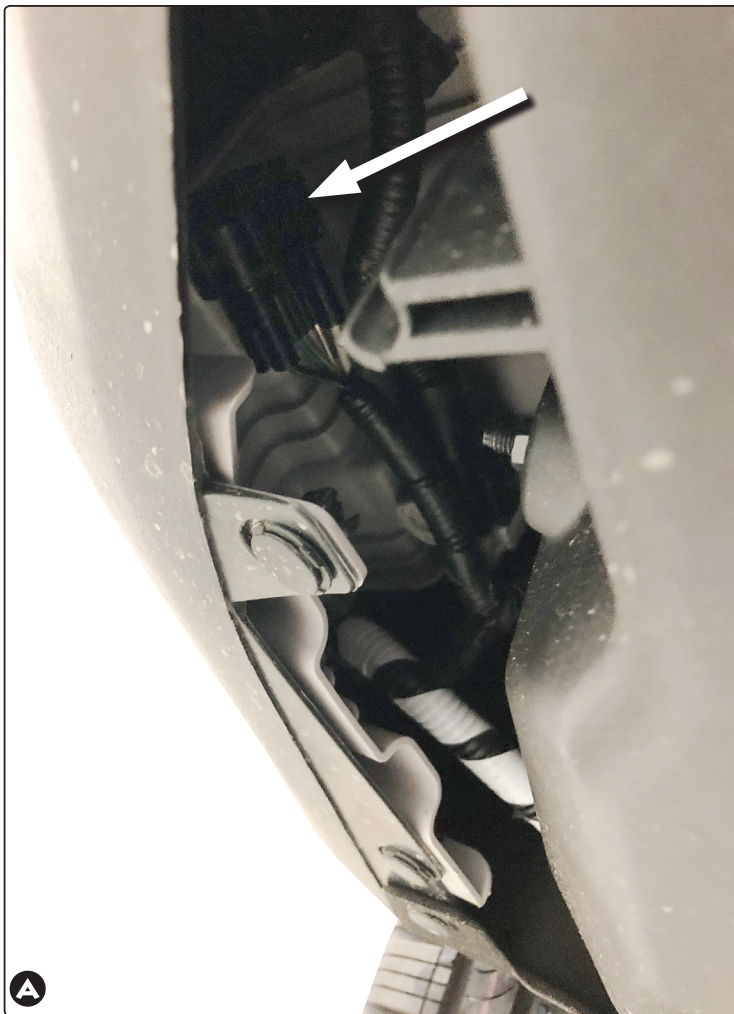

#### **TOOLS REQUIRED:**

Trim Panel Puller, Test-probe

1. Locate tow vehicle's trailer harness connector. This harness is located under the vehicle, behind the rear bumper, on the driver's side of the vehicle. **A**
2. Remove protective cap from connector. Store protective cap in glove compartment along with installation instructions. Check to see that the mating surfaces of the connectors are free of dirt and clean if necessary. Insert the 12-Pin Tow-Plug Adapter and lock into place. Ensure that the connectors are fully inserted with locking tabs in place.
3. Underneath the vehicle, determine a suitable mounting point behind the rear bumper fascia on the driver's side. Mount the T-Connector black box using double-sided tape provided. Make sure that the trailer's wire harness has adequate length to reach this point.

#### **⚠ WARNING**

When mounting under the vehicle, always make sure that the unit is in a protected area and can not be damaged from road debris or objects driven over.

#### **⚠ WARNING**

Make sure module is mounted so that the epoxy side of the module is pointed towards the ground to prevent any water buildup."

4. Route the T-Connector harness rearward to the back of the fascia of the bumper. Secure the remainder of the T-One® T-Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would pinch, cut or melt the wire.
5. Mount the 4-Flat end in an accessible location with a bracket or electrical box (not included).

#### **⚠ WARNING**

All connections must be complete for the T-One® T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.



#### **⚠ WARNING**

Overloading circuits can cause fires. **DO NOT** exceed stated product ratings. Read vehicle's owner's manual & instruction sheet for additional information.