

Installation Instructions

Part Numbers:


24909

60340

77296

29175 UH

NISSAN VERSA NOTE

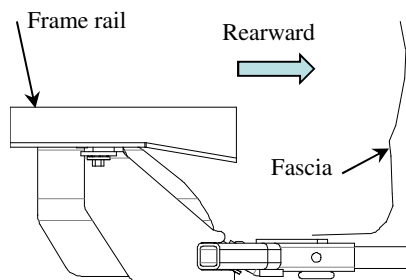

Drawbar Kit:
3592

Drawbar must be used in the **RISE** position only.

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

2000 LB (908 Kg) Max Gross Trailer Weight

200 LB (90.8 Kg) Max Tongue Weight

Hitch Shown In Proper Position

Equipment Required: Galvanic isolators (provided), lubricant or soapy water, tin snips,

Fastener Kit: 24909F

Wrenches: M10, 11/16, & 3/4

Drill Bits: 1" hole saw

Trim heat shield as shown.
Access hole under heat shield passenger side only

Wiring Access Location: PC3, 4

Accessory Rating

A


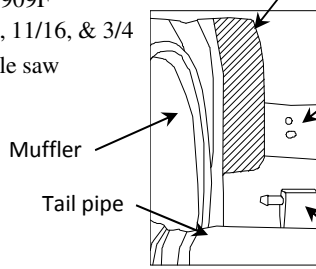


Figure 3

Trim heat shield as shown.

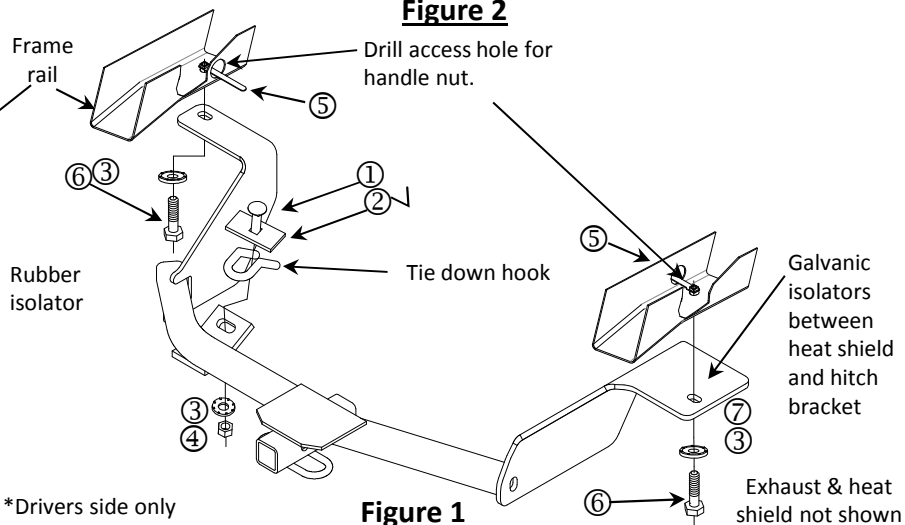

*Drivers side only

Figure 1

①	Qty. (1)	Carriage bolt 1/2-13 X 2.00 GR5	⑤	Qty. (2)	HANDLE NUT 1/2 -13
②	Qty. (1)	Spacer 1/4" x 1.50 x 3.00	⑥	Qty. (2)	BOLT 1/2 -13
③	Qty. (3)	Conical washer 1/2"	⑦	Qty. (2)	GALVANIC ISOLATOR
④	Qty. (1)	Hex nut 1/2-13			

1. Lower exhaust at the rubber isolator. Spraying a lubricant or soapy water on the metal hanger rod and the rubber isolator helps removal.
2. Remove rearward m6 bolt holding heat shield in place. Return to owner. Trim heat shield for access to hole on passenger frame rail. Fig 3
3. Remove the black box (charcoal canister) from frame by removing M8 bolt and sliding the box forward.
4. Using 1" hole saw, drill a access hole into side of driver and passenger side frame rail inline with the existing hole to insert handle nut. Fig 2
5. Install 1/2" handle nuts into frame thru drilled holes.
6. Install the 1/2 carriage bolt and spacer as shown in Fig 1., to the tie down hook.
7. Apply the clear galvanic isolators to the passenger side bracket as shown. Fig 1
8. Raise the hitch into position and install conical washer and nut to tie down attachment, do not tighten down at this point. Fig 1.
9. Feed the 1/2 fasteners through slots on both sides and install fasteners as shown Fig 1. Note: on passenger side sandwich the heat shield between the frame rail and the hitch.
10. Center the hitch on the vehicle.
11. Torque all fasteners to specifications shown below.
12. Reinstall exhaust.

Tighten all 1/2-13 GR5 fasteners that use a handle nut with torque wrench to 50 Lb.-Ft. (68 N*M)

Tighten all 1/2-13 GR5 fasteners with torque wrench to 75 Lb.-Ft. (102 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.