

# Installation Instructions

Part Numbers:


**24922**

**60354**

**77309**

## Volkswagen Beetle & Beetle Convertible

(excludes R-Line and GSR models)

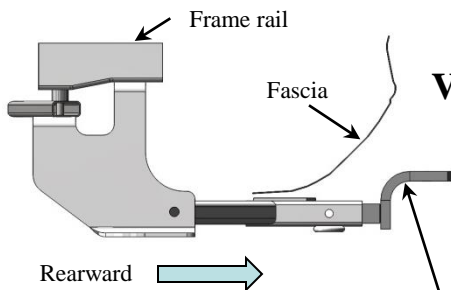

**Drawbar Kit:**

3593

Drawbar must be used in the **RISE** position only.

**Do Not Exceed Lower of Towing Vehicle Manufacturer's Rating or**

**2000 LB (908 Kg) Max Gross Trailer Weight**

**200 LB (90.8 Kg) Max Tongue Weight**

**Hitch Shown In Proper Position**

Wiring Access Location: PC3 & 4


Accessory Rating

A

**Equipment Required:**

**Fastener Kit:** 24922F

**Wrenches:** 18mm, 11/16"



Reverse pullwire technique

Example of pullwire procedure

Figure 2.

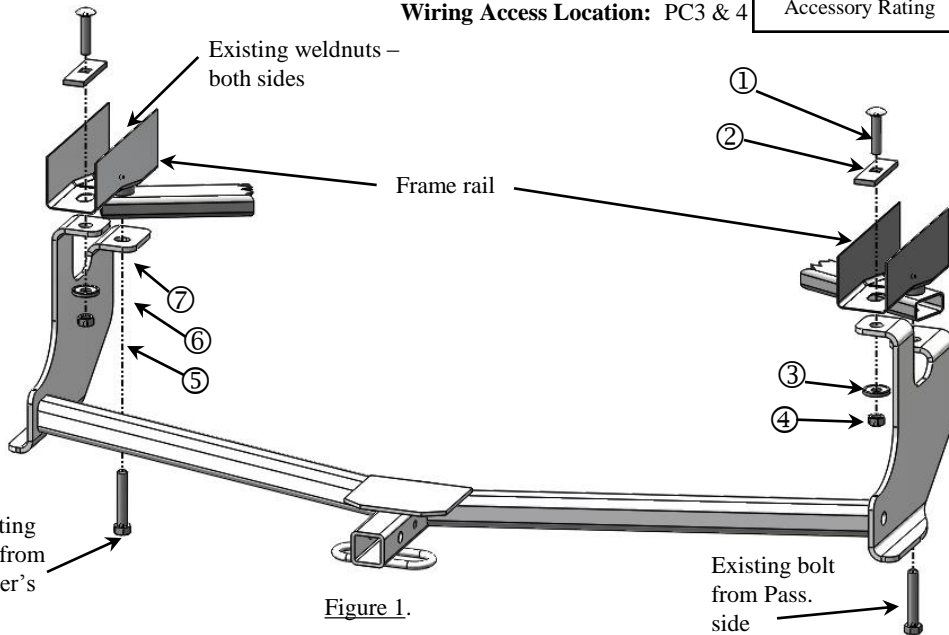


Figure 1.

①	Qty. (2)	7/16-14 X 2.00 Carriage bolt GR5	⑤	Qty. (2)	7/16 Pullwire
②	Qty. (2)	Spacer .25 X 1.00 X 3.00			
③	Qty. (2)	7/16" Conical washer			
④	Qty. (2)	7/16-14 Hex nut			

1. Remove existing M12 bolt from driver and passenger side frame rails. Retain for use in step 4.
2. Install 7/16 carriage bolt and spacer as shown using the reverse pullwire method as shown in Fig. 2. Leave pullwires attached.
3. Raise hitch into position as shown, during this process, feed pullwires through the rearward holes on the hitch.
4. Re-install the bolts removed in step 1 through the forward holes in the hitch.
5. Using forward bolts to hold the hitch in place remove pullwires and attach conical washers and hex nut.
6. Tighten all fasteners to the required torque specification.

Tighten all M12 CL10.9 fasteners with torque wrench to 92 Lb.-Ft. (120 N\*M)

Tighten all 7/16 GR5 fasteners with torque wrench to 50 Lb.-Ft. (68 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.