

Installation Instructions

Kia Soul

Part Numbers:

24839

60256

24792 (U-Haul)


77230

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

2000 LB (908 Kg.) Max Gross Trailer Weight

200 LB (90.8 Kg.) Max Tongue Weight

Wiring Access Location: SUV1, SUV2

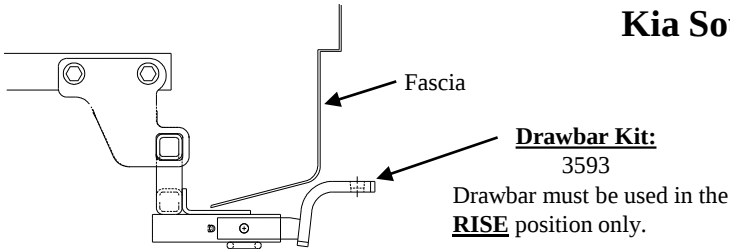

Hitch Shown In Proper Position



Equipment Required: Torque wrench

Fastener Kit: 24839F

Wrenches: 17mm Socket and Ratchet Wrench

Phillips screw driver

Drill Bits: None

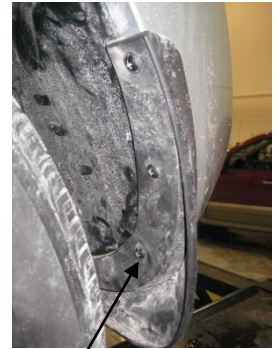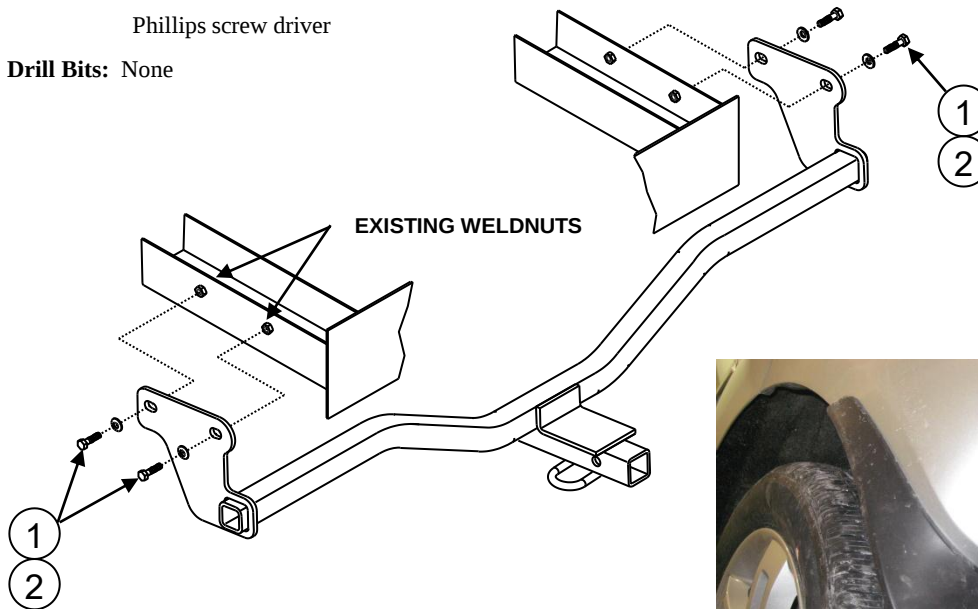

REMOVE FASTENERS

INNER WHEEL WELL / SPLASH GUARD

①	Qty. (4)	Hex Bolt, M10 x 1.25 x 30mm CL8.8	②	Qty. (4)	Conical Toothed Washer 3/8"
---	----------	-----------------------------------	---	----------	-----------------------------

1. Lower exhaust by removing the rubber exhaust hanger.
2. Remove the inner wheel well and splash guards from vehicle, both sides.
3. Remove tow hook from passenger's side frame rail and return to vehicle owner.
4. Raise hitch into position and install the M10 bolts and conical toothed washers as shown.
5. Tighten all fasteners using a torque wrench as specified below.
6. Reinstall muffler hanger.
7. Reinstall the inner wheel well and splash guards.

Tighten all M10 CL8.8 fasteners with torque wrench to 42 Lb.-Ft. (57 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

Looking for dependable trailer hitches and towing? Rely on Draw-Tite for quality and long-lasting products.