


Installation Instructions

Part Numbers:

Chevrolet Cruze Buick Verano

24882
60299
77269

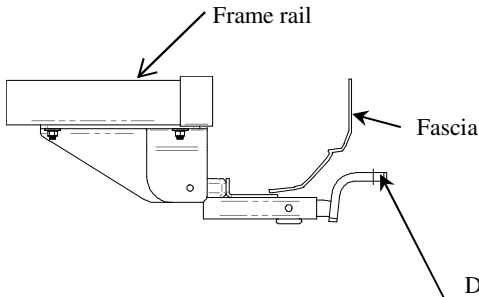

Hitch Shown In Proper Position

Drawbar Kit:
3593

Drawbar must be used in the **RISE** position only.

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

2000 LB (908 Kg) Max Gross Trailer Weight
200 LB (90.8 Kg) Max Tongue Weight


Equipment Required: Pliers, Lubricant

Fastener Kit: 24882F

Wrenches: 13mm, 11/16"

Wiring Access Location: Cruze PC3, 4
Verano

**Note: Fasteners typical
both sides**

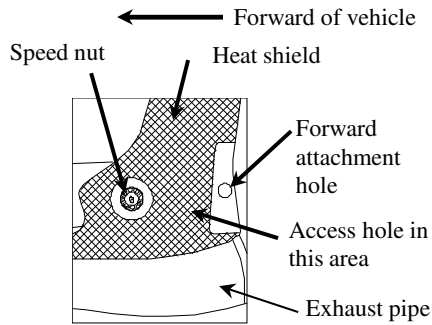

Speed nut (3) this one located forward or exhaust. Access hole under the heat shield in this area.

Figure 2.


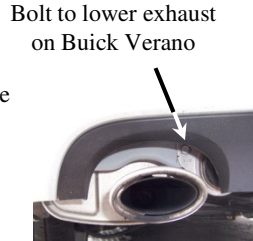


Figure 1.

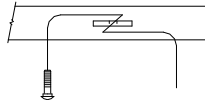

Feed pull wire into attachment hole and out access hole as shown

Figure 3.

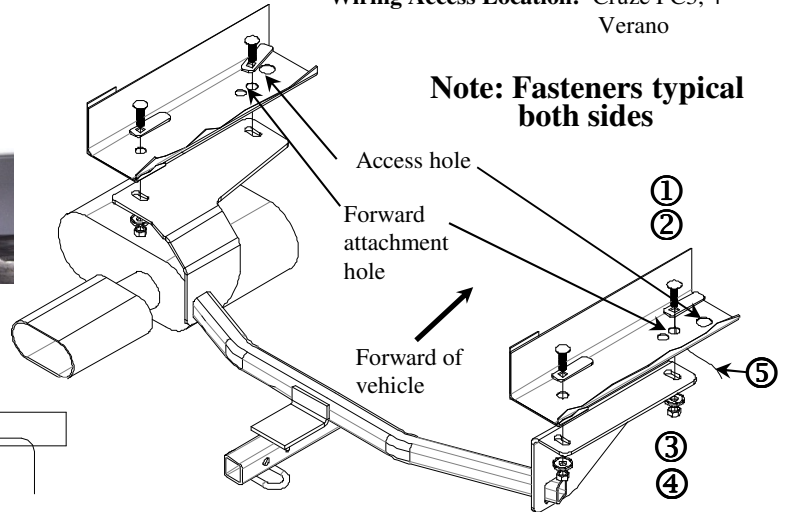


Figure 4.

Buick Verano shown

①	Qty. (4)	Carriage Bolt – 7/16-14 x 1.250 GR5	④	Qty. (4)	Hex Nut – 7/16-14
②	Qty. (4)	Spacer .125 X .900 X 3.00	⑤	Qty. (4)	Pull Wire
③	Qty. (4)	Conical Toothed Washer – 7/16"			

Note: Buick Verano has a different exhaust configuration. Due to this issue the heat shield needs to be lowered or trimmed to allow access to the attachment holes in the frame rail. Driver's side only.

1. Lower exhaust on Buick Verano by removing the bolt on the exhaust hanger. See Figure 1. Remove exhaust hanger bracket (Spraying a lubricant on the metal hanger rod and the rubber isolator helps removal).
2. Buick Verano the heat shield needs to be lowered or trim to allow access to the attachment holes in the frame rail. Remove (3) speed nuts using a screwdriver or pliers, (2) located at rear of heat shield and (1) forward of muffler. See Figure 2.
3. Install fasteners (item 1 & 4) using the pull wire provided. Leave pull wire attached. On Buick Verano driver's side, gain access to hole by trimming heat shield or lowering until fastener are in place. See Figure 3.
4. Raise hitch into position, by raising the hitch over the exhaust (on Buick Verano slide the hitch into position over the exhaust from the rear of the vehicle). Sandwiching the heat shield between the hitch and the frame rail on the Buick Verano. Feed pull wire through slots on the hitch.
5. Push the hitch against the frame rails and remove pull wires, and attach conical washers and nut (be careful not to push fastener back into frame rail). Center hitch on vehicle. See Figure 4.
6. Torque all fasteners to specifications shown below.
7. Reinstall exhaust hanger and heat shield if lowered.

Tighten all 7/16-14 GR5 fasteners with torque wrench to 50 Lb.-Ft. (68 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.

Looking for dependable trailer hitches and towing? Rely on Draw-Tite for quality and long-lasting products.