

Installation Instructions

Part Numbers:


Chrysler Town & Country
Chrysler Voyager
Dodge Caravan
Plymouth Voyager
(Fits all models 2WD, 4WD,
Short & Long Wheel Base)

36296

06369

90165

39602

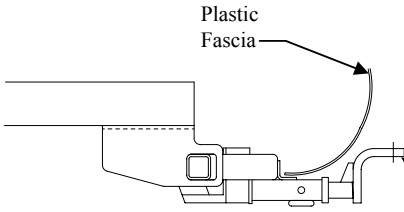

Drawbar Kit:

36071

Drawbar must be used in the **RISE** position only.

**Do Not Exceed Lower of Towing Vehicle
 Manufacturer's Rating or**

3500 LB (1589 Kg.) Max Gross Trailer Weight

300 LB (136 Kg.) Max Tongue Weight

Wiring Access Location: SUV1, SUV2


Hitch Shown In Proper Position

Equipment Required:

Fastener Kit: F36296

Wrenches: 18mm, 19mm

Drill Bits: None

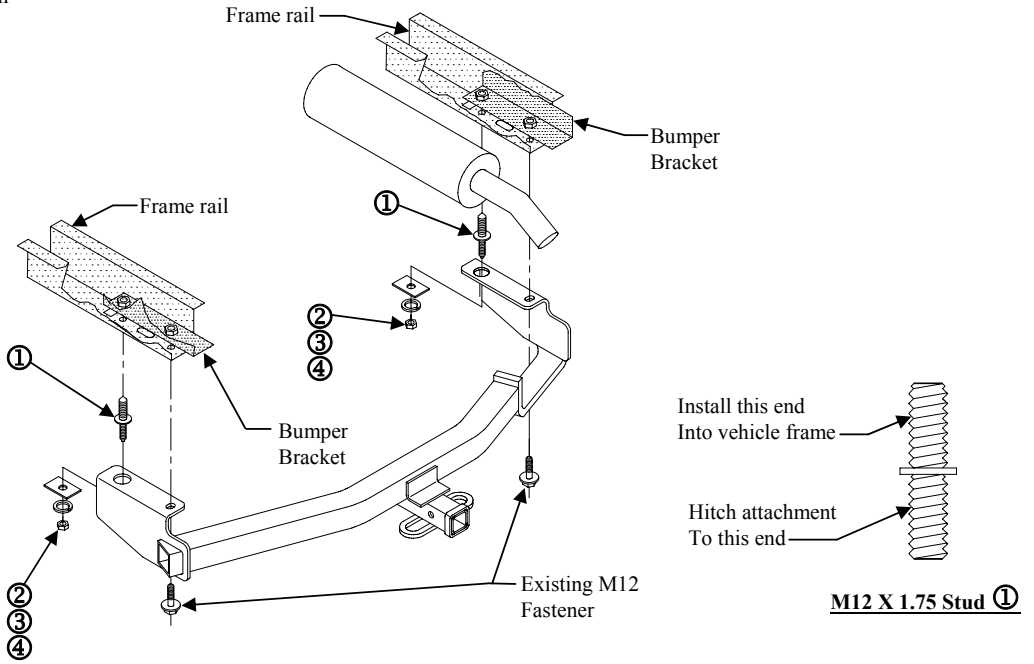

M12 X 1.75 Stud ①
 Shown in Position

M12 X 1.75 Stud ①

①	Qty. (2)	Stud – M12 x 1.75	③	Qty. (2)	Lock Washer – ½"
②	Qty. (2)	Spacer – 3/16 x 1-1/2 x 2	④	Qty. (2)	Hex Nut – M12 x 1.75

1. Remove only the front bumper bolts, both sides.
2. Install the M12 X 1.75 stud into position, until seated to frame, where bumper bolt was removed, both sides. Final tightening will occur when nuts are tightened.
3. Remove rear bumper bolts and place hitch into position as shown.
4. Install remaining fasteners.

Tighten all M12 x 1.75 fasteners with torque wrench to 75 Lb.-Ft. (102 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.