

# Installation Instructions


## Honda Odyssey

Part Numbers:

36417

06398

90153

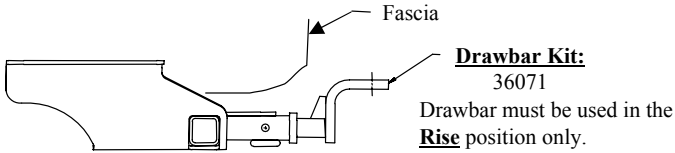

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

**3500 lb, 1589 kg Max Gross Trailer Weight**

**300 lb, 136 kg Max Tongue Weight**

### Hitch Shown In Proper Position

#### Equipment Required:


**Fastener Kit:** 36417F

**Wrenches:** 18mm

**Drill Bits:** None

**Hitch Requires 1/2" Pin and Clip.**

**Wiring Access Location:** SUV3

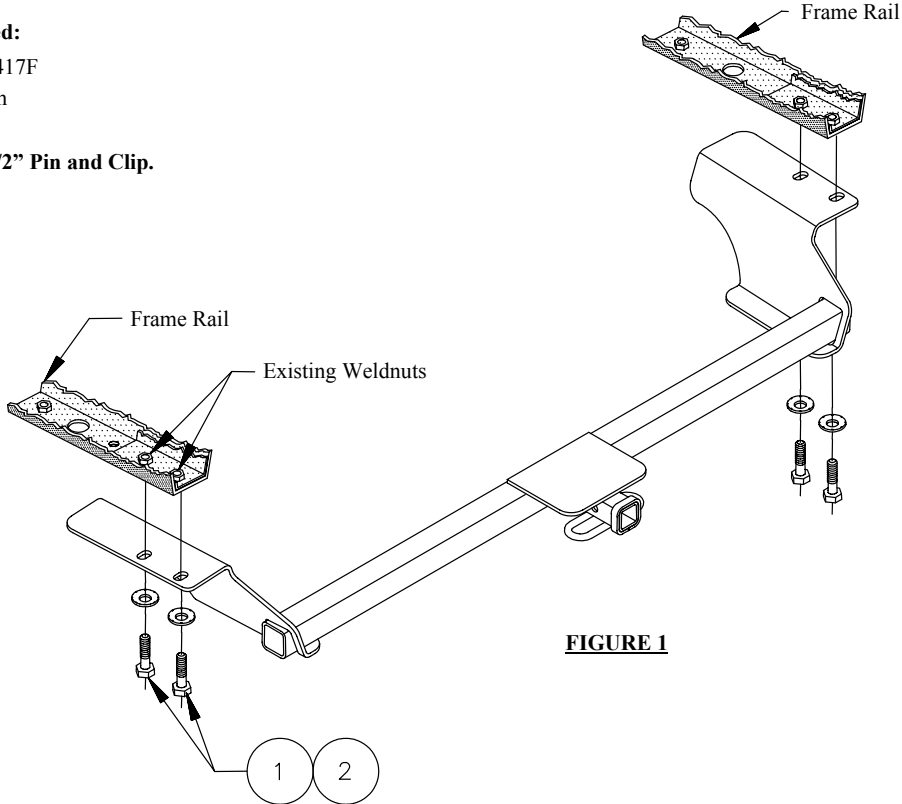

**FIGURE 1**

### Fasteners Typical Both Sides

①	Qty. (4)	M12 X 1.25 X 35mm CL8.8 Bolt	②	Qty. (4)	Conical Toothed Washer
---	----------	------------------------------	---	----------	------------------------

1. Lower vehicle exhaust.
2. Raise hitch into position
3. Install fasteners as shown in Figure 1.
4. Re-install vehicle exhaust.

Tighten all M12 CL8.8 fasteners with torque wrench to 76 Lb.-Ft. (103 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.