

# Installation Instructions

Hyundai Santa Fe


Kia Sorento

Part Numbers:

**36511**

**90212**

**06133**

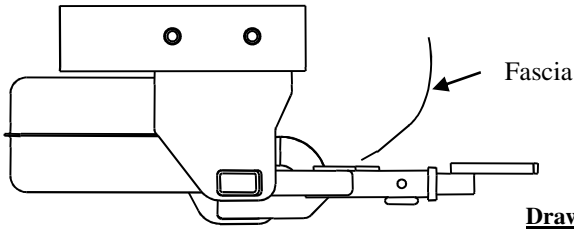

**Drawbar Kit:**  
**36001**

## Hitch Shown In Proper Position

Drawbar must be used in the **Rise** position only.

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

**3500 Lb. (1589 kg) Max Gross Trailer Weight**

**350 Lb. (159 kg) Max Tongue Weight**


**Wiring Access Location:** Santa Fe: SUV3, SUV4  
Sorento: SUV7

## Equipment Required:

**Fastener Kit:** 36511F

**Wrenches:** 16mm

**Drill Bits:** None

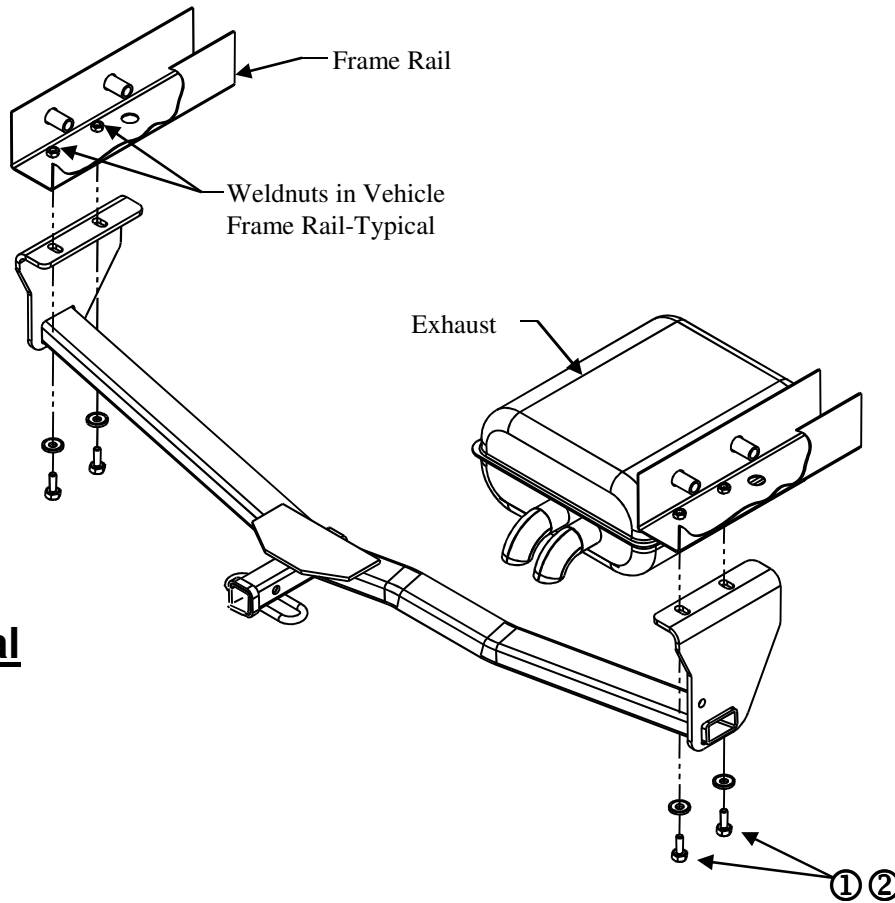

## Fasteners Typical Both Sides

①	Qty. (4)	Hex Bolt – M10 x 1.25 x 30mm CL10.9	②	Qty. (4)	Conical Toothed Washer – 7/16"
---	----------	-------------------------------------	---	----------	--------------------------------

1. Raise car on ramps, hoist, or jack stands.
2. Raise hitch into position, installing fasteners as shown into existing weldnuts in vehicle frame.

Tighten all M10 x 1.25 CL10.9 fasteners with torque wrench to 59 Lb.-Ft. (80 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.