

Installation Instructions


Hyundai Santa Fe

Part Numbers:

41543

33037

87419

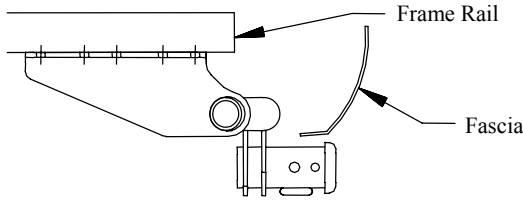

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT	Max Tongue WT
Weight Distributing	N/A	N/A
Weight Carrying Ball Mount	3500 lb, 1589 kg	315 lb, 143 kg

Hitch Shown In Proper Position


Equipment Required:

Fastener Kit: F41543

Wrenches: 14mm, 17mm, 19mm

Drill Bits: None

Wiring Access Location: SUV3, SUV4

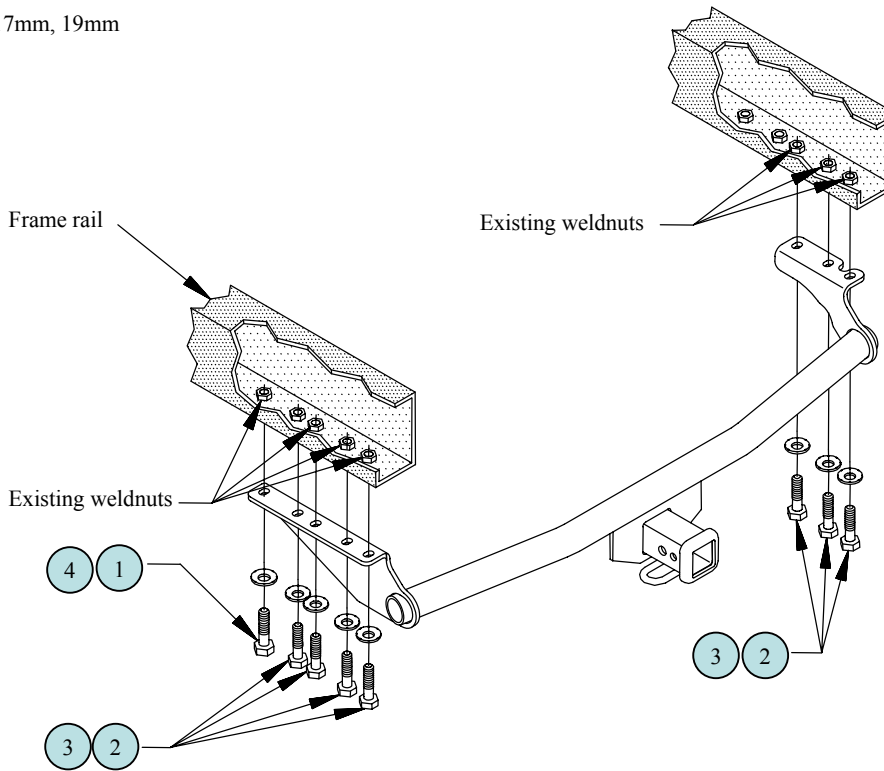

1	Qty. (1)	M12 X 1.25 X 40mm CL 10.9 Hex bolt	3	Qty. (7)	3/8" Conical washer
2	Qty. (7)	M10 X 1.25 X 40mm CL 8.8 hex bolt	4	Qty. (1)	1/2" Conical washer

1. Remove vehicle tie down brackets and return with fasteners to vehicle owner.
2. Lower spare tire and vehicle exhaust.
3. Install fasteners as shown above.
4. Reinstall spare tire and vehicle exhaust.

Tighten all M10 CL 8.8 fasteners with torque wrench to 38 Lb.-Ft., 52 N*M

Tighten all M12 CL 10.9 fasteners with torque wrench to 68 Lb.-Ft., 92 N*M

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.