


Installation Instructions

Nissan Titan

Part Numbers:
70530
37092
41551

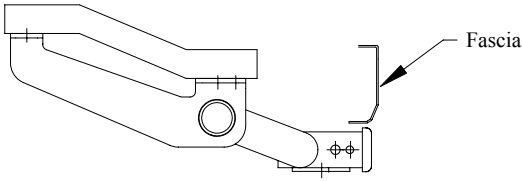

Hitch Shown In Proper Position

Equipment Required:

Fastener Kit: 41551F


Wrenches: 19mm

Drill Bits: None

**Do Not Exceed Lower of Towing Vehicle
 Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	10,000 (4540 Kg)	1,000 (454 Kg)
Weight Carrying Ball Mount	6,000 (2724 Kg)	600 (272 Kg)

Wiring Access Location: PU3

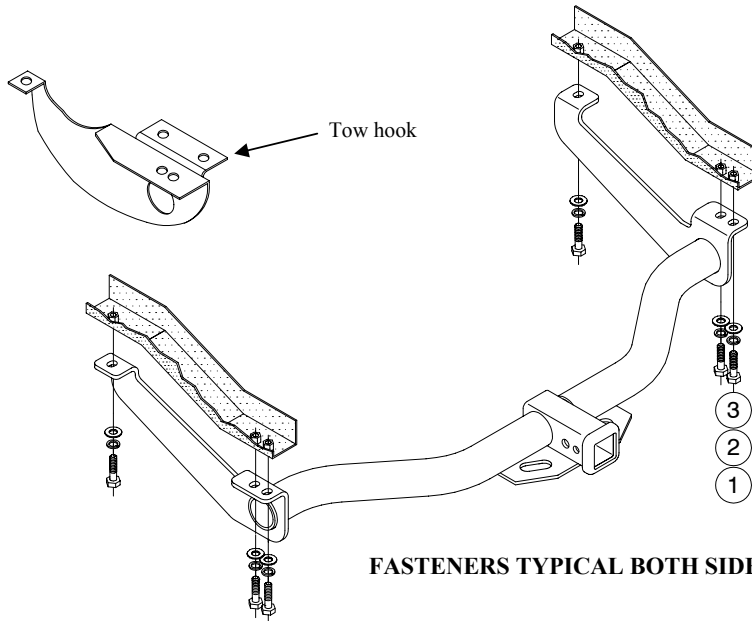

①	Qty. (6)	Hex bolt M12 x 1.25 x 45mm CL8.8	③	Qty. (6)	Flat washer 1/2"
②	Qty. (6)	Lock washer 1/2"			

1. Remove tow hook if present and return to owner.
2. Raise hitch into position, aligning holes in hitch with the existing weld nuts in vehicle's frame rail.
3. Install M12 hex bolt, lock washer and flat washer as shown (hand tighten only until all fasteners are installed).

Tighten all M12 CL8.8 fasteners with torque wrench to 68 Lb.-Ft. (92 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.