

# INSTALLATION INSTRUCTIONS

VEHICLE  
JEEP GRAND CHEROKEE

HITCH NO.  
75139  
87601

EQUIPMENT REQUIRED:

WIRING ACCESS LOCATION: SUV3


DRILL BITS:

HITCH REQUIRES 5/8" PIN AND CLIP IF STABILIZING PIN IS NOT INSTALLED.


WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 18mm, 19mm

DO NOT EXCEED LOWER OF  
TOWING VEHICLE MFR'S RATINGS OR

HITCH TYPE ▼	MAX GROSS TRLR WT(LB)	MAX TONGUE WT(LB)
WEIGHT DISTRIBUTING	7500	750
WEIGHT CARRYING BALL MOUNT	5000	500

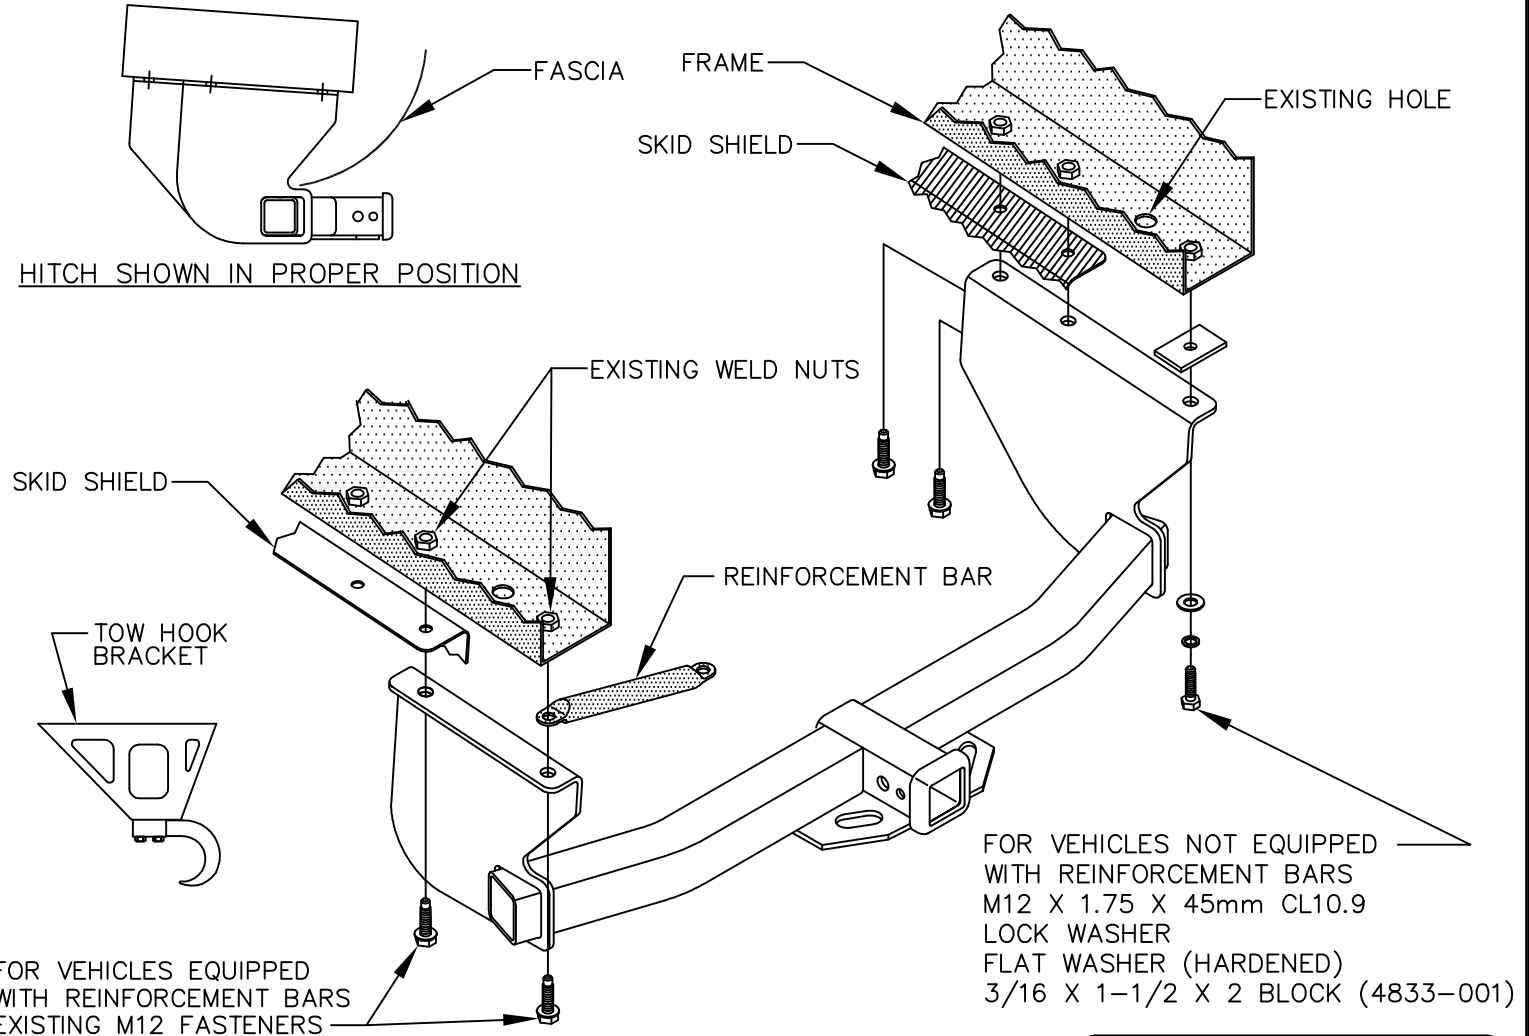

FOR VEHICLES NOT EQUIPPED  
WITH REINFORCEMENT BARS  
M12 X 1.75 X 45mm CL10.9  
LOCK WASHER  
FLAT WASHER (HARDENED)  
3/16 X 1-1/2 X 2 BLOCK (4833-001)

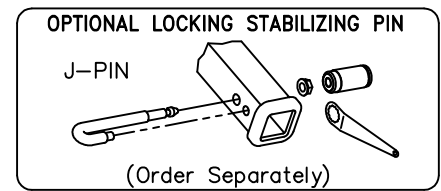

NO DRILLING REQUIRED

1. REMOVE TOW HOOK BRACKET IF PRESENT.
2. REMOVE THE M12 FASTENERS FROM THE FIVE REARMOST VEHICLE FRAME WELDNUTS. THE SKID SHIELD WILL REMAIN IN PLACE.
3. RAISE HITCH INTO POSITION AND INSTALL/RE-INSTALL FASTENERS AS SHOWN ABOVE.  
NOTE: USE EXISTING FASTENERS IF VEHICLE IS EQUIPPED WITH REINFORCEMENT BARS.

TIGHTEN ALL M12 CL10.9 FASTENERS TO 75 LB-FT.

APPROX WEIGHT (LB.)	42.8	FASTENER KIT NO.	F75139
---------------------	------	------------------	--------

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut access or attachment holes with a torch.