

INSTALLATION INSTRUCTIONS

EQUIPMENT REQUIRED: HACKSAW, PLIERS

WIRING ACCESS LOCATION: SUV5

DRILL BITS: NONE


HITCH REQUIRES 5/8" PIN AND CLIP IF STABILIZING PIN IS NOT INSTALLED.

WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 5/8, 11/16, 3/4, 7/8

VEHICLE	HITCH NO.
DODGE VAN	75140 87492



DO NOT EXCEED LOWER OF
TOWING VEHICLE MFR'S RATINGS OR

HITCH TYPE	MAX GROSS TRLR WT(LB)	MAX TONGUE WT(LB)
WEIGHT DISTRIBUTING	10,000	1000
WEIGHT CARRYING BALL MOUNT	5000	500

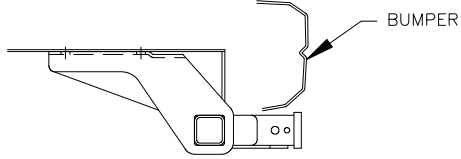

HITCH SHOWN IN PROPER POSITION

FASTENER COMBINATION
SHOWN FOR VEHICLES WITHOUT
WELDNUTS IN FRAME

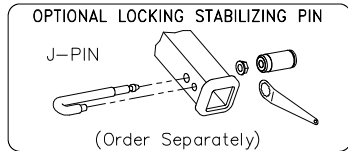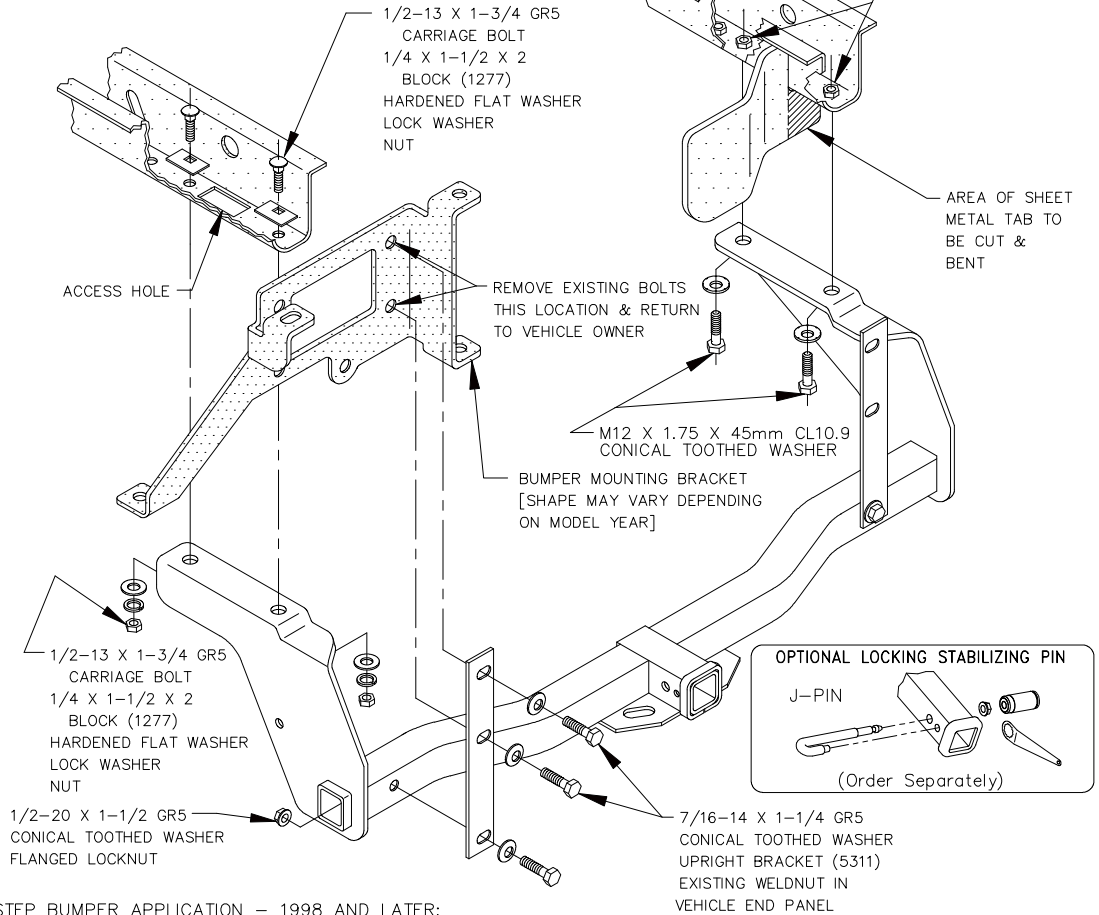

FOR STEP BUMPER APPLICATION - 1998 AND LATER:

1. LOOSEN TWO (2) OUTSIDE BUMPER BRACKET BOLTS ON FACE OF BUMPER.
2. REMOVE THREE (3) RETAINING BOLTS (BUMPER TO BUMPER BRACKET) AND ROTATE STEP BUMPER REARWARD.

CAUTION: WIRING HARNESS IS LOCATED INSIDE PASSENGER'S SIDE FRAME RAIL. DO NOT SANDWICH WIRES BETWEEN FRAME RAIL AND FASTENERS.

NOTE: IF VEHICLE HAS HEAT SHIELD, REMOVE ONE (1) SCREW FROM BOTTOM OF FRAME RAIL SO THAT BRACKET WILL SIT FLAT ON BOTTOM OF FRAME RAIL. RETURN SCREW TO VEHICLE OWNER.

FOR ALL APPLICATIONS:

1. REMOVE TWO (2) INBOARD BOLTS ON BUMPER MOUNTING BRACKET, EACH SIDE, AS INDICATED ABOVE. RETURN BOLTS TO VEHICLE OWNER. CUT SHEET METAL TAB, EACH SIDE AS INDICATED ABOVE. BEND TABS OUT OF THE WAY TO PROVIDE CLEARANCE FOR HITCH SIDE BRACKETS.
2. FISHWIRE FASTENERS THRU ACCESS HOLE AS SHOWN ABOVE. NOTE: VEHICLES WITH WELDNUTS IN FRAME, INSTALL M12 HEX BOLTS AND CONICAL TOOTHED WASHERS AS SHOWN ABOVE.
3. RAISE HITCH INTO POSITION AND INSTALL REMAINING FASTENERS AS SHOWN ABOVE. REINSTALL STEP BUMPER.
TIGHTEN ALL 7/16-14 GR5 FASTENERS TO 50 LB.-FT.
TIGHTEN ALL 1/2-13 GR5 FASTENERS TO 75 LB.-FT.
TIGHTEN ALL 1/2-20 GR5 FASTENERS TO 55 LB.-FT.
TIGHTEN ALL M12 CL10.9 FASTENERS TO 92 LB.-FT

APPROX WEIGHT (LB.)	FASTENER KIT
40	F75140

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut access or attachment holes with a torch.