

Installation Instructions

Nissan Murano


Part Numbers:

75148

44583

87448

33069

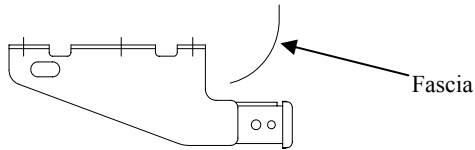

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	DO NOT USE WITH SPRING BARS	
Weight Carrying Ball Mount	3500 (1589 kg)	350 (159 kg)

Hitch Shown In Proper Position


Equipment Required:

Fastener Kit: F75148

Wrenches: 12mm, 17mm, 19mm

Drill Bits: NONE

Wiring Access Location: SUV1, SUV2

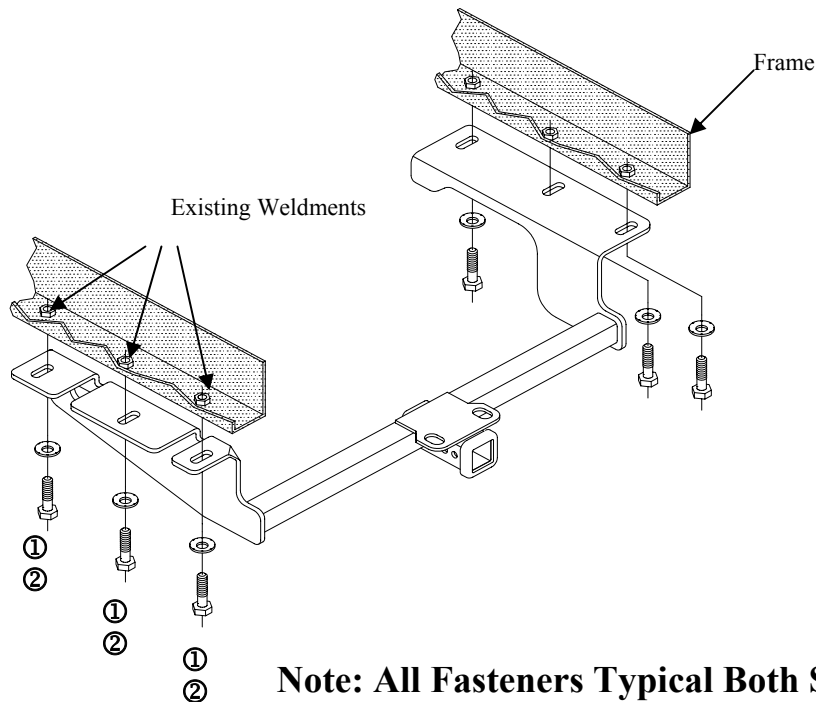

Note: All Fasteners Typical Both Sides of Vehicle

①	Qty. (6)	Conical toothed washer	②	Qty. (6)	M12 X 1.25 X 30mm CL8.8
---	----------	------------------------	---	----------	-------------------------

1. Remove tie-down bracket from driver's side frame rail and return to vehicle owner.
2. Lower exhaust as follows:
 - On passenger's side, unbolt exhaust hangers at vehicle crossmember and at vehicle frame rail.
 - On driver's side, remove (2) rubber exhaust hangers from hanger brackets. **NOTE:** Support exhaust before lowering to prevent it from dragging on the ground.
3. Raise hitch into position, aligning slots in hitch side brackets with existing weldnuts in vehicle frame rail. Install M12 bolts and conical toothed washers as shown.
4. Reattach exhaust.

Tighten all M12 X 1.25 CL8.8 fasteners with torque wrench to 68 Lb.-Ft (92 N*M).

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.