

# Installation Instructions

Part Numbers:

**Dodge Sprinter**

**75210**

**Freightliner Sprinter**


**33089**

**87647**

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	<b>7500</b>	<b>750</b>
Weight Carrying Ball Mount	<b>5000</b>	<b>500</b>

**Wiring Access Location: SUV3, SUV4**

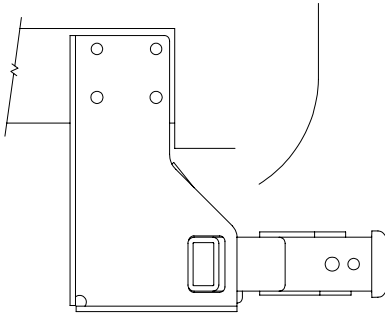

**Hitch Shown In Proper Position**


**Equipment Required:**

**Fastener Kit: 75210F**

**Wrenches: 18mm, 3/4"**

**Drill Bits: None**

**Fasteners Typical  
Both Sides**

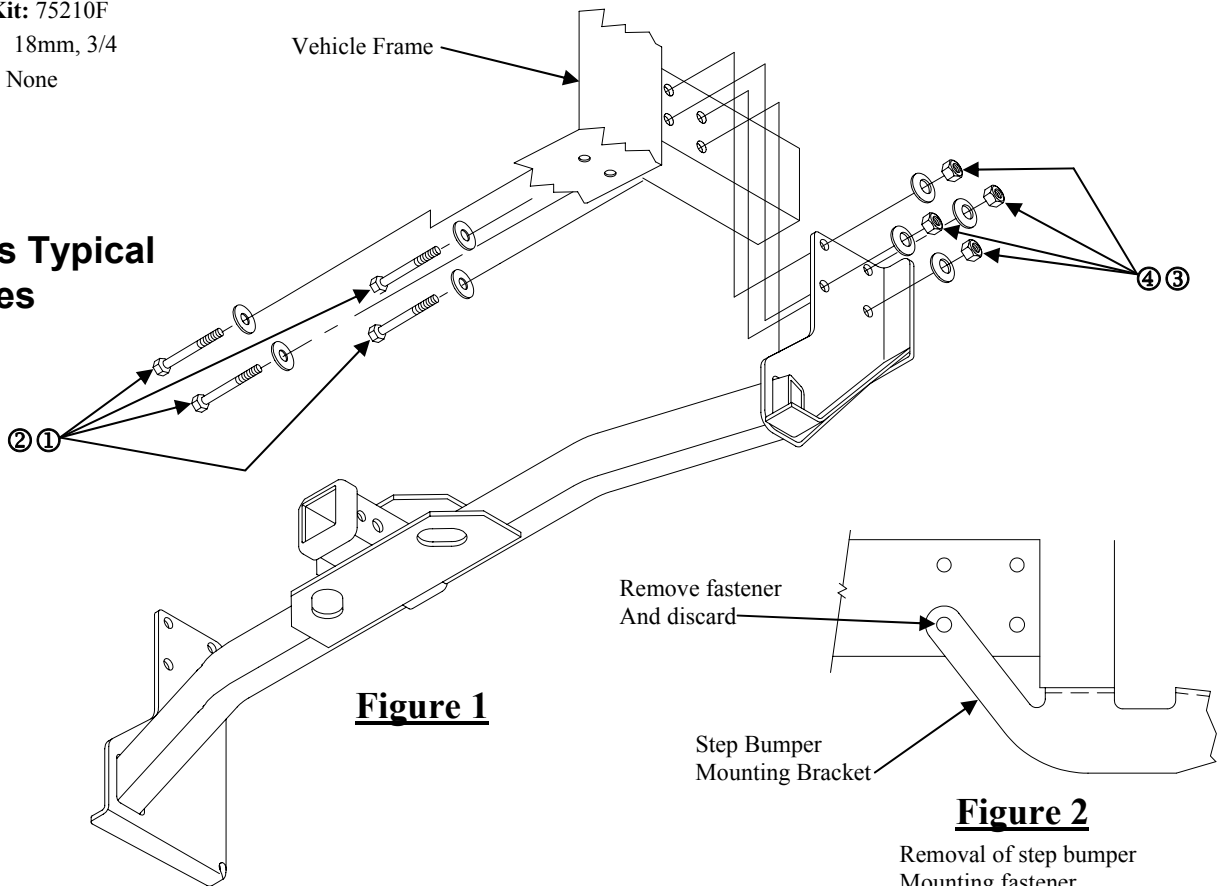

**Figure 1**

**Figure 2**

Removal of step bumper  
Mounting fastener

①	Qty. (8)	½-13 x 4" Hex Bolt	③	Qty. (8)	½ Conical Toothed Washer
②	Qty. (8)	½ Flat Washer	④	Qty. (8)	½-13 Hex Nut

For vehicles without factory step bumper, skip down to step 2.

1. Remove fasteners which attach bumper mounting bracket to vehicle frame, one each side, and discard (see Figure 2).
2. Raise hitch into position and secure with fasteners provided with hitch as shown in Figure 1. Tighten all ½-13 GR5 fasteners with torque wrench to 75 lb.-ft.

**Note:** On vehicles with factory step bumper, bumper mounting bracket will be re-attached at original position with fasteners provided with hitch.

Tighten all ½-13 GR5 fasteners with torque wrench to 75 lb.-ft.

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.