

# Installation Instructions

## Honda Odyssey


Part Numbers:

**75270**

**44174**

**87479**

**78234 U-HAUL**

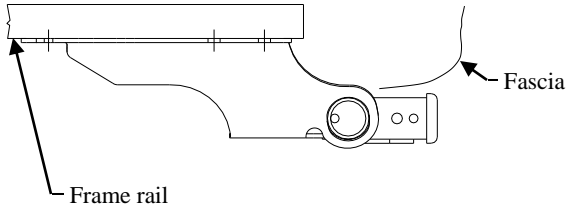

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	<b>5000 (2270 Kg)</b>	<b>500 (227 Kg)</b>
Weight Carrying Ball Mount	<b>3500 (1589 Kg)</b>	<b>350 (159 Kg)</b>

### Hitch Shown In Proper Position


#### Equipment Required:

**Fastener Kit:** 75270F

**Wrenches:** 18mm

**Drill Bits:** None

#### Wiring Access Location: SUV3

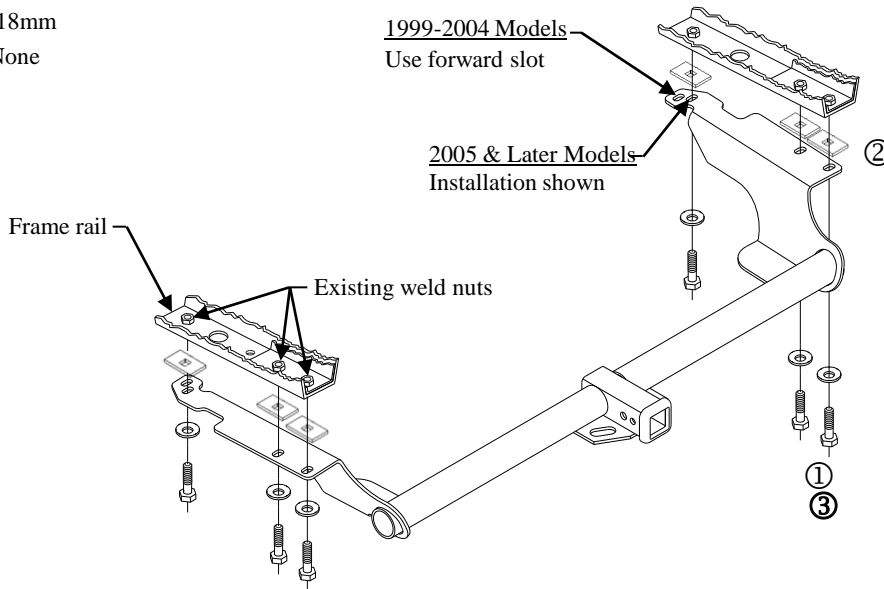

Note: Fasteners typical both sides

①	Qty. (6)	Bolt M12 X 1.25 X 35mm	③	Qty. (6)	Conical Washer
②	Qty. (6)	1/4" X 1-1/2" X 2" Blocks			

Note: If present, remove plastic appearance panel which covers driver's side frame rail. Return appearance panel and fasteners to vehicle owner.

1. Lower vehicle exhaust and raise hitch into position.

2. Install the six (6) M12 fasteners and blocks as shown above.

Note: 1999-2004 models use the most forward slots in the hitch side brackets.

3. Re-install vehicle exhaust.

Tighten all M12 Cl8.8 fasteners with torque wrench to 68 Lb.-Ft. (92 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.