

Installation Instructions


SUBARU LEGACY SEDAN AND WAGON SUBARU OUTBACK SEDAN AND WAGON (Excluding Sport)

Part Numbers:

75560

44581

87446

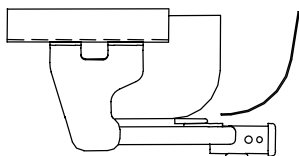

Hitch Shown In Proper Position

Do Not Exceed Lower of Towing Vehicle Manufacturer's Rating or

| Hitch type | Max Gross Trailer WT (LB) | Max Tongue WT (LB) |
|----------------------------|-------------------------------------|---------------------|
| Weight Distributing | Not For Use With Spring Bars | |
| Weight Carrying Ball Mount | 4000 (1816 Kg) | 400 (182 Kg) |

Wiring Access Location: PC1, PC2

Equipment Required:

Fastener Kit: 75560F

Wrenches: 3/4, 14mm, 17mm

Drill Bits: None

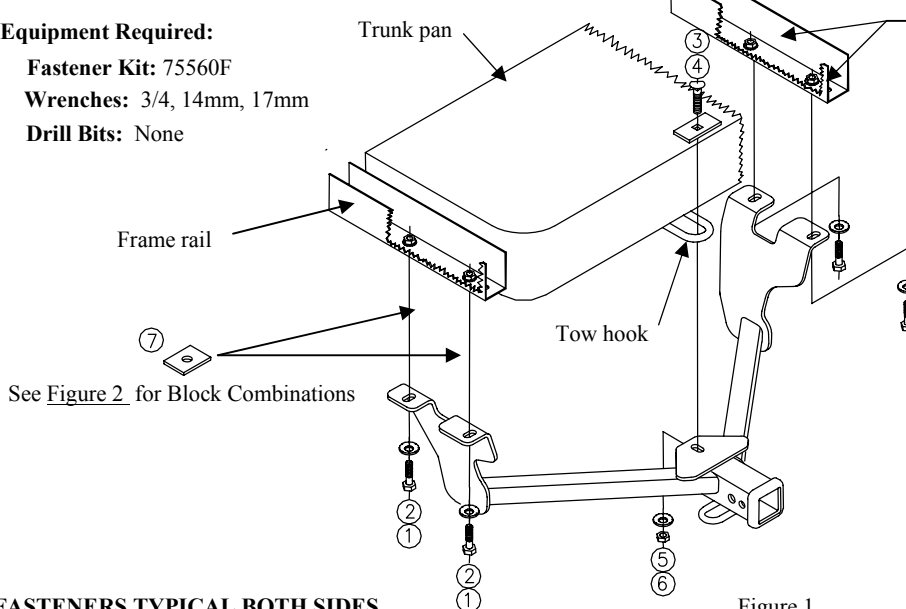


Figure 1.

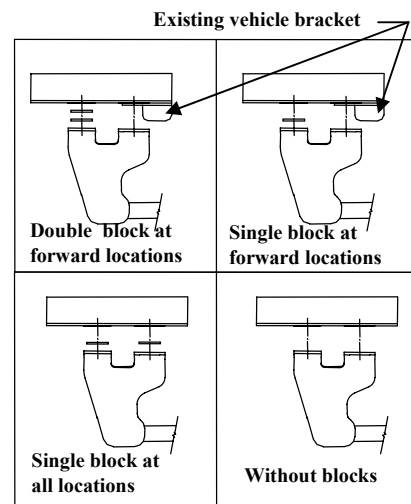


Figure 2.

FASTENERS TYPICAL BOTH SIDES

| | | | | | |
|---|----------|--------------------------------|---|----------|---------------------|
| ① | Qty. (4) | Bolt M10 X 1.25 X 40mm | ⑤ | Qty. (1) | Conical Washer 1/2" |
| ② | Qty. (4) | Conical Washer 3/8" | ⑥ | Qty. (1) | Hex Nut 1/2"-13 |
| ③ | Qty. (1) | Carriage Bolt 1/2"-13 X 1-3/4" | ⑦ | Qty. (4) | Block (Small) |
| ④ | Qty. (1) | Block (Large) | | | |

1. Remove the four muffler hangers (two per side) to allow the exhaust to hang down away from the frame.
2. On the wagon models, remove the forward most bolt (one per side) on the bracket that is bolted to the underside of the frame at the back of the vehicle. Note: on the sedan and wagon you will need to remove the plastic plugs covering the weld nuts in the vehicle frame.
3. Raise hitch into position and loosely install the tow hook fasteners as shown above.
5. Block locations vary by vehicle model. Attach with block combination that fills gaps between hitch brackets and vehicle frame. Install fasteners as shown in Figure 1.
6. Tighten 1/2-13 GR5 fasteners to 75 Lb.-Ft. (102 N*M). And tighten M10 CL8.8 fasteners to 38 Lb.-Ft. (52 N*M).
7. Reinstall (4) muffler hangers.

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.