

Installation Instructions

Part Numbers:

75579

87451

44586

UHI75223

Chrysler Town & Country


Dodge Grand Caravan

VW Routan

Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	5000 (2270 Kg.)	500 (227 Kg.)
Weight Carrying Ball Mount	4000 (1816 Kg.)	400 (182 Kg.)

Wiring Access Location: SUV1, SUV2

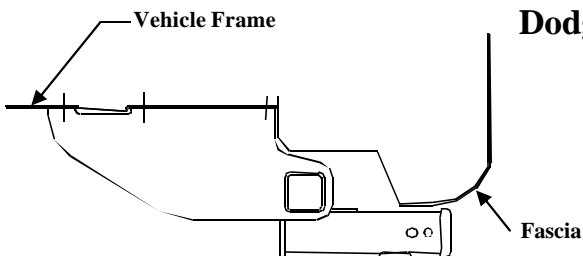

Hitch Shown In Proper Position

Plastic mud flap in this area. Remove plastic rivet holding mud flap to frame. Hitch must contact metal frame. May have to trim corner of plastic mud flap after installing hitch. Do not reinstall rivet.

Equipment Required:

Fastener Kit: 75579F

Wrenches: 13mm, 15mm, 18mm

Drill Bits: None

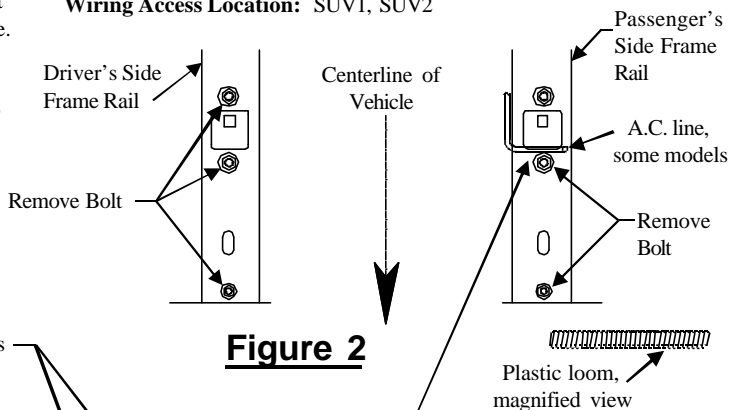


Figure 2

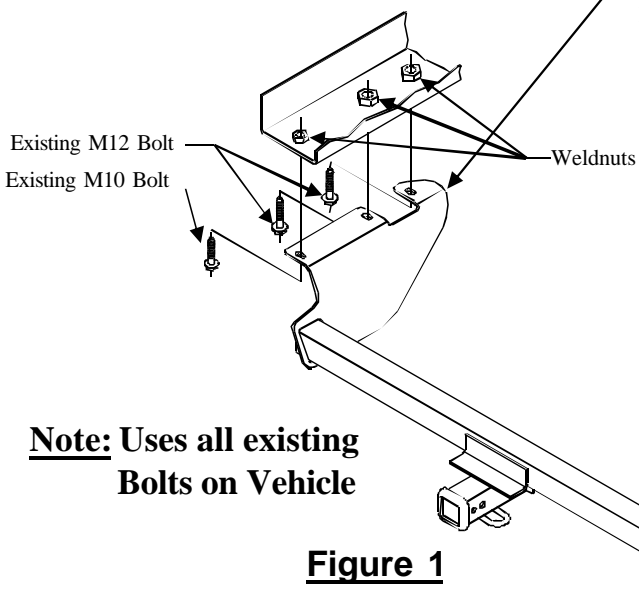


Figure 1

Note: Uses all existing Bolts on Vehicle

Attention:
On some vehicles air-conditioning lines are very close to this attachment. Be careful not to damage lines when installing hitch.

1. Lower exhaust by removing bolt which attaches rearmost hanger bracket to passenger's side frame rail. Retain bolt for reinstallation.
2. Snap plastic loom in place over Air Conditioning line on Passenger's side near bolt if present. See Figure 2 above.
3. Remove existing bolts from frame rails as shown in Figure 2, (3) on driver's side, (2) on passenger's side and retain for hitch installation.
4. Remove plastic rivet holding plastic mud flap to Driver's side frame. May have to trim plastic after Step (4). You will not reinstall plastic rivet.
5. Raise hitch into position as shown in Figure 1 and attach with existing bolts removed in step 2. Hand tighten.
6. Push hitch towards driver's side, so that passenger's side bracket is up against trunk pan, and tighten fasteners to specifications below.
7. Raise exhaust back into position and reinstall bolt removed in step 1.

Note: Rotating exhaust hanger bracket before tightening will add clearance between side bracket and exhaust.

Tighten all M10 CL10.9 fasteners with torque wrench to 53 Lb.-Ft. (72 N*M)

Tighten all M12 CL10.9 fasteners with torque wrench to 92 Lb.-Ft. (125 N*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.