


# Installation Instructions

Part Numbers:

## Dodge Ram

**75662, 87530,  
44603, 41895 (U-Haul)**

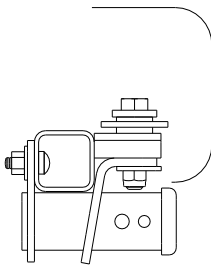

Step bumper required:  
Hitch design for Step bumper.

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**


Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	<b>10,000 (4540 Kg)</b>	<b>1000 (454 Kg)</b>
Weight Carrying Ball Mount	<b>6000 (2724 Kg)</b>	<b>600 (272 Kg)</b>

### Hitch Shown In Proper Position


#### Equipment Required:

**Fastener Kit:** 75662F

**Wrenches:** 3/4" & 1-1/8"

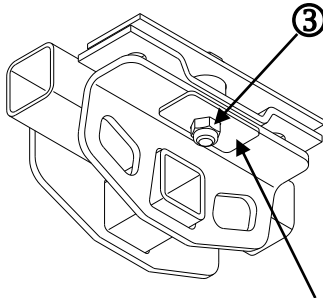

Set the 3/4" hex nut into the cut out on the strap, to assist installation.

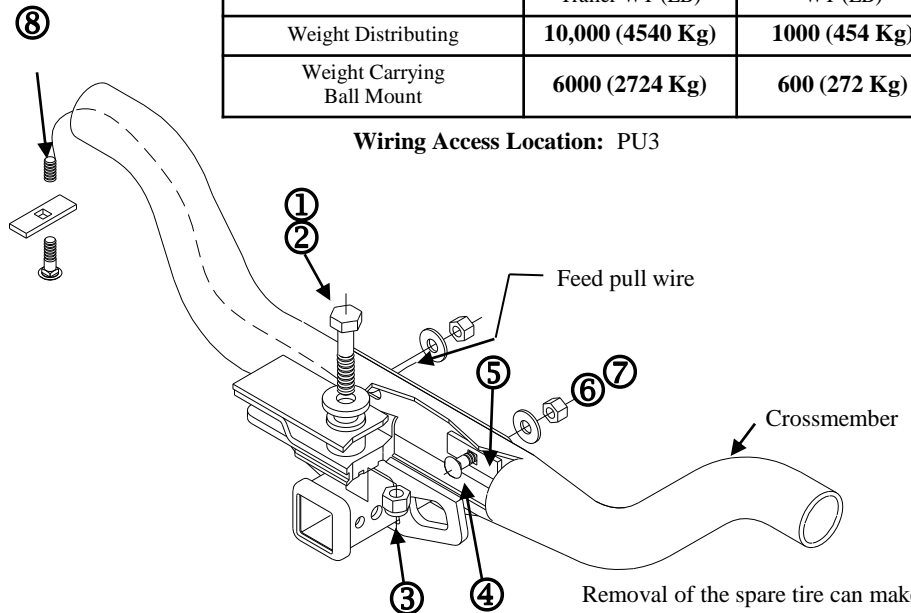

**Wiring Access Location:** PU3

①	Qty. (1)	Hex bolt 3/4-10 X 3.5 GR5	⑤	Qty. (2)	Spacer
②	Qty. (1)	Conical washer 3/4"	⑥	Qty. (2)	Conical washer 1/2"
③	Qty. (1)	Hex nut 3/4-10	⑦	Qty. (2)	Hex nut 1/2-13
④	Qty. (2)	Carriage bolt 1/2-13 GR8	⑧	Qty. (2)	Pull wire

1. Removal of the spare tire can make installation easier, however, removal not necessary.
2. Remove trailer ball cover cap in center of bumper.
3. Install the conical washer and 3/4" hex bolt into the trailer hitch ball attachment hole in vehicle bumper.
4. Raise hitch into position.
5. Slide the 3/4" hex nut into position under rear attachment (hand tighten only until all fasteners are installed).
6. Feed pull wire through cross member. Attach spacer (Item 5), attach to carriage bolt (Item 4), and pull fasteners through vehicle cross tube and into position as shown.
7. Loosely install conical washers (Item 6) and nuts (Item 7) onto carriage bolts.
8. Torque all fasteners to specifications.

Tighten all 3/4-10 GR5 fasteners with torque wrench to 260 Lb.-Ft. (353 N\*M)

Tighten all 1/2-13 GR8 fasteners with torque wrench to 110 Lb.-Ft. (149 N\*M)

Note: check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Do not cut access or attachment holes with a torch.