

# Installation Instructions


## Kia Forte

Part Numbers:

**24903**

**60335**

**77290**

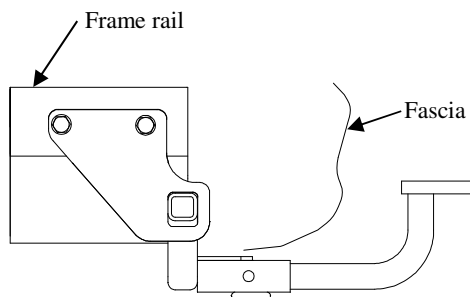

**Drawbar Kit:**  
3594

Drawbar must be used in the **Rise** position.

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

**2000 LB (908 Kg) Max Gross Trailer Weight**

**200 LB (90.8 Kg) Max Tongue Weight**

### Hitch Shown In Proper Position

Wiring Access Location: PC3,PC4


Accessory Rating

A

**Equipment Required:** Lubricant or Soapy water

**Fastener Kit:** 24903F

**Wrenches:** 17mm,

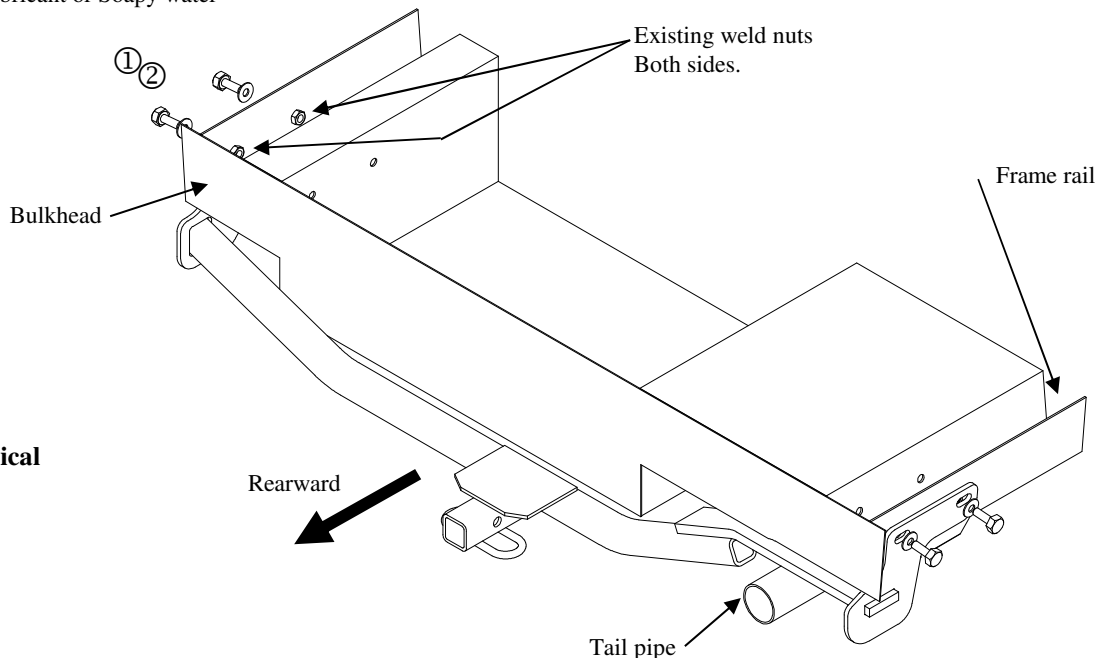

**Note: Fasteners typical  
both sides**

①	Qty. (4)	Hex bolt M10 X 1.25 X 30mm CL8.8	②	Qty. (4)	Conical washer 3/8"
---	----------	----------------------------------	---	----------	---------------------

1. Lower exhaust system at the rear rubber isolator leaving the rubber isolator in place on the vehicle. Spraying a lubricant on the metal hanger rod and the rubber isolator helps removal
2. Lift hitch into position, passengers side first. Place crosstube over top of tail pipe. Rotate into position on the outside of the frame rail. It may be necessary to pull the fascia gently out of the way.
3. Raise the drivers side of the hitch up so it's on the outside of the frame rails and in front of bulkhead (rotate as needed). Once again, it may be necessary to pull the fascia gently out of the way.
4. Attached remaining fasteners as shown.
5. Push hitch toward the rear of the vehicle.
6. Tighten all fasteners to the required torque specification.
7. Reattach rubber muffler hanger.

Tighten all M10 CL 8.8 fasteners with torque wrench to 42 Lb.-Ft. (57 N\*M)