

# Installation Instructions


## Hyundai Elantra GT

Part Numbers:

**24905**

**60336**

**77292**

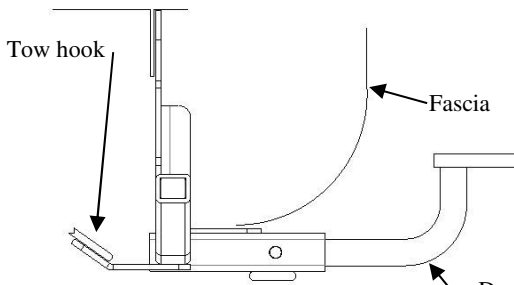

**Drawbar Kit:**  
3594

Drawbar must be used in the **RISE** position only.

**Do Not Exceed Lower of Towing Vehicle  
Manufacturer's Rating or**

**2000 LB (908 Kg) Max Gross Trailer Weight**

**200 LB (91 Kg) Max Tongue Weight**

### Hitch Shown In Proper Position

#### Equipment Required:

**Fastener Kit:** 24895F

**Wrenches:** 3/4", Crowfoot adaptor

**Wiring Access Location:** PC3, 4

Accessory Rating

**A**

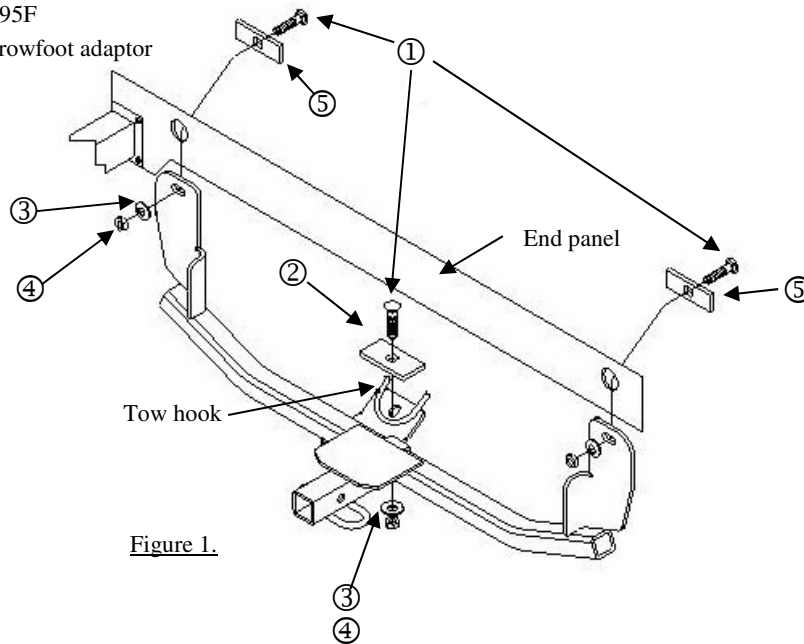


Figure 1.

①	Qty. (3)	Carriage bolt 1/2-13 x 1.75 GR5	④	Qty. (3)	Hex nut 1/2-13
②	Qty. (1)	Spacer	⑤	Qty. (2)	Spacer
③	Qty. (3)	Conical washer	⑥	Qty. (1)	1/2" Pull wire

1. Place carriage bolt and spacer onto tow hook. As shown Figure 1.
2. Raise hitch into position behind end panel and fasten to tow hook with conical washer and hex nut. Hand tighten.
3. Using Pull wire provided Install Carriage bolt and spacer through the end panel and hitch with conical washer and hex nut. Hand tighten.
4. Tighten all fasteners to specification listed below.

Tighten all 1/2" Gr5 fasteners with torque wrench to 75 Lb.-Ft. ( 102 N\*M)