


Installation Instructions

Part Numbers:

**Chevrolet Malibu,
Chevrolet Impala,
Buick LaCrosse,
Buick Regal,
Cadillac XTS**

**36538
90242
06168**

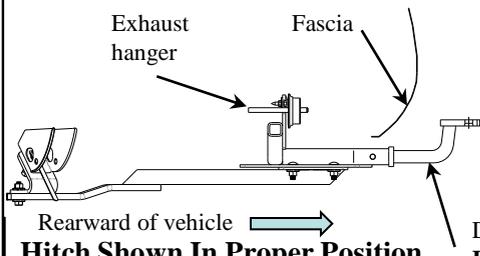

Drawbar Kit:
36061

Drawbar must be used in the **RISE** position only.

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

3500 LB (1589 Kg) Max Gross Trailer Weight

300 LB (136 Kg) Max Tongue Weight

Equipment Required: Tape measure (Impala), tape

Fastener Kit: 36538F

Wrenches: 10mm, 13mm, 9/16", 3/4"

Drill Bits: 1/2" to enlarge hole on LaCrosse & XTS.

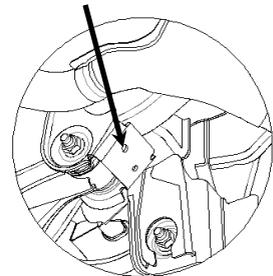


Figure 3



Teeth side
against hitch

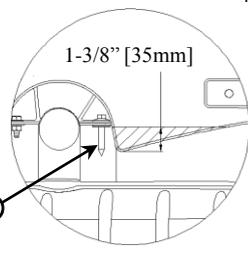


Figure 2

Impala models minor fascia trim

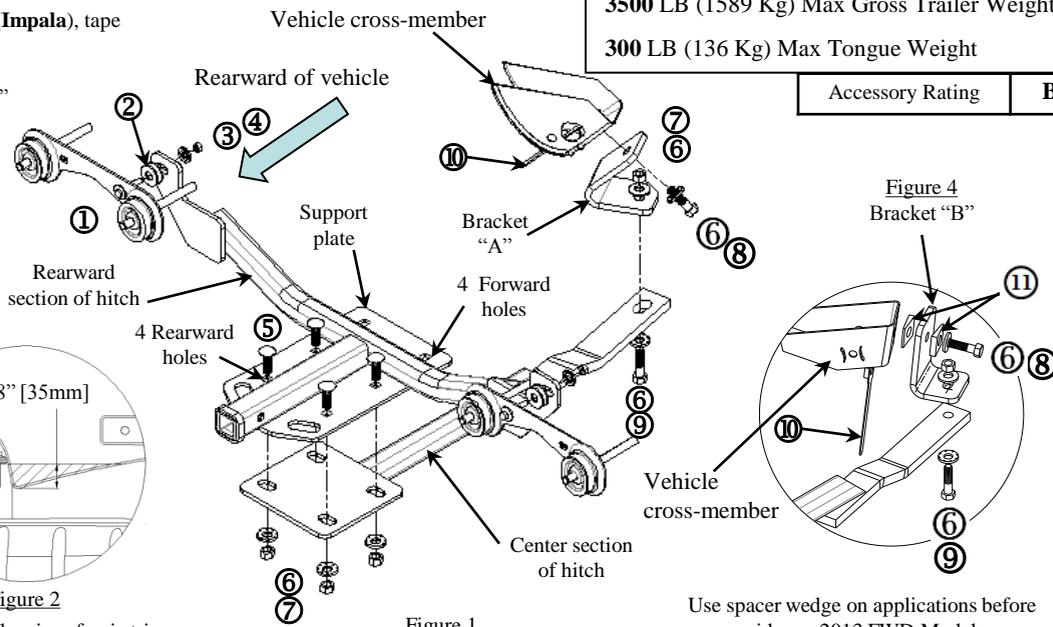


Figure 1

Use spacer wedge on applications before mid year 2013 FWD Models

Accessory Rating	B
------------------	----------

①	Qty. (2)	Hex bolt M8 X 1.25 X 55mm CL9.8	⑦	Qty. (5)	Hex nut 1/2-13
②	Qty. (4)	Flat washer 1/2"	⑧	Qty. (1)	Hex bolt 1/2-13 X 1.50 GR5
③	Qty. (2)	Conical washer 3/8"	⑨	Qty. (1)	Hex bolt 1/2-13 X 2.00 GR5
④	Qty. (2)	Hex nut M8 X 1.25	⑩	Qty. (1)	Handle nut 1/2-13 (*torque spec below)
⑤	Qty. (4)	Carriage bolt 1/2-13 X 1.50 GR5	⑪	Qty. (1)	Spacer, wedge
⑥	Qty. (7)	Conical washer 1/2"			

Note: Chevrolet Impala will require minor trimming. Obtain owner permission before trimming. See Figure 2

- Remove the existing inner tailpipe hanger 8mm bolt, and replace with supplied 8mm bolt (item 1). Both sides. Tighten bolt to specification. Hang 1/2" flat washers (2 each side) over weld nut on 8mm bolt. Return bolt/s to owner.
- Install forward hitch bracket "A" or "B" as shown. Slide "handle-nut" (item 10) behind the vehicle cross-member on the driver's side, using the 1/2-13 X 1.5 bolt (item 8) and attach the forward bracket that's called out for the vehicle. Hand tighten only.
 - On Buick LaCrosse and Cadillac XTS enlarge rearward hole on vehicle suspension mount to accept a 1/2 bolt. See Figure 3
 - Use bracket "B" with wedge spacer on all applications before the Mid year 2013 models on FWD vehicles. (tape spacer into place for easier install)
 - Use bracket "B" on the LaCrosse.
 - Use bracket "A" on all other models.
- Raise rearward section of the hitch into place, over 8mm bolts (installed in step 1) sandwiching the 1/2" flat washers between exhaust hanger and hitch bracket. Attach the 3/8" conical washers & M8 hex nuts (item 3 & 4) to bolts. Hand tighten only.
- Install the 1/2" carriage bolts (4) into the plate on the hitch's support plate.
 - Forward hole on plate for the Impala and Cadillac models.
 - Rearward holes for the Malibu, Regal, and LaCrosse models.
- Raise the center section of the hitch into place, lining up carriage bolts on hitch support plate. Attaching the 1/2" conical washer and 1/2" hex nut. Hand tighten only.
- Attach the opposite end of the center section to the forward bracket with the 1/2" bolt & 1/2" conical washer (item 9 & 3) install from the bottom. Attach the 1/2" conical washer and 1/2" hex nut. The center section is designed to pivot, for better installation.
- Torque all fasteners to required torque listed below.

Cequent



Tighten all M8-1.25 CL9.8 fasteners with torque wrench to 25 Lb.-Ft. (34 N*M)

Tighten all 1/2-13 GR5 fasteners with torque wrench to 75 Lb.-Ft. (102 N*M)

***Tighten all 1/2-13 GR5 bolt into "handle-nut" fasteners with torque wrench to 50 Lb.-Ft. (68 N*M)**