


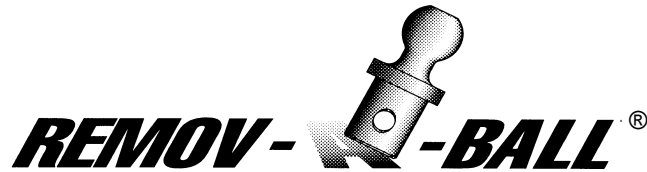

# 6308



## INSTALLATION INSTRUCTIONS

READ THOROUGHLY BEFORE BEGINNING

### REPLACEMENT U-BOLT SAFETY CHAIN KIT


#### IMPORTANT

This product is intended to be used with Draw-Tite manufactured 2 5/16" *Remov-A-Ball*® Gooseneck Hitch Part Number 6300.

If Draw-Tite manufactured *Remov-A-Ball*® Gooseneck Hitch is not used, **THIS PRODUCT BECOMES A GENERAL APPLICATION PRODUCT. IT IS THE RESPONSIBILITY OF THE INSTALLER TO SELECT STRUCTURALLY SAFE MATERIALS AND LOCATIONS FOR ATTACHMENT. INSTALLATION INFORMATION FOLLOWS.**

#### TOOLS REQUIRED:

Socket and/or wrench 15/16  
Drill - 11/16" Dia.

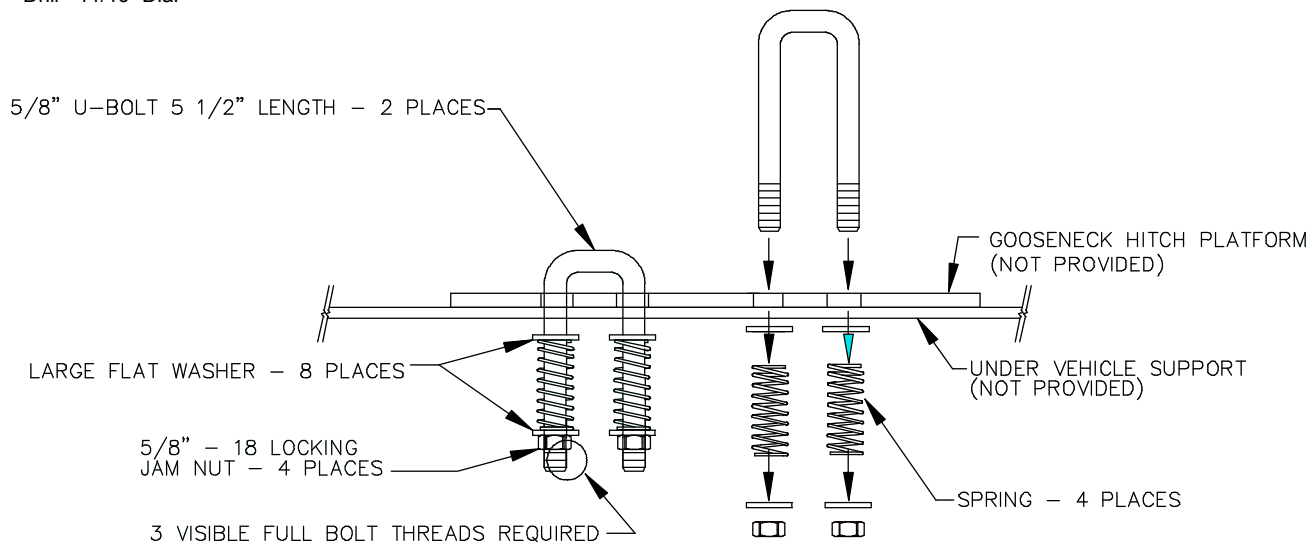

**NOTE:** CHECK U-BOLTS FREQUENTLY, MAKING SURE ALL FASTENERS ARE PROPERLY TIGHTENED. A U-BOLT OR FASTENER WHICH HAS BEEN DAMAGED SHOULD BE REMOVED AND REPLACED. OBSERVE SAFETY PRECAUTIONS WHEN WORKING BENEATH A VEHICLE AND WEAR EYE PROTECTION. FOLLOW VEHICLE MANUFACTURER'S SPECIFICATIONS FOR MAXIMUM TRAILER WEIGHT. DO NOT CUT ACCESS OR ATTACHMENT HOLES WITH A TORCH.