


# Front Mounted Receiver Installation Instructions Ford Econoline

Part Numbers:  
**65001**

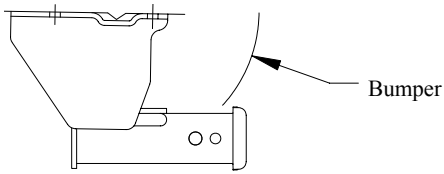

## Receiver Shown In Proper Position

### Equipment Required:

**Fastener Kit:** K65001


**Wrenches:** 7/8"

**Drill Bits:** 1/2"

**CARGO CAPACITY – DO NOT EXCEED  
500 LB. OR VEHICLE FRONT GROSS  
AXLE WEIGHT RATING. (GAWR)**

9000

**LB. MAX. WINCH LINE PULL**

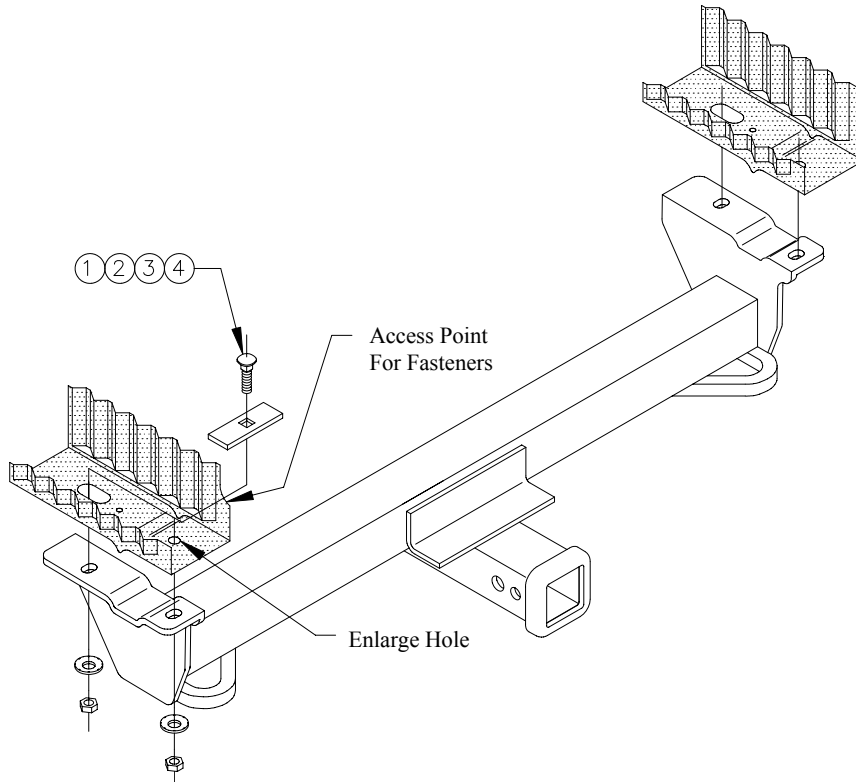

①	Qty. (4)	Carriage Bolt, 1/2"-13 x 1-3/4"	③	Qty. (4)	Conical Toothed Washer, 1/2"
②	Qty. (4)	Spacer, 1/4" x 1" x 3"	④	Qty. (4)	Nut, 1/2"
⑤	Qty. (2)	Pull Wire			

1. If present remove any plastic rivets from forward attachment on vehicle.
2. Enlarge forward hole on vehicle with a 1/2 drill bit.
3. Feed carriage bolts and block thru access point using a pull wire as shown.
4. Raise hitch into position and fasten as shown above.

**Cequent**



**Tighten all 1/2 GR5 fasteners with torque wrench to 75 Lb.-Ft (102 N-m).**